


# 9821

## Downconverter

With HD/SD-SDI Input, HD/SD-SDI Reclocking,  
SD-SDI and SD Analog Outputs

# Owner's Manual

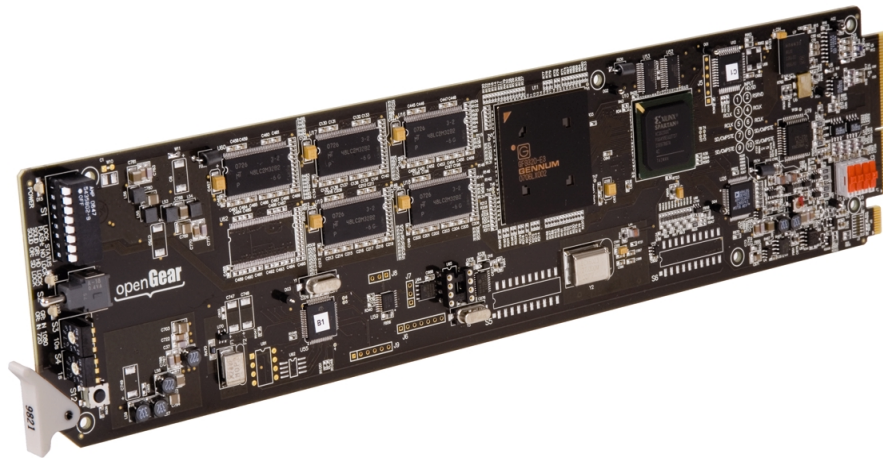

9821-OM  
Version: 1.11



---

## 9821 • Downconverter Owner's Manual

- Cobalt Part Number: **9821-OM**
- Document Version: **1.11**
- Printed in the United States.
- Last Author: CGG
- Release Date: 8/22/2013

The information contained in this Owner's Manual is subject to change without notice or obligation.

---

## Copyright

© 2013 Cobalt Digital Inc. All rights reserved.

Contents of this publication may not be reproduced in any form without the written permission of Cobalt Digital Inc. Reproduction or reverse engineering of copyrighted software is prohibited.



---

## Notice

The material in this manual is furnished for informational use only. It is subject to change without notice and should not be construed as a commitment by Cobalt Digital Inc. Cobalt Digital Inc. assumes no responsibility or liability for errors or inaccuracies that may appear in this manual.

---

## Trademarks

-  is a registered trademark of Ross Video Limited.
-  is a registered trademark of Cobalt Digital Inc.
- All other product names and any registered and unregistered trademarks mentioned in this manual are used for identification purposes only and remain the exclusive property of their respective owners.

---

## Important Regulatory and Safety Notices

Before using this product and any associated equipment, refer to the “Important Safety Instructions” listed below so as to avoid personal injury and to prevent product damage.

Products may require specific equipment, and /or installation procedures be carried out to satisfy certain regulatory compliance requirements. Notices have been included in this publication to call attention to these Specific requirements.

### Symbol Meanings



This symbol on the equipment refers you to important operating and maintenance (servicing) instructions within the Product Manual Documentation. Failure to heed this information may present a major risk of damage or injury to persons or equipment.



**Warning**

The symbol with the word “**Warning**” within the equipment manual indicates a potentially hazardous situation, which if not avoided, could result in death or serious injury.



**Caution**

The symbol with the word “**Caution**” within the equipment manual indicates a potentially hazardous situation, which if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices.



**Notice**

The symbol with the word “**Notice**” within the equipment manual indicates a situation, which if not avoided, may result in major or minor equipment damage or a situation which could place the equipment in a non-compliant operating state.



**ESD  
Susceptibility**

This symbol is used to alert the user that an electrical or electronic device or assembly is susceptible to damage from an ESD event.

### Important Safety Instructions



**Caution**

This product is intended to be a component product of the openGear® 8300 series frame. Refer to the openGear® 8300 series frame Owner’s Manual for important safety instructions regarding the proper installation and safe operation of the frame as well as it’s component products.



**Warning**

Certain parts of this equipment namely the power supply area still present a safety hazard, with the power switch in the OFF position. To avoid electrical shock, disconnect all A/C power cords from the chassis' rear appliance connectors before servicing this area.



**Warning**

Service barriers within this product are intended to protect the operator and service personnel from hazardous voltages. For continued safety, replace all barriers after any servicing.

This product contains safety critical parts, which if incorrectly replaced may present a risk of fire or electrical shock. Components contained within the product’s power supplies and power supply area, are not intended to be customer serviced and should be returned to the factory for repair.

To reduce the risk of fire, replacement fuses must be the same type and rating.

Only use attachments/accessories specified by the manufacturer.

## EMC Notices

### **US FCC Part 15**


This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case users will be required to correct the interference at their own expense.

## Environmental Information

**The equipment that you purchased required the extraction and use of natural resources for its production. It may contain hazardous substances that could impact health and the environment.**

To avoid the potential release of those substances into the environment and to diminish the need for the extraction of natural resources, Cobalt Digital Inc. encourages you to use the appropriate take-back systems. These systems will reuse or recycle most of the materials from your end-of-life equipment in an environmentally friendly and health conscious manner.

The crossed-out wheeled bin symbol invites you to use these systems.

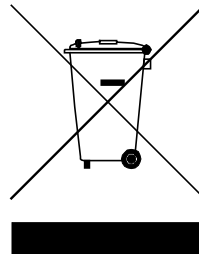

If you need more information on the collection, reuse, and recycling systems, please contact your local or regional waste administration.

You can also contact Cobalt Digital Inc. for more information on the environmental performances of our products.

# openGear Contents

<b>Introduction</b>	<b>6</b>
In This Chapter .....	6
A Word of Thanks .....	6
Overview.....	6
Functional Block Diagram.....	7
Available Format Conversions.....	8
Documentation Terms.....	9
<b>Installation and Setup</b>	<b>10</b>
In This Chapter .....	10
Static Discharge .....	10
Unpacking.....	10
Rear Module Installation (Optional).....	11
Board Installation.....	12
Cable Connections .....	13
Card Control and Status .....	14
Switch S1 .....	14
Switches 3 and 4 – Rotary Switch Settings.....	16
Switches 7, 8, 9 and 10.....	16
Status Reporting via LEDs .....	16
<b>Remote Control</b>	<b>19</b>
In This Chapter .....	19
DashBoard Control System Software .....	19
<b>Specifications</b>	<b>24</b>
Technical Specifications .....	26
<b>Service Information</b>	<b>28</b>
In This Chapter .....	28
Troubleshooting Checklist .....	28
Software Upgrades.....	29
Warranty and Repair Policy.....	30
<b>Ordering Information</b>	<b>32</b>
9821 and Related Products .....	32
<b>Contact Us</b>	<b>33</b>
Contact Cobalt Digital Inc. ....	33
Visit us at the Cobalt Digital Inc. website.....	33

# Introduction

---

## In This Chapter

This chapter includes the following sections:

- A Word of Thanks
- Overview
- Functional Block Diagram
- Features
- Documentation Terms

---

## A Word of Thanks

Congratulations on choosing the openGear® 9821 with HD/SD-SDI Input, HD/SD-SDI Reclocking, SD-SDI and SD Analog Outputs. The 9821 is part of a full line of modular conversion gear for broadcast TV environments. The Cobalt Digital Inc. openGear® line includes video decoders and encoders, audio embedders and de-embedders, distribution amplifiers, format converters, and much more. Cobalt openGear modular conversion gear will meet your signal conversion needs now and in the future.

Should you have questions pertaining to the installation or operation of your 9821, please contact us at the numbers listed on the back cover of this manual. We are happy to help with any questions regarding this or any other openGear® card.

---

## Overview

The 9821 is a high quality 10-bit, HD down-converter with SD pass-through and individual aspect ratio converter (ARC) controls for HD and SD inputs. The 9821 bridges SMPTE 292 high definition (HD) and 259M-C standard definition (SD) signal formats; allowing high density and low power conversion of HD signals.

The 9821 will down-convert HD to SD serial component digital and analog composite video. The unit also de-embeds up to four selected embedded audio channels on to four balanced analog audio outputs. This unit can re-aspect the image with separate rules for HD vs. SD inputs and adds 3:2 pull-down to 23.98 p/Sf inputs. In addition, reticule overlays, for full aperture and safe area, in both 16x9 and 4x4 shapes can be enabled, as well as a center cross. Reticules can be separately enabled on the SD-SDI and composite outputs.

The image processing is full 10-bit using a 24-tap spatial filter. Down-conversions of HD to SD signals are de-jittered to reduce chroma phase jitter of SD analog signals. The analog output is encoded at 12-bits (video plus sync) to preserve the 10-bit 4:2:2 component encoded video signal.

The 9821 also preserves several key non video signals across a downconversion or ARC. Embedded audio is de-embedded at the input, delayed appropriately, and then embedded at the output in the new format. Timecode signals (as VITC or as in SMPTE RP-188) are extracted, delayed the appropriate amount, and then embedded in the output video. Standard definition closed captioning data (NTSC Line 21) is decoded, delayed, and embedded in the output video, regardless of aspect ratio correction.

The product also provides full color proc control of the output video, with separate controls for Gain, Lift, Saturation and Color Phase.

The input and outputs of the 9821 are the following:

**Input:**

- ❑ One dual-rate HD/SD-SDI.

**Outputs:**

- ❑ Four relocked HD/SD-SDI copies of the input.
- ❑ Four user selectable (SD-SDI or Composite) down-converted HD or SD ARC'd outputs.

## Functional Block Diagram

The 9821 has a very flexible signal flow path and feature set that combines several products into one compact package. To understand its capabilities, this section reviews the basic structure of the 9821.

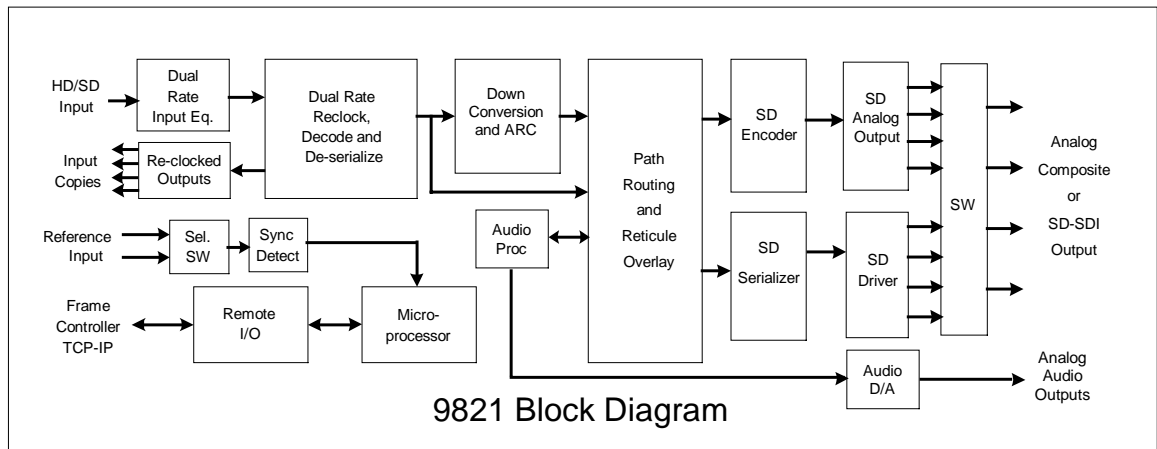


Figure 1. Simplified Block Diagram of 9821 Functions

Starting in the upper left of the block diagram, the dual-rate (HD/SD) serial digital signal is equalized, relocked and then deserialized. A relocked copy of the input is driven out of four BNCs (3, 4, 5, and 6). Once deserialized, the video standard and frame rate is determined.

Coming out of the deserializer, the parallel video data path goes to the image Scaler circuitry, where it is down, aspect and/or frame rate converted depending on the signal input and user settings. After conversion audio, timecode, and closed captioning signals are embedded. Finally the reticule overlays (if any) are applied, and the signal passes through circuitry to reduce output clock jitter. The card has a downmixer function to downmix incoming 5.1 embedded audio to stereo audio suitable for SD streams. The downmixed audio is available as embedded channels or on the card analog audio outputs.

Four copies of SD analog composite and SD-SDI are generated and sent to four, 2x1 switches (S7, S8, S9, S10) that allow the user to select either analog composite or SDI for the outputs (BNCs 7, 8, 9, 10).

# Available Format Conversions

The 9821 has extensive re-format and down conversion capabilities. It can act as a downconverter, ARC and frame rate converter. The format conversions are listed in the chart below.

Table 1. Supported format conversions

From	→ To	SD
1080	sF 23.98	486 i 29.97
1080	p 23.98	486 i 29.97
1080	sF 24	---- none
1080	p 24	---- none
1080	i 25	575 i 25
1080	p 25	575 i 25
1080	i 29.97	486 i 29.97
1080	p 29.97	486 i 29.97
1080	i 30	---- none
1080	p 30	---- none
720	p 25	575 i 25
720	p 29.97	486 i 29.97
720	p 30	---- none
720	p 50	575 i 25
720	p 59.94	486 i 29.97
720	p 60	---- none
486	i 29.97	486 i 29.97
575	i 25	575 i 25

Notes:

1. All rates translated to effective frame rates, interlaced rates “ i ” are two times the number shown. For example, i 29.97 is 59.94 fields per second (two fields per frame thus the interlaced frame rate is 29.97); but progressive “ p ” 29.97 is 29.97 frames per second.
2. SD active line rates are PAL (575) and NTSC (486).
3. The 9821 cannot accept native 720 p23.98 or sF23.98, however it can convert those signals if they are delivered inside a p59.94 transportation wrapper (as typically done with this format) and processed as p59.94.



---

## Documentation Terms

The following terms are used throughout this guide:

- “**Frame**” refers to the **8321** frame (or equivalent) that houses the **9821** card.
- “**Operator**” and “**User**” both refer to the person who uses the **9821**.
- “**Board**” and “**Card**” all refer to the **9821** card itself, including all components and switches.
- “**System**” and “**Video system**” refers to the mix of interconnected production and terminal equipment in which the **9821** operates.

# Installation and Setup

---

## In This Chapter

This chapter includes the following sections:

- Static Discharge
- Unpacking
- Rear Module Installation (Optional)
- Board Installation
- BNC Labels
- Cable Connections
- LEDs and Buttons
- Switch 3 and 4 – Rotary Switch Settings and LED reporting

---

## Static Discharge

Whenever handling the card and other related equipment, please observe all static discharge precautions as described in the following note:



**ESD**  
**Susceptibility**

Static discharge can cause serious damage to sensitive semiconductor devices. Avoid handling circuit boards in high static environments such as carpeted areas, and when wearing synthetic fiber clothing. Always exercise proper grounding precautions when working on circuit boards and related equipment.

---

## Unpacking

Unpack each card you received from the shipping container, and check the contents against the packing list to ensure that all items are included. If any items are missing or damaged, contact your sales representative or Cobalt Digital Inc. directly.


---

## Rear Module Installation (Optional)

If you are installing the card into a slot with no rear module, the rear module must first be installed before you can connect cables.

Use the following steps to install the rear module in frame:

1. Refer to the openGear<sup>®</sup> frame Owner's Manual, to ensure that the frame is properly installed according to instructions.
2. On the rear of the frame, locate the card frame slot.
3. As shown in Figure 2, seat the bottom of the rear module in the seating slot at the base of the frame's back plane.

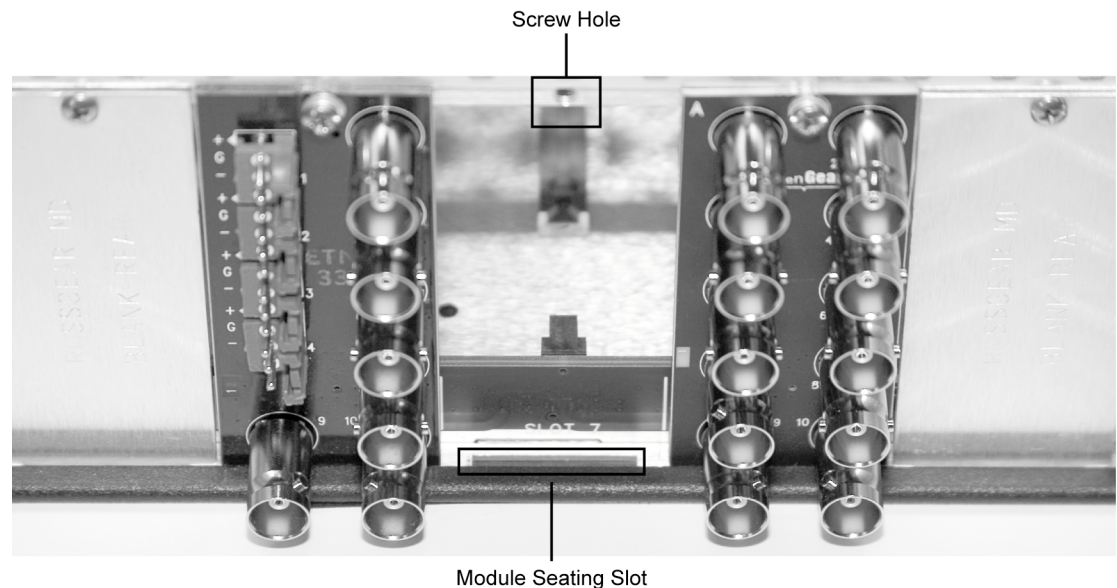

*Figure 2. Rear Module Installation*

4. Align the top hole of the rear module with the screw hole on the top edge of the frame back plane.
5. Using a Phillips driver and the supplied screw, fasten the rear module panel to the frame back plane. Do not over tighten.

This completes the procedure for installing the rear module in an openGear<sup>®</sup> frame.

---

## Board Installation

Use the following steps to install the card in the openGear<sup>®</sup> frame:

1. Refer to the Owner's Manual of the openGear<sup>®</sup> frame to ensure that the frame is properly installed according to instructions.



### Warning

Heat and power distribution requirements within a frame may dictate specific slot placement of cards. Cards with many heat-producing components should be arranged to avoid areas of excess heat build-up, particularly in frames using convection cooling.


2. After selecting the desired frame installation slot, hold the card by the edges and carefully align the card edges with the slots in the frame. Then, fully insert the card into the frame until the rear connection plugs are properly seated on the midplane and rear modules.

This completes the procedure for installing the card in the openGear<sup>®</sup> frame.


# Cable Connections

This section provides instructions for connecting cables to the installed BNC rear modules on the frame backplane. Connect the input and output cables according to the following diagram. The input is internally terminated with 75 ohms. It is not necessary to terminate unused outputs. Split rear modules allow two cards to be installed in adjacent slots. Split rear module RM20-9821-C/S and High-Ventilation rear module RM20-9821-E-HV are available in DIN1.0/2.3 and HDBNC versions.


**RM20-9821-A**

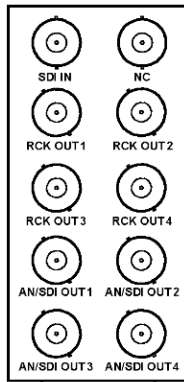

**RM20-9821-A/S**


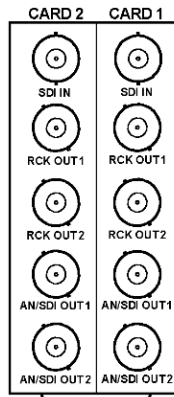


**RM20-9821-B**

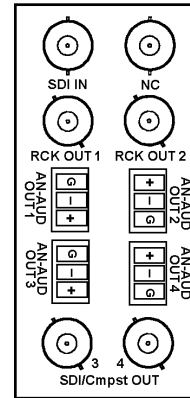

Note: Although this rear module offers only two SDI/Cmpst OUT BNCs, the two outputs on the rear module correlate to card output channels 3 and 4.

**CARD 2 CARD 1**

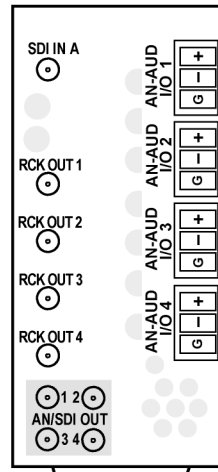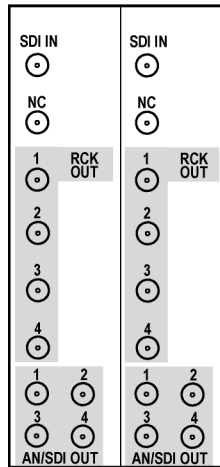

**RM20-9821-C/S**

**RM20-9821-E-HV**

**COBALT**

RM20-9001-B/S-DIN

\*\*SAMPLE-NOT FOR USE\*\*

Due to the density of connector placement on Rear Modules using high-density connectors (e.g., RM20-9001-B/S-DIN), these modules use a QR barcode label instead a regular label. Simply scan the image with a smart phone and a link to the rear module label (as shown in our catalog) will appear. (Smart phone must have a QR reader app such as QuickMark QR Code Reader or equivalent.)

Not all devices may be able to acquire the image. If this occurs, use the device to access the web page for card/rear module to view the diagram.

Figure 3. 9821 Rear Modules

---

# Card Control and Status

The card can be configured and monitored in two ways:

- 1) Via DashBoard remote control software. Dashboard remote control software is the subject of chapter 3.
- 2) Via LEDs and switches on the front edge of the card

Switch S1, located on the upper card edge, controls the primary functions of the card. ON is defined as the switch in the “UP” position, away from the board. OFF is defined as the switch in its “DOWN” position, towards the board.

## Switch S1

Switch S1 is located on the upper card edge and controls the primary functions of the card. ON is defined as the switch in the “UP” position, away from the board. OFF is defined as the switch in its “DOWN” position, towards the board.

### ***S1.1 -- Remote Control Enable***

S1.1 enables the remote control interface. If S1.1 is set to ON the user can control the 9821 card using Dashboard remote control software. Setting S1.1 to ON, disables switches S1.2 through S2.8. Control can be either from remote operators, or these card edge switches, but not both.

If S1.1 is set to OFF, the remote control cannot set any card parameters, but can still monitor the status of the card.

### ***S1.2 through S1.5 – Aspect Ratio Control***

These switches will control aspect ratio for both HD and SD inputs separately. See Table 2 for the positions to select various preset or user defined aspect ratios.

#### ***S1.11 – Underscan***

S1.11 will activate an “underscan” feature, further reducing a selected aspect ratio by 10 percent.

#### ***S1.11 – Analog Composite Color***

S1.11 will enable or disable color on the SD analog output.

#### ***S1.11 – Field Lock***

S1.11 will enable or disable the field locking feature on the card. Field lock is used to ensure that the output SD signals have the correct field polarity when 720p59.94 and 720p50 signals are used as the input. There is no information in the 720p signal that indicates which frames should be made into even fields and which should be made into odd fields. The Field Lock feature looks at the frame reference bus and makes sure that the output field polarity matches that of the reference bus.

Table 2. Switch 1 on card edge

1	2	3	4	5	6	7	8	SETTINGS
ON								Remote Software Control Enable
OFF								Remote Software Control Disable
	ON	ON						SD to SD User Settings (default: No aspect change)
	ON	OFF						SD to SD 0.75 Vert Reduction (letter box)
	OFF	ON						SD to SD 1.33 Horz Expansion (center cut)
	OFF	OFF						SD to SD No Aspect Change.
			ON	ON				HD to SD User settings (default: 1.33H center cut)
			ON	OFF				HD to SD 0.75 Vert Reduction (letter box)
			OFF	ON				HD to SD 1.33 Horz Expansion (center cut)
			OFF	OFF				HD to SD No Aspect Change
					ON			Underscan ON (10% overall)
					OFF			Underscan OFF (10% overall)
						ON		SD Analog Color ON
						OFF		SD Analog Color OFF (B&W)
							ON	Enable Field Locking (for 720p downconvert)
							OFF	Disable Field Locking (for 720p downconvert)

- If aspect ratio has been adjusted off of the default setting, then do a factory restore (page 17 or page 22) to correct.

## Switches 3 and 4 – Rotary Switch Settings

The card has additional parameters which will need to be accessed less frequently. These are controlled via the rotary switches (S3 & S4) and the up/down thumb switch (S2) located on the card edge.

The associated parameter number (00 through 99) is selected with the rotary switches. S3 selects the “10s” digit, and S4 selects the “1s” digit. For example, setting S3 equal to 3 and S4 equal to 1 selects parameter 31 (Y channel lift). The thumb switch S2 will increase or decrease the value of the parameter when pressed up or down. Some parameters have only a binary state. Press S2 up to turn them on, and down to turn them off.

See Table 3 for a complete list of parameters settable through the rotary switches

## Switches 7, 8, 9 and 10

Switches S7, S8, S9 and S10 are used to select SD-SDI or SD analog output on the BNC corresponding to the switch number. If the switch is UP the output will be SD analog if the switch is DOWN the output will be SD-SDI.

## Status Reporting via LEDs

When the switches S3 and S4 are set to “00” the card is in normal mode. In normal mode the “Lock Status” LED will blink when there is no signal present, turn solid orange for SD lock and solid green for HD lock. The “Input Standard” LED will be off if there is an SD signal present, orange if the input standard is 720 and green for an input standard of 1080.

When adjusting the parameters, the three LEDs on the front card edge will report to the user the value of the setting. While viewing the card in its vertical position in the frame the top (POWER) LED will flash the number of 100s, the middle (LOCK STATUS) LED will flash the number of 10s, and the bottom (INPUT STANDARD) LED will flash the number of 1s. At the start of a numerical report all the LEDs will blink simultaneously.

Example: the card is reporting a value of 275. The sequence is this: a blink of all LEDs->2 blinks of the 100s LED->7 blinks of the 10s LED->5 blinks of the 1s LED->repeat.

For parameters that have only a binary state the “1s” LED (D14) will turn on for enabled and off for disabled.



Table 3. Parameters controlled through front edge switches

<b>S3S4</b>	<b>Parameter Description</b>
00	Report Signal Lock Status <u>Restore to 00 prior to device use</u>
	<b>Composite Output</b>
01	Composite output oversampling
02	Composite output color bars
	<b>Software Information</b>
08	Software release number
09	Software build number
	<b>Ancillary Data</b>
10	24-bit audio processing
11	Audio group 1 enable
12	Audio group 2 enable
13	Audio group 3 enable
14	Audio group 4 enable
16	Audio delay Audio delay is reported in hundredths of a second.
17	Closed caption preservation enable
18	Time code preservation enable
19	Time code output line
	<b>Audio De-embed to Analog Audio Outputs</b>
20	Select Group (1 thru 4) to de-embed to Analog Outputs 1 thru 4 (e.g., Group 1 setting de-embeds PCM channels 1 thru 4 to <b>AN-AUD OUT 1</b> thru <b>AN-AUD OUT 4</b> )
21	Select level trim
	<b>Proc Control</b>
30	Gain
31	Lift
32	Saturation
33	Phase
34	Background color hue
35	Background color saturation
36	Background color value
	<b>Scaler</b>
39	Top line suppression
40	H & V aspect zoom
41	H aspect zoom
42	V aspect zoom
43	H aspect pan
44	V aspect pan
45	Prefilter type: 1) Better Frequency Response 2) Better Edge Response 3) Disable Prefilter
46	Prefilter Aggressiveness: Up) attenuate more high frequency components Down) attenuate less
47	HD to SD color matrix: Up) Enable Down) Disable
	<b>Downmixer</b>
48	Downmix Enable: Up) Enable Down) Disable (default=disabled)
49	Input Channel Select: Up: Increment channel select Down: Decrement channel select (default=chnl 1)
50	Output Channel Select: Up: Increment channel select Down: Decrement channel select (default=chnl 1)
51	Center Mix Ratio: Up) Increment by +1 dB Down) Decrement (default = max setting)
52	Surround Mix Ratio: Up) Increment by +1 dB Down) Decrement (default = max setting)
53	Downmix L Channel Mute: Up) Mute Down) Unmute (default=unmute)
54	Downmix R Channel Mute: Up) Mute Down) Unmute (default=unmute)
55	Downmix C Channel Mute: Up) Mute Down) Unmute (default=unmute)
56	Downmix LFE Channel Mute: Up) Mute Down) Unmute (default=unmute)
57	Downmix Ls Channel Mute: Up) Mute Down) Unmute (default=unmute)

58	Downmix Rs Channel Mute: Up) Mute Down) Unmute (default=unmute)
59	Analog Audio Downmix Select: Up) cycle up thru choices Down) cycle down thru choices
	<b>Reticules (Overlays)</b>
60	SDI reticule output enable
61	Analog reticule output enable
62	4x3 full aperture (vert bars)
63	4x3 full aperture (vert bars) size
64	4x3 full aperture (vert bars) thickness
65	4x3 safe area enable
66	4x3 safe area horz size
67	4x3 safe area vert size
68	4x3 safe area horz thickness
69	4x3 safe area vert thickness
70	16x9 safe area enable
71	16x9 safe area horz size
72	16x9 safe area vert size
73	16x9 safe area horz thickness
74	16x9 safe area vert thickness
75	Center cross enable
76	Center cross horz size
77	Center cross vert size
78	Center cross horz thickness
79	Center cross vert thickness
80	Reticule(s) follow ARC
81	Reticule Color: 1) White 2) Black 3) Blue 4) Red
82	Reticule shadow
83	Shadow luma
84	Shadow chroma
	<b>Miscellaneous</b>
92	Reference input select: Down) Reference 1 Up) Reference 2
93	Vbit correction
95	Equalizer status error - if lit there is a bit error detected
	<b>Save/Load</b>
97	Load factory defaults. Loading factory defaults will replace current saved settings
98	Load saved settings
99	Save current setting

# Remote Control

---

## In This Chapter

This section provides a detailed explanation on using remote control functions with your card.

---

## DashBoard Control System Software

The DashBoard Control System enables you to monitor and control openGear<sup>®</sup> frames and controller cards from a computer. The DashBoard software and manual can be downloaded from the Cobalt Digital Inc. website.

### *Using the Menus*

You must first install the DashBoard Control System software on your computer. Refer to the *DashBoard Owner's Manual* for software installation procedures and for using the DashBoard interface.

### *The Menu System*

The following table and sections describe the menus, items, and parameters available from the DashBoard Control System software for the card.

Table 3. DashBoard Menus

Menu	Item	Parameters	Description
<b>Card Info (Read-only)</b>	Product	CDI-9821	
	Manufacturer	Cobalt Digital Inc.	
	Temperature	###.### °C/###.### °F	Current temperature of card at scalar IC.
	+12 Rail Current	### mA	Supply Voltage
	Power	## W	Current power consumption of card
<b>Software (Read-only)</b>	Software Release Number	#	
	Software Build Number	#	

Menu	Item	Parameters	Description
<b>Switch Settings (Read-only)</b>	S3 and S4	Rotary Edge Switch	Reports which parameter is selected by edge switch
	Remote Software	Switch S1-1	Reports if remote software is enabled or disabled. When enabled remote software can modify card parameters when disabled card parameters can only be changed through the card edge switches
<b>Signal Status (Read-only)</b>	Input Format	Input signal	Reports the current input format.
	Equalizer	Input signal	Reports any detected bit errors
<b>Ancillary Data</b>	24-bit Audio Processing	Enable	SD embedded audio will be 24 bits deep, with extended data packets.
		Disable	SD embedded audio will be 20 bits deep, with no extended data packets.
	Group 1	On	Turn on/off audio group 1
		Off	
	Group 2	On	Turn on/off audio group 2
		Off	
	Group 3	On	Turn on/off audio group 3
		Off	
	Group 4	On	Turn on/off audio group 4
		Off	
	Audio Delay ms	Range (-83)-2700ms	Amount of audio delay from input to output
	Closed Caption	Enable	Enable/Disable closed caption passthrough.
		Disable	
	Time Code	Enable	Enable/Disable time code passthrough. Auto searches for first line with time code and passes it through. If more then one time code signal only the first time code line detected will pass through
Disable			
Time Code Output Line	Range 6-22	Selects which output line to embed VITC on	

Menu	Item	Parameters	Description
<b>Scaler</b>	HD to SD ARC	No Aspect Change	
		0.75 V Letter Box	
		1.33 V	
		0.75 H Pillar Box	
		1.33H Center Cut	
		User Setting	User can save custom aspect ratio controls by using the save settings on the engineering tab
	SD to SD ARC	No Aspect Change	
		0.75 V Letter Box	
		1.33 V	
		0.75 H Pillar Box	
		1.33H Center Cut	
		User Setting	User can save custom aspect ratio controls by using the save settings on the engineering tab
	Underscan	Enable	10% H & V reduction
		Disable	
	H Zoom Percent	Range 20-1000%	Horizontal zooming
	V Zoom Percent	Range 20-1000%	Vertical zooming
	H Pan	Range 0-100	Horizontal panning
	V Pan	Range 0-100	Vertical panning
	Filter Type	Better Frequency Response	
		Better Edge Response	
		Disable Filter	
	Top Line Suppression	0-10 lines	Vertical scaling to push active picture up and remove top lines from viewable image.
	Filter Aggressiveness	Range 0-20	Higher value filters more of the signal
	HD to SD color matrix	Enable	
		Disable	

Menu	Item	Parameters	Description
<b>Reticules (Overlays)</b>	SDI	Enable	Enable/Disable reticules on SDI output
		Disable	
	Analog	Enable	Enable/Disable reticules on analog/composite output
		Disable	
	4x3 Safe Area	Enable	
		Disable	
	4x3 Full Aperture	Enable	
		Disable	
	16x9 Safe Area	Enable	
		Disable	
	Center Cross	Enable	
		Disable	
	Reticules Follow Arc	Enable	Reticules scale with video when scaled image when scaled image size is less than the active video size
		Disable	
	Reticule Color	White	Color of the reticules
		Black	
		Blue	
		Red	
	Modify	4x3 Safe Area	Which reticule the following four items effect: Horizontal Size, Vertical Size, Horizontal Thickness, and Vertical Thickness
		4x3 Full Aperture	
16x9 Safe Area			
Center Cross			
Horizontal Size	Range 0-100		
Vertical Size	Range 0-100		
Horizontal Thickness	Range 0-100		
Vertical Thickness	Range 0-100		
Shadow	Enable	Enable/Disable shadowing outside of the reticule boxes	
	Disable		
Shadow Luma	Range 0-100	Percent of signal to pass	
Shadow Chroma	Range 0-100	Percent of signal to pass	

Menu	Item	Parameters	Description
<b>Proc Control</b>	Gain	Range 0-200	As a percentage
	Lift	Range 0-200	As a percentage
	Saturation	Range 0-200	As a percentage
	Phase	Range 0-360	In degrees
	Background Color Hue	Range 0-360	Adjusts background hue when scaled image size is less then the active video size
	Background Color Saturation	Range 0-100	Adjusts background color when scaled image size is less then the active video size
	Background Color Value	Range 0-255	Adjusts background value when scaled image size is less then the active video size
<b>Composite Output</b>	Oversampling	On	Turn on/off encoder oversampling of the composite output video
		Off	
	Color	On	Turn on/off color on the analog/composite output channels
		Off	
	Color Bars	On	Turn on/off color bars on the analog/composite output channels
		Off	
<b>Miscellaneous</b>	Reference	Off	Turn off reference or select which reference to use
		Reference 1	
		Reference 2	
	Reference Alignment Percent	Input signal and reference signal	Reports the alignment percentage of the input video and reference input
	SD Vbit Correction	Enable	If enable V-bit will always be on line 20
		Disable	
	Save Settings	Save	Save the current device configuration
	Load Settings	Same as listed above	Load the previously saved device configuration
Load Factory Defaults	Same as listed above	Load factory defaults. Note this will replace any saved settings with the factory defaults	

Menu	Item	Parameters	Description
Analog Audio De-Embed	Group De-embed	Group 1 thru Group 4	Selects group to be de-embedded onto <b>AN-AUD OUT 1</b> thru <b>AN-AUD OUT 4</b> balanced connectors.
	Trim	0 thru -20.0 (in dB, tenths)	Provides master attenuation (trim) for all four analog audio outputs.

### Downmixer

Figure 4 shows the Downmix controls available using the Dashboard **Downmix** tab. These controls also provide basic audio channel assignments to serve as inputs (downmixed or pass-thru) for the card analog audio outputs.

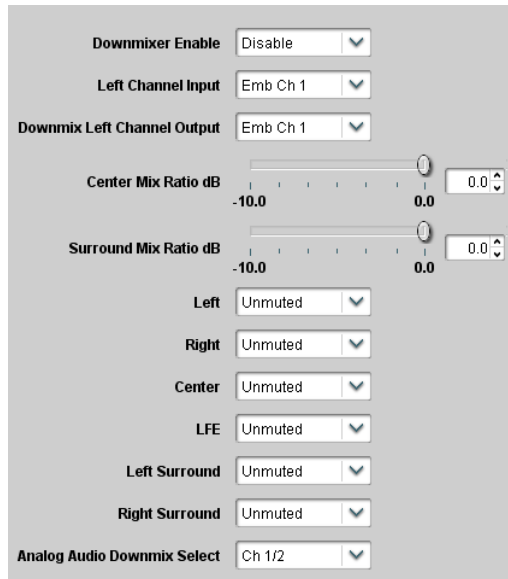


Figure 4. Downmixer Controls

**Note:** Downmix uses fixed 6-channel line-up of L-R-C-LFE-Ls-Rs, with **Left Channel Input** selecting the first (L) channel (for example, with Left Channel Input set to Emb Ch 1, the downmix uses the line-up of Emb Ch 1 thru Emb Ch 6 for respective L thru Rs inputs). Some upstream line-ups may use only 5 channels for a multi-channel complement (omitting the LFE channel). In this case, the upstream line-up should be set as L-R-C-Ls-Rs using Emb Ch 1-2-3-5-6 (skipping Emb Ch 4) to accommodate the fixed 6-channel line-up on this card. LFE on this card can then be set to Muted.

- **Downmixer Enable** – Enables or disables downmixed output.
- **Left Channel Input** – When downmix is enabled, assigns 5.1 inputs to downmixer (for example, when Emb 1 is selected Emb 1 is L source, with consecutive embedded channels 2 thru 6 being assigned as R, C, LFE, Ls, and Rs sources).
- **Downmix Left Channel Output** – Assigns (as destination embedded channels) the L and R channels (for example, when Emb 1 is selected, downmix L is routed to output Emb 1 and downmix right is routed to next embedded channel Emb 2).
- **Center Mix Ratio** – Adjusts the attenuation ratio of center-channel content from 5-channel source that is re-applied as Lt and Rt content to the DM-L and DM-R stereo mix.



- **Surround Mix Ratio** – Adjusts the attenuation ratio of surround-channel content from 5-channel source that is re-applied as Lo and Ro content to the DM-L and DM-R stereo mix.
- **5.1 Input Mute Controls** – **Left** thru **Right Surround Unmute/Mute** drop-downs allow muting channels within a selected 5.1 complement from being applied to the downmixer.
- **Analog Audio Downmix Select** – Selects output to be routed to the card analog audio outputs.
  - Selection 1 / 2 routes downmix L and R to analog audio outputs Ch1 and Ch2.
  - Selection 3 / 4 routes downmix L and R to analog audio outputs Ch3 and Ch4.
  - Both pairs routes downmix L and R to analog audio outputs Ch1 and Ch2, and a copy to analog audio outputs Ch3 and Ch4
  - Pass Through routes the four embedded channels (non-downmix) as selected using the card Analog Output > Group Deembed selection (for example, when Group 1 is selected, Emb Ch 1 thru 4 are outputted on analog audio outputs Ch1 thru Ch4).

**Note:** Embedded audio channels not selected for downmixing or deembedding are not affected by these controls. Other groups are passed unaffected as embedded audio on the card SDI output.

# Technical Specifications

Table 4. Card - Technical Specifications

Category	Parameter	Specification
<b>Serial Digital Video Inputs</b>	Number of Inputs	1
	Data Rates Supported	SMPTE 292 HD-SDI: 1.485 Gbps or 1.485/1.01 Gbps SMPTE 259M-C SD-SDI: 270 Mbps
	Frame Rates Supported	HD: 720p 25/29.97/50/59.94 1080i 25/29.97, 1080p 23.98/25/29.97 1080p/sF 23.98 SD: 486i 29.97 NTSC, 575i 25 PAL
	Impedance	75Ω terminating
	Equalization	HD: 250ft (76 meters) Belden 1505A 200ft (61 meters) Gepco VDM-230 SD: 1000ft (300 meters) Belden 1505A
	Return Loss	>12dB at 1.485GHz
<b>Serial Digital Video Outputs</b>	Number of Outputs	8 Outputs: 4: SDI Reclocked copies of the input signal 4: User configurable SD-SDI/Analog composite
	Impedance	75 Ω
	Return Loss reclocked DA output	SD > 15 dB HD > 12 dB
	Return Loss SDI output	SD > 15 dB
	Signal Level	800 mV ±10%
	DC Offset	0 Volts ±50 mV

<b>Analog Video Outputs</b>	Number of outputs	4: Shared with User configurable above
	Impedance	75 $\Omega$
	Return Loss	> 35 dB
	Signal Type	Analog Composite – NTSC/PAL tracking input rate
	Quantization	12-bit
	K-factor	< 1 %
	Differential Gain	< 1%
	Differential Phase	< 1%
	S/N	> 50 dB
	Signal Level	1 V peak to peak, 716 mV NTSC, 700 mV PAL
	DC offset	- 284 mV NTSC, -300 mV PAL
<b>Analog Audio Outputs</b>	Number of outputs	4 balanced
<b>Other</b>	Total Power Consumption	<8W
	Warranty	Five Year Transferable

Specifications are subject to change without notice.

# Service Information

---

## In This Chapter

This chapter includes the following sections:

- Troubleshooting Checklist
- Power LED Conditions
- Software Upgrades
- Warranty and Repair Policy

---

## Troubleshooting Checklist

Routine maintenance to this openGear<sup>®</sup> product is not required. In the event of problems with your card, the following basic troubleshooting checklist may help identify the source of the problem. If the module still does not appear to be working properly after checking all possible causes, please contact your openGear<sup>®</sup> products distributor, or the Technical Support department at the numbers listed under the “Contact Us” section at the end of this manual.

1. **Visual Review** — Performing a quick visual check may reveal many problems, such as connectors not properly seated or loose cables. Check the module, the frame, and any associated peripheral equipment for signs of trouble.
2. **Power Check** — Check the power indicator LED on the distribution frame front panel for the presence of power. If the power LED is not illuminated, verify that the power cable is connected to a power source and that power is available at the power main. Confirm that the power supplies are fully seated in their slots. If the power LED is still not illuminated, replace the power supply with one that is verified to work.
3. **Reseat the Card in the Frame** — Eject the card and reinsert it in the frame.
4. **Check Control Settings** — Refer to the Installation and Operation sections of the manual and verify all user-adjustable component settings.
5. **Input Signal Status** — Verify that source equipment is operating correctly and that a valid signal is being supplied.
6. **Output Signal Path** — Verify that destination equipment is operating correctly and receiving a valid signal.
7. **Module Exchange** — Exchanging a suspect module with a module that is known to be working correctly is an efficient method for localizing problems to individual modules.

### ***Power LED Conditions***

The top front edge of the module has a Power LED which indicates card status. The Power LED displays the following conditions:

- **Off** — no power to the card.
- **Amber** — the card is running internal diagnostics while powering up.
- **Green** — normal operation.

---

## **Software Upgrades**

Software loads can be sent to the card using the MFC-8320-N Frame Controller with Networking.

Software loads can also be sent to the card using a small eight pin ROM inserted in a dedicated upgrade socket. When the upgrade is complete, the ROM can be removed. Contact Cobalt Digital Inc. to acquire these upgrade ROMs.

---

## Warranty and Repair Policy

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of shipment to the original purchaser, except that 4000, 5000, 6000, 8000 series power supplies, and Dolby® modules (where applicable) are warranted to be free from defects in material and workmanship for a period of one (1) year.

Cobalt Digital Inc.'s ("Cobalt") sole obligation under this warranty shall be limited to, at its option, (i) the repair or (ii) replacement of the product, and the determination of whether a defect is covered under this limited warranty shall be made at the sole discretion of Cobalt.

This limited warranty applies only to the original end-purchaser of the product, and is not assignable or transferrable therefrom. This warranty is limited to defects in material and workmanship, and shall not apply to acts of God, accidents, or negligence on behalf of the purchaser, and shall be voided upon the misuse, abuse, alteration, or modification of the product. Only Cobalt authorized factory representatives are authorized to make repairs to the product, and any unauthorized attempt to repair this product shall immediately void the warranty. Please contact Cobalt Technical Support for more information.

To facilitate the resolution of warranty related issues, Cobalt recommends registering the product by completing and returning a product registration form. In the event of a warrantable defect, the purchaser shall notify Cobalt with a description of the problem, and Cobalt shall provide the purchaser with a Return Material Authorization ("RMA"). For return, defective products should be double boxed, and sufficiently protected, in the original packaging, or equivalent, and shipped to the Cobalt Factory Service Center, postage prepaid and insured for the purchase price. The purchaser should include the RMA number, description of the problem encountered, date purchased, name of dealer purchased from, and serial number with the shipment.

### **Cobalt Digital Inc. Factory Service Center**

2406 E. University Avenue

Office: (217) 344-1243

Urbana, IL 61802 USA

Fax: (217) 344-1245

[www.cobaltdigital.com](http://www.cobaltdigital.com)

Email: [info@cobaltdigital.com](mailto:info@cobaltdigital.com)

THIS LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON COBALT'S PART. ANY SOFTWARE PROVIDED WITH, OR FOR USE WITH, THE PRODUCT IS PROVIDED "AS IS." THE BUYER OF THE PRODUCT ACKNOWLEDGES THAT NO OTHER REPRESENTATIONS WERE MADE OR RELIED UPON WITH RESPECT TO THE QUALITY AND FUNCTION OF THE GOODS HEREIN SOLD. COBALT PRODUCTS ARE NOT AUTHORIZED FOR USE IN LIFE SUPPORT APPLICATIONS.

COBALT'S LIABILITY, WHETHER IN CONTRACT, TORT, WARRANTY, OR OTHERWISE, IS LIMITED TO THE REPAIR OR REPLACEMENT, AT ITS OPTION, OF ANY DEFECTIVE PRODUCT, AND SHALL IN NO EVENT INCLUDE SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS), EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

### ***In Case of Problems***

Should any problem arise with your openGear® card, please contact the Cobalt Digital Inc. Technical Support Department. A Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions, should you wish our factory to repair your openGear® card. If required, a temporary replacement module will be made available at a nominal charge. Any shipping costs incurred will be the responsibility of you, the customer. All products shipped to you from Cobalt Digital Inc. will be shipped collect.

The Cobalt Digital Inc. Technical Support Department will continue to provide advice on any product manufactured by Cobalt Digital Inc., beyond the warranty period without charge, for the life of the equipment.

# Ordering Information

---

## 9821 and Related Products

Your **9821 HD/SD Down Converter with SD Pass Through and Analog Outputs** is a part of the openGear<sup>®</sup> family of products. Cobalt Digital Inc. offers a full line of openGear<sup>®</sup> terminal equipment including distribution, conversion, monitoring, synchronizers, encoders, decoders, embedders, and de-embedders, as well as analog audio and video products.

### ***Standard Equipment***

- **9821** HD/SD Down Converter
- **9821-OM** HD/SD Down Converter Owner's Manual

### ***Optional Equipment***

- **9821-OM** HD/SD Down Converter Owner's Manual (additional Owner's Manual)
- **RM20-9821-A** 20-Slot Frame Rear I/O Module (Standard Width) HD/SD-SDI Input, 4 HD/SD-SDI Reclocked Outputs, 4 Outputs (switchable between SD-SDI or Analog Composite)
- **RM20-9821-A/S** 20-Slot Frame Rear I/O Module (Split) HD/SD-SDI Input, 2 HD/SD-SDI Reclocked Outputs, 2 Outputs (switchable between SD-SDI or Analog Composite)
- **RM20-9821-B** 20-Slot Frame Rear I/O Module (Standard Width) HD/SD-SDI Input, 2 HD/SD-SDI Reclocked Outputs, 4 Analog Audio Outputs, 2 Outputs (switchable between SD-SDI or Analog Composite)
- **RM20-9821-C/S** 20-Slot Frame Rear I/O Module (Split High-Density) Dual HD/SD-SDI Input (HDBNC), 4 HD/SD-SDI Reclocked Outputs per card, 4 Outputs per card (switchable between SD-SDI or Analog Composite) (available with HDBNC or DIN1.2/2.3 as –HDBNC or –DIN)
- **RM20-9821-E-HV** 20-Slot Frame Rear I/O Module (Standard Width; High-Ventilation) HD/SD-SDI Input, 4 HD/SD-SDI Reclocked Outputs, 4 Analog Audio Outputs, 4 Outputs (switchable between SD-SDI or Analog Composite) (available with HDBNC or DIN1.2/2.3 as –HDBNC or –DIN)
- **OG3-FR** Digital Products Frame and Power Supply with Cooling Fans (2RU, holds up to 20 cards)
- **HPF-9000** High-Power (360W) 20-slot frame with integral cooling



# Contact Us

---

## Contact Cobalt Digital Inc.

<b>PHONE</b>	<b>General Business Office and Technical Support</b>	217.344.1243
	<b>Fax</b>	217.344.1245
<b>E-MAIL</b>	<b>General Information</b>	Info@cobaltdigital.com
	<b>Sales Information</b>	Sales@cobaltdigital.com
<b>POSTAL SERVICE</b>	<b>Cobalt Digital Inc.</b>	2406 East University Avenue Urbana, IL 61802 USA

---

## Visit us at the Cobalt Digital Inc. website.

*<http://www.cobaltdigital.com/>*

- Online catalog
- Related products and full product lines
- Trade show information
- Dealer information
- Cobalt Digital Inc. news