



## WAVE ROUTER QUICK START GUIDE

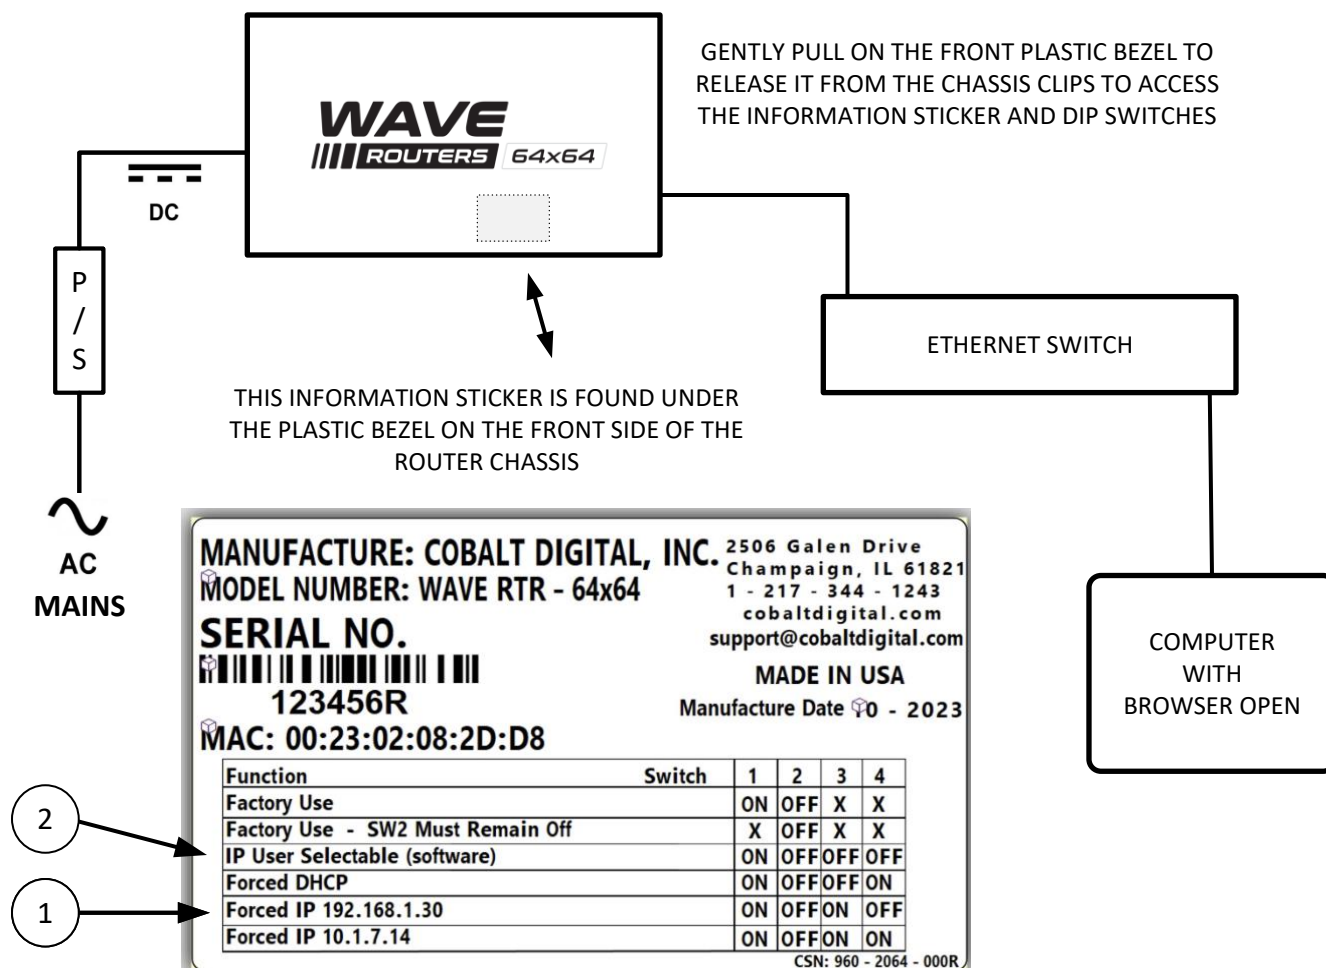

The WAVE router functions are controlled through a web GUI.

To set the IP address for the first time you will use dip switches. Gently remove the plastic bezel from the router and you will see a label like the one above. Your label information will have different MAC numbers and values than the label shown in this example.

- 1 Set the dip switches to one of the factory forced IP addresses. Reboot the router. Open a browser on your computer and type in the factory IP address you chose with the dip switches. Press ENTER. The WAVE Router GUI should load.

Go to the SETTINGS TAB  - select IP Settings. You should see the factory IP number you chose with the dip switch setting.

- 2 If desired, obtain a static address from your System Administrator. Change the dip switch settings to **IP User Selectable**. Use the web GUI to set the static address as needed for your environment.

\* Reboot the router anytime you change dip switch settings.

For additional help, phone or email COBALT Customer Support:  
(217) 344-1243 support@cobaltdigital.com

Thank you for choosing Cobalt Digital equipment!  
Software updates are available on the Cobalt Digital web site. WWW.COBALTDIGITAL.COM