



Cobalt Digital Inc.

2506 Galen Drive
Champaign, IL 61821
Voice 217.344.1243 • Fax 217.344.1245
www.cobaltdigital.com

Engineering Release Notes



You can update your BlueBox™ firmware using the BBGConfig utility present on your BlueBox™ device and its host computer. With your BlueBox™ device connected via a USB cable and the device up on BBGConfig, simply click on the **Firmware Update** icon and follow the on-screen instructions to upload update firmware. **Software updates are field-installed without any need to disconnect the device.**

The table below lists released software versions and describes the corresponding functions additions, improvements and/or corrections.

Software Version (Date)	Description
Note: Some files are delivered as a .zip file. Install the file unzipped as-is.	
1.1.100 (7/20/2016 – present) BBG-EMDE-AES (all models) BBG-DE-AA BBG-EM-AA	Corrections: <ul style="list-style-type: none">• Corrects condition where received SDI without all 4 embedded audio groups could cause device audio output to completely mute. Also corrects condition where disable and then re-enable of an upstream group could cause an audio “hit” (noise, pop). Loss of any group now results in graceful muting of the group with no effect on other groups.
1.1.84 (9/2/2015 – 7/20/2016) BBG-EMDE-AES (all models) BBG-DE-AA BBG-EM-AA	Corrections: <ul style="list-style-type: none">• Corrects condition where audio routing changes made using BBGConfig remote control might not actually control processing.• Corrects condition where some SD sources were not passed and outputted by the device.• Device now usable with psf sources.