



You can update your BlueBox™ firmware using the BBGConfig utility present on your BlueBox™ device and its host computer. With your BlueBox™ device connected via a USB cable and the device up on BBGConfig, simply click on the **Firmware Update** icon and follow the on-screen instructions to upload update firmware. **Software updates are field-installed without any need to disconnect the device.**

The table below lists released software versions and describes the corresponding functions additions, improvements and/or corrections.

Note: The latest firmware files below are intended to be run on BBG's that have received the latest BBGConfig App as posted on the Cobalt Firmware Page in the **BlueBox® Updater / BlueBox® BBGConfig** section.

Note: Because the available current supplied by host computer USB ports may vary, it is recommended to use the supplied AC adapter to power BlueBox while performing config and firmware updates.

Software Version (Date)	Description
Note: Some files are delivered as a .zip file. Install the file unzipped as-is.	
1.3.0 (1/26/2021 – present) BBG-SFP-SXH	Initial release