

3G/HD/SD-SDI Dual-Channel Up-Down-Cross Converter / Frame Sync / Audio Embed/De-Embed

Product Manual

	Cobalt Digital Inc.
<u>COBALT.</u>	2506 Galen Drive Champaign, IL 61821 Voice 217.344.1243 • Fax 217.344.1245 www.cobaltdigital.com

9902-2UDX-OM (V1.3)

Copyright

©Copyright 2021, Cobalt Digital Inc. All Rights Reserved.

Duplication or distribution of this manual and any information contained within is strictly prohibited without the express written permission of Cobalt Digital Inc. This manual and any information contained within, may not be reproduced, distributed, or transmitted in any form, or by any means, for any purpose, without the express written permission of Cobalt Digital Inc. Reproduction or reverse engineering of software used in this device is prohibited.

Disclaimer

The information in this document has been carefully examined and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, Cobalt Digital Inc. reserves the right to make changes to any products herein to improve readability, function, or design. Cobalt Digital Inc. does not assume any liability arising out of the application or use of any product or circuit described herein.

Trademark Information

Cobalt[®] is a registered trademark of Cobalt Digital Inc.

openGear[®] is a registered trademark of Ross Video Limited. **DashBoard**TM is a trademark of Ross Video Limited.

Dolby[®] is a registered trademark of Dolby Laboratories, Inc. Other product names or trademarks appearing in this manual are the property of their respective owners.

Congratulations on choosing the Cobalt[®] 9902-2UDX 3G/HD/SD-SDI Dual-Channel Up-Down-Cross Converter / Frame Sync / Audio Embed/De-Embed. The 9902-2UDX is part of a full line of modular processing and conversion gear for broadcast TV environments. The Cobalt Digital Inc. line includes video decoders and encoders, audio embedders and de-embedders, distribution amplifiers, format converters, remote control systems and much more. Should you have questions pertaining to the installation or operation of your 9902-2UDX, please contact us at the contact information on the front cover.

Manual No.:	9902-2UDX-OM
Document Version:	V1.3
Release Date:	February 16, 2021
Applicable for Firmware Version (or greater):	v2.101 or greater
Description of product/manual changes:	 MInor additions of added UI controls, functions per latest formware Minor consistency edits to manual.

Table of Contents

9902-2UDX Card Software Versions and this Manual	Chapter 1	Introduction	1-1
Cobalt Reference Guides1-2Manual Conventions1-3Warnings, Cautions, and Notes1-4Labeling Symbol Definitions1-4Safety and Regulatory Summary1-5Warnings1-5Cautions1-5EMC Compliance Per Market1-5		Overview	1-1
Manual Conventions 1-3 Warnings, Cautions, and Notes 1-4 Labeling Symbol Definitions 1-4 Safety and Regulatory Summary 1-5 Warnings 1-5 Cautions 1-5 EMC Compliance Per Market 1-5		9902-2UDX Card Software Versions and this Manual	1-2
Warnings, Cautions, and Notes1-4Labeling Symbol Definitions1-4Safety and Regulatory Summary1-5Warnings1-5Cautions1-5EMC Compliance Per Market1-5		Cobalt Reference Guides	1-2
Labeling Symbol Definitions 1-4 Safety and Regulatory Summary 1-5 Warnings 1-5 Cautions 1-5 EMC Compliance Per Market 1-5		Manual Conventions	1-3
Safety and Regulatory Summary		Warnings, Cautions, and Notes	1-4
Warnings 1-5 Cautions		Labeling Symbol Definitions	1-4
Cautions		Safety and Regulatory Summary	1-5
EMC Compliance Per Market 1-5		Warnings	1-5
L L		Cautions	1-5
9902-2UDX Functional Description 1-6		EMC Compliance Per Market	1-5
		9902-2UDX Functional Description	1-6
9902-2UDX Input/Output Formats 1-6		9902-2UDX Input/Output Formats	1-6
Video Processor Description 1-8		Video Processor Description	1-8
Audio Processor Description 1-11		Audio Processor Description	1-11
Control and Data Input/Output Interfaces 1-14		Control and Data Input/Output Interfaces	1-14
Alarm Function 1-15		Alarm Function	1-15
User Control Interface 1-16		User Control Interface	1-16
9902-2UDX Rear I/O Modules 1-18		9902-2UDX Rear I/O Modules	1-18
Technical Specifications 1-18		Technical Specifications	1-18
Warranty and Service Information 1-21		Warranty and Service Information	1-21
Cobalt Digital Inc. Limited Warranty 1-21		Cobalt Digital Inc. Limited Warranty	1-21
Contact Cobalt Digital Inc. 1-22		Contact Cobalt Digital Inc	1-22
Chapter 2 Installation and Setup 2-1	Chapter 2	Installation and Setup	2-1
	-	_	
Installing the 9902-2UDX Into a Frame Slot		Installing the 9902-2UDX Into a Frame Slot	2-1
Installing a Rear I/O Module		-	
9902-2UDX Rear I/O Modules			
Chapter 3 Operating Instructions 3-1	Chapter 3	Operating Instructions	3-1
	L		

Accessing the 9902-2UDX Card via Remote Control	3-6
Accessing the 9902-2UDX Card Using DashBoard TM	3-6
Accessing the 9902-2UDX Card Using a Cobalt® Remote Control Panel	3-7
Checking 9902-2UDX Card Information	3-8
Ancillary Data Line Number Locations and Ranges	3-9
9902-2UDX Function Menu List and Descriptions	3-10
Input Video Controls	3-11
Output Video Mode Controls	3-12
Scaler	3-14
Framesync	3-18
Input Audio Status	3-21
Input Audio Routing/Controls	3-22
Video Quality Events	3-27
Audio Detect Events Setup Controls	3-28
	3-29
Video Proc/Color Correction	3-30
Output Audio Routing/Controls	3-33
Timecode	3-39
Reticules	3-44
Wings Insertion	3-47
AFD Processor Controls	3-48
Moving Box Insertion	3-54
Ancillary Data Proc Controls	3-56
COMM Ports Setup Controls	3-59
Presets	3-61
GPO Setup Controls	3-63
Event Setup Controls	3-64
Admin	3-68
User Log	3-71
Alarms Setup Controls	3-72
Troubleshooting	3-76
Error and Failure Indicator Overview	3-76
Basic Troubleshooting Checks	3-80
	3-81
	3-82
	3-82

Chapter 1

Introduction

Overview

This manual provides installation and operating instructions for the 9902-2UDX 3G/HD/SD-SDI 3G/HD/SD-SDI Dual-Channel Up-Down-Cross Converter / Frame Sync / Audio Embed/De-Embed card (also referred to herein as the 9902-2UDX).

This manual consists of the following chapters:

- **Chapter 1, "Introduction"** Provides information about this manual and what is covered. Also provides general information regarding the 9902-2UDX.
- Chapter 2, "Installation and Setup" Provides instructions for installing the 9902-2UDX in a frame, and optionally installing a 9902-2UDX Rear I/O Module.
- Chapter 3, "Operating Instructions" Provides overviews of operating controls and instructions for using the 9902-2UDX.

This chapter contains the following information:

- 9902-2UDX Card Software Versions and this Manual (p. 1-2)
- Manual Conventions (p. 1-3)
- Safety and Regulatory Summary (p. 1-5)
- 9902-2UDX Functional Description (p. 1-6)
- Technical Specifications (p. 1-18)
- Warranty and Service Information (p. 1-21)
- Contact Cobalt Digital Inc. (p. 1-22)

9902-2UDX Card Software Versions and this Manual

When applicable, Cobalt Digital Inc. provides for continual product enhancements through software updates. As such, functions described in this manual may pertain specifically to cards loaded with a particular software build.

The Software Version of your card can be checked by viewing the **Card Info** menu in DashBoardTM. See Checking 9902-2UDX Card Information (p. 3-8) in Chapter 3, "Operating Instructions" for more information. You can then check our website for the latest software version currently released for the card as described below.

Note: Not all functionality described in this manual may appear on cards with initial software versions.

Check our website and proceed as follows if your card's software does not match the latest version:

Card Software earlier than latest version	Card is not loaded with the latest software. Not all functions and/or specified performance described in this manual may be available. You can update your card with new Update software by going to the Support>Firmware Downloads link at www.cobaltdigital.com. Download "Firmware Update Guide", which provides simple instructions for downloading the latest firmware for your card onto your computer, and then uploading it to your card through DashBoard [™] .
	Software updates are field-installed without any need to remove the card from its frame.
Card Software newer than version in manual	A new manual is expediently released whenever a card's software is updated and specifications and/or functionality have changed as compared to an earlier version (a new manual is not necessarily released if specifications and/or functionality have not changed). A manual earlier than a card's software version may not completely or accurately describe all functions available for your card.
	If your card shows features not described in this manual, you can check for the latest manual (if applicable) and download it by going to the card's web page on www.cobaltdigital.com.

Cobalt Reference Guides

From the Cobalt[®] web home page, go to **Support>Reference Documents** for easy to use guides covering network remote control, card firmware updates, example card processing UI setups and other topics.

1

Manual Conventions

In this manual, display messages and connectors are shown using the exact name shown on the 9902-2UDX itself. Examples are provided below.

• Card-edge display messages are shown like this:



• Connector names are shown like this: SDI IN A

In this manual, the terms below are applicable as follows:

- **9902-2UDX** refers to the 9902-2UDX 3G/HD/SD-SDI Dual-Channel Up-Down-Cross Converter / Frame Sync / Audio Embed/De-Embed card.
- Frame refers to the HPF-9000, oGx, OG3-FR, 8321, or similar 20-slot frame that houses Cobalt[®] or other cards.
- Device and/or Card refers to a Cobalt[®] or other card.
- **System** and/or **Video System** refers to the mix of interconnected production and terminal equipment in which the 9902-2UDX and other cards operate.
- Functions and/or features that are available only as an option are denoted in this manual like this:

Option 🖻

Most options are covered in this manual. However, if your card has DashBoard tabs that are not described in this manual it indicates that the optional function/feature is covered in a separate Manual Supplement.

You can download a manual supplement pdf for the option by going to the card's web page and clicking on **Product Downloads**, where you can select from any available option Manual Supplements for the card.

Warnings, Cautions, and Notes

Certain items in this manual are highlighted by special messages. The definitions are provided below.

Warnings

Warning messages indicate a possible hazard which, if not avoided, could result in personal injury or death.

Cautions

Caution messages indicate a problem or incorrect practice which, if not avoided, could result in improper operation or damage to the product.

Notes

Notes provide supplemental information to the accompanying text. Notes typically precede the text to which they apply.

Labeling Symbol Definitions

Important note regarding product usage. Failure to observe may result in unexpected or incorrect operation.
Electronic device or assembly is susceptible to damage from an ESD event. Handle only using appropriate ESD prevention practices. If ESD wrist strap is not available, handle card only by edges and avoid contact with any connectors or components.
 Symbol (WEEE 2002/96/EC) For product disposal, ensure the following: Do not dispose of this product as unsorted municipal waste. Collect this product separately. Use collection and return systems available to you.

Safety and Regulatory Summary

Warnings

! WARNING !	To reduce risk of electric shock do not remove line voltage service barrier cover on frame equipment containing an AC power supply. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.
Cautions	
CAUTION	This device is intended for environmentally controlled use only in appropriate video terminal equipment operating environments.
CAUTION	This product is intended to be a component product of an openGear® frame. Refer to the openGear® frame Owner's Manual for important safety instructions regarding the proper installation and safe operation of the frame as well as its component products.
CAUTION	Heat and power distribution requirements within a frame may dictate specific slot placement of cards. Cards with many heat-producing components should be arranged to avoid areas of excess heat build-up, particularly in frames using only convection cooling. The 9902-2UDX has a moderate power dissipation (appr. 18 W). As such, avoiding placing the card adjacent to other cards with similar dissipation values if possible.
CAUTION	If required, make certain Rear I/O Module(s) is installed before installing the 9902-2UDX into the frame slot. Damage to card and/or Rear I/O Module can occur if module installation is attempted with card already installed in slot.
CAUTION	If card resists fully engaging in rear I/O module mating connector, check for alignment and proper insertion in slot tracks. Damage to card and/or rear I/O module may occur if improper card insertion is attempted.
CAUTION	The 9902-2UDX FPGA is designed for a normal-range operating temperature around 85° C core temperature. Operation in severe conditions exceeding this limit for non-sustained usage are within device operating safe parameters, and can be allowed by setting this control to Disable. However, the disable (override) setting should be avoided under normal conditions to ensure maximum card protection.

Market	Regulatory Standard or Code
United States of America	FCC "Code of Federal Regulations" Title 47 Part15, Subpart B, Class A
Canada	ICES-003
International	CISPR 24:2010 IEC 61000-4-2:2008 IEC 61000-4-3:2006 with A1:2007 and A2:2010 IEC 61000-4-4:2004 IEC 61000-4-6:2008 IEC 61000-6-3:2006 with A1:2010
	CISPR 22:2008

EMC Compliance Per Market

9902-2UDX Functional Description

Figure 1-1 shows a functional block diagram of the 9902-2UDX. The 9902-2UDX dual-channel card provides two independent signal paths (**Path 1** and **Path 2**) of UDX conversion, frame sync, and audio embedding and de-embedding on a single card. The two paths share an input and output SDI crosspoint to receive and send two discrete SDI inputs and outputs. The 9902-2UDX also includes AES/analog audio support and CVBS video I/O. In addition to a basic signal presence input failover function, a Quality Check option allows failover to alternate inputs based on user-configurable subjective criteria such as black or frozen frame. A moving-box insertion can be enabled to serve as a dynamic raster confidence check even in cases where the input video image is static or lost.

The 9902-2UDX also provides timecode/closed-captioning conversion from packet-based timecode formats and CEA608/708 HD formats to HD ATC, SD_ATC, and SD VITC waveform-based timecode.

9902-2UDX Input/Output Formats

The 9902-2UDX provides the following inputs and outputs (which can be independently used for Path 1 and/or Path 2:

- Inputs:
 - 3G/HD/SD SDI IN A thru SDI IN D four 3G/HD/SD-SDI inputs.
 SDI IN A or SDI IN B can be set to failover to A or B in absence of opposite channel of this pair.
 - **CVBS IN** CVBS coaxial analog video input.
 - AES IN BNC (AES-3id, 75 Ω) ports as AES input (number of ports dependent on rear I/O module used).
 - AN-AUD IN Four balanced analog audio embed inputs.
- Outputs:
 - **3G/HD/SD-SDI OUT (1-4)** four 3G/HD/SD-SDI buffered video outputs. Each output can be independently set as processed output video or selected input video reclocked.
 - **AES OUT –** BNC (AES-3id, 75Ω) ports as AES outputs (number of ports dependent on rear I/O module used).
 - AN-AUD OUT Four balanced analog audio de-embed outputs.
 - **CVBS OUT** CVBS coaxial analog video usable with SD video streams.
- **Note:** Input select also allows internal connection from one processing path output to the opposite processing path input. This allows "serial" processing connections without requiring external jumpering on the card rear I/O module.

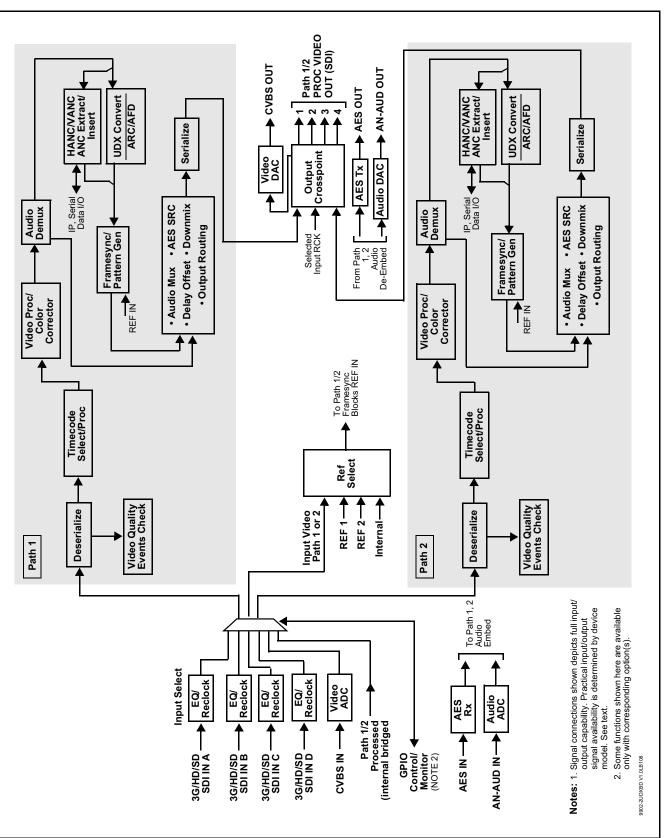


Figure 1-1 9902-2UDX Functional Block Diagram

9902-2UDX Functional Description

Video Processor Description

Note: Unless otherwise noted, the following functions are independently available for Path 1 and Path 2 processing paths.

The 9902-2UDX video subsystem provides the functions described below.

Input Video Select/Quality Check Functions

Used in common as a routing source for both **Path 1/Path 2** is a GUI-based control that allows the card to select from up to four 3G/HD/SD-SDI inputs, and an SD CVBS analog video input. This function also allows processed outputs from one path to be routed to the alternate path input. For analog inputs, waveform-based ancillary data is preserved for extraction and usage later in the card processing chain.

The input can be selected using DashBoard manual control, set to failover to an alternate input upon loss of the target input, and can be externally selected via a GPIO interface. An input **Allowed Rasters** and **Allowed Frame Rates** filter allows inputs to be filtered (screened) for only user-allowed raster sizes and frame rates, with unallowed raster/rates being rejected as an input (input unlock). Reclocked copies of any SDI input can be outputted by the card when selected as a choice on the output crosspoint.

Option (Option +QC). Quality Check allows criteria such as black/ frozen frame events to propagate an event alert. This alert can be used by the card Event Setup actions function to invoke input video routing changes, GPO, and other actions.

Timecode Processor

(See Figure 1-2.) This function provides for extraction of timecode data from input video source, and in turn allow individual timecode strings to be embedded into the output video. The function can monitor any of the video inputs of the card for supported timecode formats such as ATC_LTC or ATC_VITC for down-conversions to HD, and ATC_VITC or VITC waveform (with selectable odd/even field line number control) for SD SDI or CVBS inputs. Waveform VITC timecode can also be extracted from a reference input and used as the output timecode value. If the preferred format is detected, the preferred format is used by the card; if the preferred format is not detected, the card uses other formats (where available) as desired. An internally-generated free-run timecode can be also be embedded on output video if desired.

The function also provides conversion between various timecode formats and provides independent insertion and line number controls for each SDI timecode output format.

Option Solution When licensed with option **+LTC**, this function also can receive, send and translate between audio/RS-485 LTC timecode formats and the VBI formats described above.

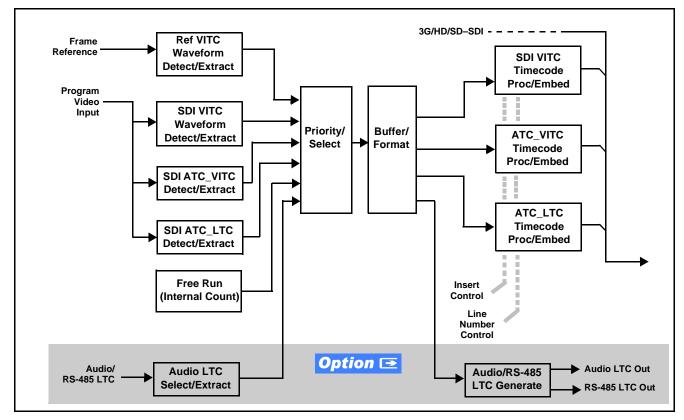


Figure 1-2 Timecode Processor

Frame Sync Function

This function provides path 1/2 independent for frame sync control using either one of two external **FRAME REF IN (1,2)** reference signals distributed with the card frame, selected input video, or internal timing as a frame sync reference.

This function also allows horizontal and/or vertical offset to be added between the output video and the frame sync reference.

Frame sync can select from either of two card frame reference sources, or free-run input video sync. Selectable failover allows alternate reference selection should the initial reference source become unavailable or invalid. In the event of input video loss of signal, the output can be set to disable video, go to black, go to an internal test signal generator pattern, or freeze to the last intact frame (last frame having valid SAV and EAV codes).

An internal test signal generator provides a selection of various standard patterns such as color bars, sweep patterns, and other technical patterns. The test patterns can be applied to the output video upon loss of input or manually inserted at any time.

Scaler Function

The scaler function provides path 1/2 independent up/down/cross-conversion to 3G/HD/SD from multiple SD and 3G/HD video formats and multiple frame rates, and cross-conversion between interlaced and progressive formats, with auto-format detect/down-conversion of SMPTE 424M/292M/259M formats.

The scaler function also provides aspect ratio conversion that provides a choice from several standard aspect ratios. User-defined settings allow custom user-defined H and V aspect ratio control. Reticule insertion provides safe action area marking as well as other reticule functions and patterns.

The scaler provides special modes that allow de-interlacing to be bypassed in certain cases to reduce processing latency. Also provided are selections to optimize 3:2 pulldown conversion where timecode or other timing references can be relied upon to indicate frame transitions.

Color Corrector **Option E**

Option **+COLOR** converts the YCbCr SDI input video to the 4:4:4 RGB color space (where the color correction is applied), and then back to YCbCr SDI on the output. Controls are available to adjust each RGB level independently for both white levels (gain) and black levels (offset). Gamma can also be independently adjusted for each RGB channels. Various controls can be ganged to provide adjustment for all three color channels simultaneously. Color correction can be independently applied to either path.

Video Quality Events Detect Function **Option E**

Option +QC provides a Video Quality Events user interface and an Event Triggers user interface for setting an area of concern across the program raster which can be monitored for frozen or black video events. Threshold controls allow setting the sensitivity of the function, while engage and disengage threshold timing controls allow setting how fast the event detection engages and releases when triggered. The Event Triggers user interface allows instructing the card as to the action to take upon an event (such as go to a changed signal routing, activate a GPO, send an automated email, or go to a user-defined preset).

An **Event Triggers** user interface can detect Closed Caption Presence and Closed Caption Absence events. The **Event Triggers** user interface in turn allows instructing the card as to the action to take upon an event (such as go to a changed signal routing, activate a GPO, send an automated email, or go to a user-defined preset).

Ancillary Data Processor **Option E**

This function provides full VANC/HANC ancillary data de-embedding and embedding for 3G/HD/SD-SDI streams. Direct access to DID and SDID locations allows extraction or insertion of user data such as camera PTZ, SCTE 104, closed-captioning read/insert, GPI/GPO via ANC, or other specialized user payloads. Data can be extracted and inserted within the card (Bridge mode), or inserted and/or extracted to and from the card via serial or IP interfaces connecting to external devices/systems. A rear I/O module with a dedicated IP port can be used with the ancillary data processor function for data insertion or extraction via IP.

Video Output Crosspoint

Used in common as a routing source for both **Path 1/Path 2** is a four-output video matrix crosspoint that allows independently applying the card processed video output or reclocked input to any of the four card discrete coaxial outputs (**SDI OUT 1** thru **SDI OUT 4**). For an SD output, a CVBS coaxial output is available as a processed video output which can be sourced from either processing path.

Audio Processor Description

Note: Path 1 and Path 2 have individual independent digital audio embed and de-embed banks for each of the processing path's 16-channels of embedded audio. The card's 16 channels of AES embed/de-embed can be allocated individually to any or either path's embed or de-embed nodes. Similarly, four-channel analog audio can be individually allocated across any or either path's embed or de-embed nodes.

The audio processor operates as an internal audio router. This function chooses from the following inputs:

- 16 channels of embedded audio from an SDI video input (default 1-to-1 routing to SDI output)
- Up to 16 channels (8 pairs) of discrete AES input¹
- Up to 4 channels of balanced analog audio input

(See Figure 1-3.) The audio processing subsection is built around the card's two internal 16-channel audio buses (Path 1 and Path 2). Each 16-channel bus receives inputs from an input routing crosspoint that routes de-embedded, and discrete AES and analog audio inputs, over the 16-channel card bus. Correspondingly, at the output end of each 16-channel bus is an output routing crosspoint that in turn distributes the 16-channel bus signals to embedded, and discrete AES and analog audio outputs.

^{1.} Discrete audio I/O channel count is dependent on rear I/O module used.

An Input Audio Status display shows the presence and peak level of each input audio channel received by the card. In addition to SDI embedded audio channel sources, analog and coaxial AES inputs are available as input audio choices. For AES audio inputs, payload is identified (PCM or data such as Dolby[®] Digital or E). Each AES input pair has independent sample rate converters to align each input pair with video timing to accommodate cases where AES audio is not synchronous with input video (SRC automatically bypassed for non-PCM payloads). As such, the audio subsection provides a full crosspoint between all supported audio inputs and output types.

The audio output crosspoint for each path's embedded output allows embedded channel selection from the respective path's own channels, or channels from the alternate processing path.

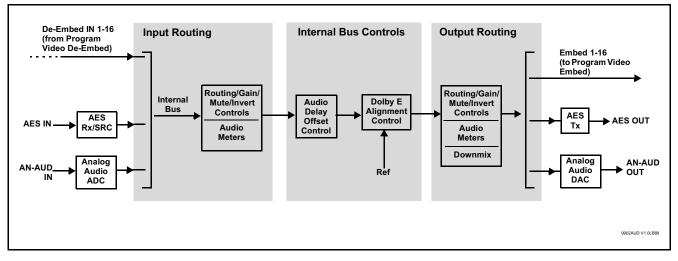


Figure 1-3 Basic Audio Processing Block Diagram

Option (Option +CQS). Clean and Quiet Switching allows SDI input selection to be changed from one source to another while ducking audio during controlled input video switching transitions to provide silence between input switches. The cross-fade is queued for the next available RP168 switch line following the switch command.

- **Note:** Clean audio switching is assured only for intentional, controlled switches via user control. Clean audio switching cannot be assured for failover switches.
 - Clean switching requires that both SDI signals (switch from and switch to) be stable and present.
 - Clean audio switching function is designed for PCM audio. This function does not assure clean decoded audio when switching from/to Dolby or other non-PCM audio.

Audio Down Mix Function

(See Figure 1-4.) The Audio Down Mixer function provides for the selection of any five embedded channels serving as Left (L), Right (R), Center (C), Left Surround (Ls), and Right Surround (Rs) individual signals to be multiplexed into stereo pair Down Mix Left (DM-L) and Down Mix Right (DM-R). The resulting stereo pair DM-L and DM-R can in turn be routed to any embedded audio pair as desired (or de-embedded to an AES or analog audio output).

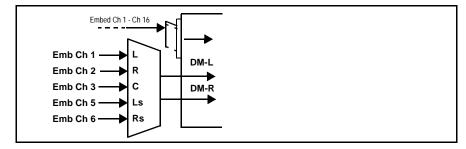


Figure 1-4 Audio Down Mix Functional Block Diagram with Example Sources

Flex Buses

For both input and output nodes before and after the card internal buses, flex buses provide flexible-structure mixer in which any of 16 summing nodes (**Flex Mix Bus A** thru **Flex Mix Bus P**) can receive any card audio input, thereby allowing several customizable mixing schemes. Similarly, any of the 16 card internal bus signals can be applied to an output flex bus mixer. The output flex bus allows cross-sourcing from both **Path 1** and **Path 2** embedded internal Audio Bus sources to the Path 1 and Path 2 discrete output audio crosspoints.

Text-To-Speech **Option E**

Cobalt Digital **+TTS** is a complete 21CVAA digital text-to-speech generation / audio insertion solution for embedded and discrete audio systems.

+TTS interfaces with industry standard Windows Share folder systems to receive non-proprietary text, XML, or similar plain text files, and converts and inserts realistic human-voice audio into user-configured audio channels (typically an SAP channel pair intended for this playout). **+TTS** allows for prioritization based on the organization's discretion (for example, severe weather alerts out-prioritizing school closings). Alert tones are inserted over the main program channels to alert the visually impaired that emergency content is to occur on the SAP channel. Alerts can be played a configurable number of times, and alerts with higher priority can interrupt current lists for breaking news. Once the interrupt message is broadcast, **+TTS** automatically reverts to normal audio programming. Refer to +TTS Manual Supplement OPT-TTS-MS for detailed information and installation/setup instructions.

Audio Events Detect Function **Option**

Option +QC provides a Audio Detect Events user interface and an Event Triggers user interface for checking user-selected channels to detect audio silence conditions. The Event Triggers user interface in turn allows instructing the card as to the action to take upon an event (such as go to a changed signal routing, activate a GPO, send an automated email, or go to a user-defined preset).

Control and Data Input/Output Interfaces

GPI Interface

Two independent ground-closure sensing GPI inputs (**GPI 1** and **GPI 2**; each sharing common ground connection as chassis potential) are available. Associated with each GPI user control is a selection of one of 32 user-defined card presets in which GPI activation invokes a card control preset. Because the GPI closure invokes a user-defined preset, the resulting setup is highly flexible and totally user-defined. Invoking a user preset to effect a change involves card setup communication limited **only** to the items being changed; the card remains on-line during the setup, and the called preset is rapidly applied.

GPI triggering can be user selected to consider the activity on discrete GPI ports, or combinations of logic states considering both GPI inputs, as well as be set for level or edge triggering. This flexibility allows multistage, progressive actions to be invoked if desired. Indication is provided showing whenever a GPI input has been invoked.

GPO Interface

Two independent phototransistor non-referenced (floating) contact pairs (**GPO 1/1** and **GPO 2/2**) are available. A GPO can be invoked by setting a GPO to be enabled when a card preset is in turn applied (i.e., when a preset is invoked (either manually or via event-based loading), the GPO is correspondingly also activated.

Serial (COMM) Ports

The 9902-2UDX is equipped with two, 3-wire serial ports (**COM 1 - Serial Port 1, COM 2 - Serial Port 2**). The ports provide for SMPTE 2020 de-embedding to an output port, and provide RS-485 LTC I/O (when licensed with option +LTC). Either port can be configured as RS-232 Tx/Rx or RS-4585 non-duplexed Tx or Rx.

+SCTE104 Insertion Option **E**

Note: Option +SCTE104 is available only for Path1.

Option +SCTE104 provides generation and insertion of SCTE 104 messages into baseband SDI. Message send can be triggered from automation GPI or other event action modes. The option can also execute card actions based on SCTE 104 messages received by the card, as well as send triggered SCTE 104 packets to other downstream systems.

The user interface is based on common SCTE 104 operations: Splice Start Normal, Splice Start Intermediate, Splice End Normal, Splice End Intermediate, and Splice Cancel (splice_request_data variants), offering full control of splice start, end, and cancel as well as pre-roll and break duration offsets. (A Manual Supplement is planned for this option. Please check product web page.)

Alarm Function

The card can be set to monitor input video/audio for input errors such as input LOS, frozen or black frame, loss of reference, closed captioning ancillary data loss, and/or per-channel audio absences. These alarms can be propagated as a card general error or warning message, and can be downloaded as basic .txt logs or via a Syslog function.

User setup tables configure the alarm severity escalation as well as trigger holdoff/release and other thresholds as applicable.

User Control Interface

Figure 1-5 shows the user control interface options for the 9902-2UDX. These options are individually described below.

Note: All user control interfaces described here are cross-compatible and can operate together as desired. Where applicable, any control setting change made using a particular user interface is reflected on any other connected interface.

• **DashBoard[™] User Interface** – Using DashBoard[™], the 9902-2UDX and other cards installed in openGear®¹ frames can be controlled from a computer and monitor.

DashBoardTM allows users to view all frames on a network with control and monitoring for all populated slots inside a frame. This simplifies the setup and use of numerous modules in a large installation and offers the ability to centralize monitoring. Cards define their controllable parameters to DashBoardTM, so the control interface is always up to date.


The DashBoard[™] software can be downloaded from the Cobalt Digital Inc. website: <u>www.cobaltdigital.com</u> (enter "DashBoard" in the search window). The DashBoard[™] user interface is described in Chapter 3,"Operating Instructions".


 Cobalt[®] OGCP-9000 and OGCP-9000/CC Remote Control Panels – The OGCP-9000 and OGCP-9000/CC Remote Control Panels conveniently and intuitively provide parameter monitor and control of the 9902-2UDX and other video and audio processing terminal equipment meeting the open-architecture Cobalt[®] cards for openGearTM standard.

In addition to circumventing the need for a computer to monitor and control signal processing cards, the Control Panels allow quick and intuitive access to hundreds of cards in a facility, and can monitor and allow adjustment of multiple parameters at one time.

The Remote Control Panels are totally compatible with the openGearTM control software DashBoardTM; any changes made with either system are reflected on the other. The Remote Control Panel user interface is described in Chapter 3, "Operating Instructions".

^{1.} openGear® is a registered trademark of Ross Video Limited. DashBoardTM is a trademark of Ross Video Limited.

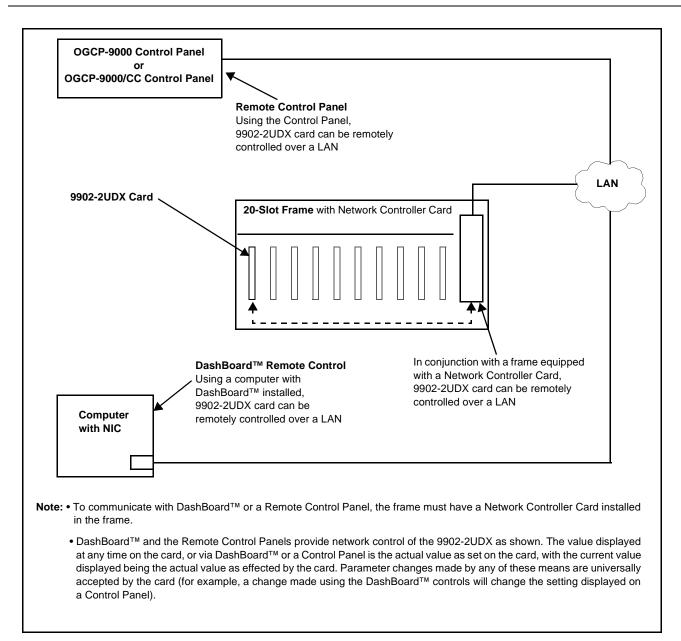

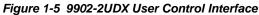

Note: If network remote control is to be used for the frame and the frame has not yet been set up for remote control, Cobalt[®] reference guide **Remote Control** User Guide (PN 9000RCS-RM) provides thorough information and step-by-step instructions for setting up network remote control of Cobalt[®] cards using DashBoard[™]. (Cobalt[®] OGCP-9000 and OGCP-9000/CC Remote Control Panel product manuals have complete instructions for setting up remote control using a Remote Control Panel.)

Download a copy of this guide by clicking on the **Support>Reference Documents** link at www.cobaltdigital.com and then select DashBoard Remote Control Setup Guide as a download, or contact Cobalt[®] as listed in Contact Cobalt Digital Inc. (p. 1-22).

9902-2UDX Rear I/O Modules

The 9902-2UDX physically interfaces to system video connections at the rear of its frame using a Rear I/O Module.

All inputs and outputs shown in the 9902-2UDX Functional Block Diagram (Figure 1-1) enter and exit the card via the card edge backplane connector. The Rear I/O Module breaks out the 9902-2UDX card edge connections to coaxial and other connectors that interface with other components and systems in the signal chain.

The full assortment of 9902-2UDX Rear I/O Modules is shown and described in 9902-2UDX Rear I/O Modules (p. 2-4) in Chapter 2, "Installation and Setup".

Technical Specifications

Table 1-1 lists the technical specifications for the 9902-2UDX 3G/HD/ SD-SDI Dual-Channel Up-Down-Cross Converter / Frame Sync / Audio Embed/De-Embed card.

Item	Characteristic
Part number, nomenclature	9902-2UDX 3G/HD/SD-SDI Dual-Channel Up-Down-Cross Converter / Frame Sync / Audio Embed/De-Embed
Installation/usage environment	Intended for installation and usage in frame meeting openGear™ modular system definition
Power consumption	18 Watts maximum
Installation Density	Up to 20 cards per 20-slot frame
Environmental: Operating temperature: Relative humidity (operating or storage):	32° – 104° F (0° – 40° C) < 95%, non-condensing
Frame communication	10/100/1000 Mbps Ethernet with Auto-MDIX
Indicators	Card edge display and indicators as follows: • 4-character alphanumeric display • Status/Error LED indicator • Input Presence LED indicators
Serial Digital Video Input	Number of Inputs: Up to (4), with manual select or failover to alternate input Data Rates Supported: SMPTE 424M, 292M, SMPTE 259M-C

Table 1-1 Technical Specifications

1

Item	Characteristic
Serial Digital Video Input (cont.)	Impedance: 75 Ω terminating
	Return Loss:
	> 15 dB up to 1.485 GHz
	> 10 dB up to 2.970 GHz
Analog Video Input	Number of Inputs:
	One SD analog CVBS
	Impedance:
	75 Ω
AES Audio Inputs	Standard:
	SMPTE 276M
	Number of Inputs:
	Up to 16 unbalanced; AES-3id
	Impedance:
	75 Ω
Analog Audio Inputs	Number of Inputs:
	Up to four balanced using 3-wire removable Phoenix connectors; 0 dBFS => +24 dBu
Input Select/Auto-Changeover Failover (option +QC)	Failover to alternate input on loss of target input. Failover invoked upon LOS and/or (with option +QC) user configurable parametric criteria such as black/frozen frame or audio silence.
	- Black frame trigger configurable for black intensity threshold and persistence time.
	 Frozen frame trigger configurable for frozen percentage difference and persistence time.
Post-Processor Serial Digital Video	Number of Outputs:
Outputs	Four 3G/HD/SD-SDI BNC
	Impedance:
	75 Ω
	Return Loss:
	> 15 dB at 5 MHz – 270 MHz
	Signal Level:
	800 mV ± 10%
	DC Offset:
	0 V ± 50 mV

Table 1-1	Technical Specifications — continued
	reennour opeennouriens contantaeu

Item	Characteristic
Post-Processor Serial Digital Video Outputs (cont.)	Jitter (3G/HD/SD): < 0.3/0.2/0.2 UI Minimum Latency (scaler and frame sync disabled): SD: 127 pixels; 9.4 us 720p: 330 pixels; 4.45 us 1080i: 271 pixels; 3.65 us 1080p: 361 pixels; 2.43 us
Analog Video Output	Number of Outputs: One SD analog CVBS Impedance: 75 Ω
Embedded Audio Output	16-ch embedded. User crosspoint allows routing of any embedded channel to any embedded channel output. Multi-frequency tone generator for each audio output. Master delay control; range of -33 msec to +3000 msec.
AES Audio Outputs	Standard: SMPTE 276M Number of Outputs: Up to 16 unbalanced; AES-3id Impedance: 75 Ω
Analog Audio Outputs	Number of Outputs: Up to four balanced using 3-wire removable Phoenix connectors; 0 dBFS => +24 dBu
Frame Reference Input	Number of Inputs: Two, REF 1 and REF 2 from frame with selectable failoverStandards Supported: SMPTE 170M/318M ("black burst") SMPTE 274M/296M ("tri-level")Return Loss: > 35 dB up to 5.75 MHz
GPIO	 (2) GPI; (2) GPO; opto-isolated GPO Specifications: Max I: 120 mA Max V: 30 V Max P: 120 mW GPI Specifications: GPI LO @ Vin < 1.5 V GPI HI @ Vin > 2.3 V Max Vin: 9 V

 Table 1-1
 Technical Specifications — continued

Warranty and Service Information

Cobalt Digital Inc. Limited Warranty

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of shipment to the original purchaser, except that 4000, 5000, 6000, 8000 series power supplies, and Dolby[®] modules (where applicable) are warranted to be free from defects in material and workmanship for a period of one (1) year.

Cobalt Digital Inc.'s ("Cobalt") sole obligation under this warranty shall be limited to, at its option, (i) the repair or (ii) replacement of the product, and the determination of whether a defect is covered under this limited warranty shall be made at the sole discretion of Cobalt.

This limited warranty applies only to the original end-purchaser of the product, and is not assignable or transferrable therefrom. This warranty is limited to defects in material and workmanship, and shall not apply to acts of God, accidents, or negligence on behalf of the purchaser, and shall be voided upon the misuse, abuse, alteration, or modification of the product. Only Cobalt authorized factory representatives are authorized to make repairs to the product, and any unauthorized attempt to repair this product shall immediately void the warranty. Please contact Cobalt Technical Support for more information.

To facilitate the resolution of warranty related issues, Cobalt recommends registering the product by completing and returning a product registration form. In the event of a warrantable defect, the purchaser shall notify Cobalt with a description of the problem, and Cobalt shall provide the purchaser with a Return Material Authorization ("RMA"). For return, defective products should be double boxed, and sufficiently protected, in the original packaging, or equivalent, and shipped to the Cobalt Factory Service Center, postage prepaid and insured for the purchase price. The purchaser should include the RMA number, description of the problem encountered, date purchased, name of dealer purchased from, and serial number with the shipment.

Cobalt Digital Inc. Factory Service Center

2506 Galen Drive	Office: (217) 344-1243
Champaign, IL 61821 USA	Fax: (217) 344-1245
www.cobaltdigital.com	Email: info@cobaltdigital.com

THIS LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON COBALT'S PART. ANY SOFTWARE PROVIDED WITH, OR FOR USE WITH, THE PRODUCT IS PROVIDED "AS IS." THE BUYER OF THE PRODUCT ACKNOWLEDGES THAT NO OTHER REPRESENTATIONS WERE MADE OR RELIED UPON WITH RESPECT TO THE QUALITY AND FUNCTION OF THE GOODS HEREIN SOLD. COBALT PRODUCTS ARE NOT AUTHORIZED FOR USE IN LIFE SUPPORT APPLICATIONS.

COBALT'S LIABILITY, WHETHER IN CONTRACT, TORT, WARRANTY, OR OTHERWISE, IS LIMITED TO THE REPAIR OR REPLACEMENT, AT ITS OPTION, OF ANY DEFECTIVE PRODUCT, AND SHALL IN NO EVENT INCLUDE SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS), EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Contact Cobalt Digital Inc.

Feel free to contact our thorough and professional support representatives for any of the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

Phone:	(217) 344-1243
Fax:	(217) 344-1245
Web:	www.cobaltdigital.com
General Information:	info@cobaltdigital.com
Technical Support:	support@cobaltdigital.com

Chapter 2

Installation and Setup

Overview

This chapter contains the following information:


- Installing the 9902-2UDX Into a Frame Slot (p. 2-1)
- Installing a Rear I/O Module (p. 2-3)
- Setting Up 9902-2UDX Network Remote Control (p. 2-10)

Installing the 9902-2UDX Into a Frame Slot

CAUTION

Heat and power distribution requirements within a frame may dictate specific slot placement of cards. Cards with many heat-producing components should be arranged to avoid areas of excess heat build-up, particularly in frames using only convection cooling. The 9902-2UDX has a moderate power dissipation (appr. 18 W). As such, avoiding placing the card adjacent to other cards with similar dissipation values if possible.

CAUTION

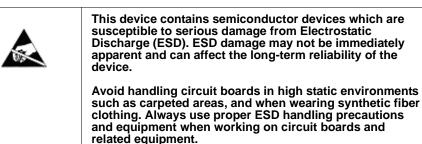

Note: If installing the 9902-2UDX in a slot with no rear I/O module, a Rear I/O Module is required before cabling can be connected. Refer to Installing a Rear I/O Module (p. 2-3) for rear I/O module installation procedure.

CAUTION

If required, make certain Rear I/O Module(s) is installed before installing the 9902-2UDX into the frame slot. Damage to card and/or Rear I/O Module can occur if module installation is attempted with card already installed in slot.

Note: Check the packaging in which the 9902-2UDX was shipped for any extra items such as a Rear I/O Module connection label. In some cases, this label is shipped with the card and to be installed on the Rear I/O connector bank corresponding to the slot location of the card.

Install the 9902-2UDX into a frame slot as follows:

- 1. Determine the slot in which the 9902-2UDX is to be installed.
- 2. Open the frame front access panel.
- **3.** While holding the card by the card edges, align the card such that the plastic ejector tab is on the bottom.
- 4. Align the card with the top and bottom guides of the slot in which the card is being installed.
- **5.** Gradually slide the card into the slot. When resistance is noticed, gently continue pushing the card until its rear printed circuit edge terminals engage fully into the rear I/O module mating connector.

CAUTION

If card resists fully engaging in rear I/O module mating connector, check for alignment and proper insertion in slot tracks. Damage to card and/or rear I/O module may occur if improper card insertion is attempted.

- **6.** Verify that the card is fully engaged in rear I/O module mating connector.
- 7. Close the frame front access panel.
- 8. Connect the input and output cables as shown in 9902-2UDX Rear I/O Modules (p. 2-4).
- 9. Repeat steps 1 through 8 for other 9902-2UDX cards.
- **Note:** The 9902-2UDX BNC inputs are internally 75-ohm terminated. It is not necessary to terminate unused BNC inputs or outputs.
 - External frame sync reference signals are received by the card over a reference bus on the card frame, and not on any card rear I/O module connectors. The frame has BNC connectors labeled **REF 1** and **REF 2** which receive the reference signal from an external source such as a house distribution.
 - To remove a card, press down on the ejector tab to unseat the card from the rear I/O module mating connector. Evenly draw the card from its slot.
 - **10.** If network remote control is to be used for the frame and the frame has not yet been set up for remote control, perform setup in accordance with Setting Up 9902-2UDX Network Remote Control (p. 2-10).

Note: If installing a card in a frame already equipped for, and connected to DashBoard[™], no network setup is required for the card. The card will be discovered by DashBoard[™] and be ready for use.

Installing a Rear I/O Module

Note: This procedure is applicable **only if a Rear I/O Module is not currently installed** in the slot where the 9902-2UDX is to be installed.

If installing the 9902-2UDX in a slot already equipped with a suitable I/O module, omit this procedure.

Install a Rear I/O Module as follows:

- 1. On the frame, determine the slot in which the 9902-2UDX is to be installed.
- 2. In the mounting area corresponding to the slot location, install Rear I/O Module as shown in Figure 2-1.

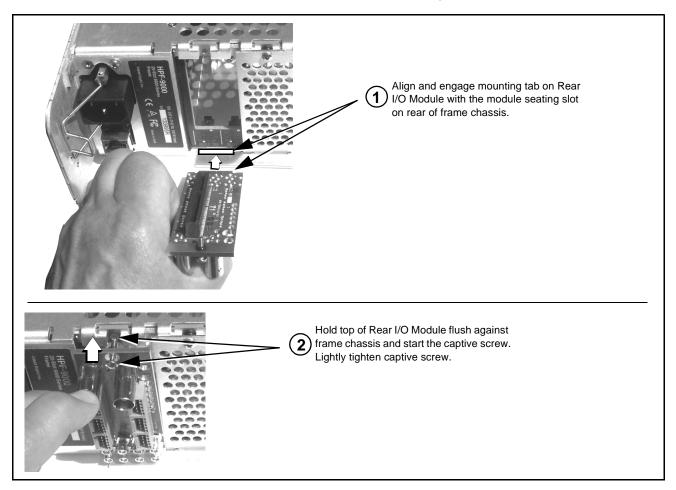


Figure 2-1 Rear I/O Module Installation

9902-2UDX Rear I/O Modules

Table 2-1 shows and describes the full assortment of Rear I/O Modules specifically for use with the 9902-2UDX.

Notes: Rear I/O Modules equipped with 3-wire Phoenix connectors are supplied with removable screw terminal block adapters. For clarity, the adapters are omitted in the drawings below.

9902-2UDX Rear I/O Module	Description
RM20-9902-2UDX-A/S	 Split Rear Module. Provides each of the following connections for two 9902-2UDX cards: Two 3G/HD/SD-SDI coaxial input BNCs (SDI IN A and SDI IN C) Three 3G/HD/SD-SDI Video Out BNCs (SDI OUT 1 thru SDI OUT 3)
RM20-9902-2UDX-C	 Provides the following connections: Four 3G/HD/SD-SDI video input BNCs (SDI IN A thru SDI IN D) Four 3G/HD/SD-SDI video output BNCs (RCK/PROC 1 thru RCK/PROC 4; each GUI selectable as processed out, selected-input reclocked, or wings/key-fill preview where available) One relay-protected SDI processed output BNC (RLY BYP B; outputs a copy of SDI OUT 1 under normal conditions, or passive outputs the SDI input on SDI IN B as a relay failover if card power is lost) COMM/GPIO RJ-45 connector Note: Refer to GPIO, Serial (COMM), and Analog Audio Connections (p. 2-10) for connector pinouts

Table 2-1 9902-2UDX Rear I/O Modules


limits.

9902-2UDX Rear I/O Modul	e	Description
RM20-9902-2UDX-D	 Provides the following connections: Two 3G/HD/SD-SDI video inputs (VIDEO IN A and VIDEO IN B) One CVBS video input (CVBS IN) Two analog balanced audio inputs (AN-AUD IN 1 	
	- 2⊙ 6⊙ AES N ~ 3⊙ 7⊙ - 4⊙ 8⊙	 Five analog balanced addio inputs (AN-AOD IN Finance and AN-AUD IN 2) Eight AES audio inputs (AES IN 1 thru AES IN 8) Two 3G/HD/SD-SDI video outputs (VIDEO OUT 1 and VIDEO OUT 2) One CVBS video output (CVBS OUT) Two analog balanced audio outputs (AN-AUD OUT 1 and AN-AUD OUT 2) Eight AES audio outputs (AES OUT 1 thru AES OUT 8) Note: Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9902-2UDX-D-HDBNC or RM20-9902-2UDX-D-DIN, respectively.
RM20-9902-2UDX-E	SDI IN SDI IN SDI PROC/ AES IN SDI PROC/ AES IN \bigcirc \bigcirc 4 \otimes 4 \otimes 4	 Provides the following connections: Four 3G/HD/SD-SDI video inputs (SDI IN A thru SDI IN D) Eight AES audio inputs (AES IN 1 thru AES IN 8) Four 3G/HD/SD-SDI video outputs; selectable as processed or input reclocked out (SDI PROC/RCK OUT 1 thru SDI PROC/RCK OUT 1 thru SDI PROC/RCK OUT 4) Eight AES audio outputs (AES OUT 1 thru AES OUT 1 thru AES OUT 1 thru AES OUT 1) Note: Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9902-2UDX-E-HDBNC or RM20-9902-2UDX-E-DIN, respectively.


9902-2UDX Rear I/O Module	Description
RM20-9902-2UDX-F	Provides the following connections:
	 Two 3G/HD/SD-SDI video input BNCs (SDI IN A and SDI IN B)
	 Three 3G/HD/SD-SDI video output BNCs (SDI OUT 1A thru SDI OUT 4B; each GUI selectable as selected-input reclocked or processed out)
	 One relay-protected SDI processed output BNC (RLY BYP A/B OUT)
SDI OUT 1A A/B OUT	 Two opto-isolated GPI inputs (terminals GPI 1-G and GPI 2-G)
	 Two opto-coupled GPO (GPO 1/G and GPO 2/G)
SDI OUT 3A SDI OUT 4B	Note: Refer to GPIO, Serial (COMM), and Analog Audio Connections (p. 2-10) for connector pinouts and important information regarding GPO electrical limits.
RM20-9902-2UDX-H	Provides the following connections:
VIDEO IN D $\bigcirc -A$ $B - \bigcirc \bigcirc \bigcirc$ \bigcirc $+$ D \bigcirc \Rightarrow	 Two 3G/HD/SD-SDI video input BNCs (SDI IN A and SDI IN B) One SDI/CVBS video input; selectable as 3G/HD/
	 SD-SDI or CVBS (D/CVBS IN) Four analog balanced audio inputs (AN-AUD IN 1 thru AN-AUD IN 4)
	• Two AES audio inputs (AES IN 1 and AES IN 2)
	 Three 3G/HD/SD-SDI video outputs, selectable as processed or reclocked input (SDI OUT 1 thru SDI OUT 3)
$\begin{array}{c c} \bullet & & & & & \\ \hline & & & \\ 3 \odot & SDI OUT & \bigcirc \begin{array}{c} 4 \\ 5 \end{array} & 2 \odot \\ 1 \odot & \begin{array}{c} 4 \\ 2 \end{array} & 1 \odot & 2 \end{array} \end{array}$	 3G/HD/SD-SDI video output pair, selectable as processed or reclocked input as a pair (SDI OUT 4a and SDI OUT 4b)
GPI 1 O 1/C 1/C 2 GPIO AES OUT	 Four analog balanced audio outputs (AN-AUD OUT 1 thru AN-AUD OUT 4)
Note: Refer to GPIO, Serial (COMM), and Analog Audio Connections (p. 2-10) for connector pinouts and important information	 Two AES audio outputs (AES OUT 1 and AES OUT 2)
	One GPI / 6Hz coaxial input (GPI 1)
regarding GPO electrical limits.	 One coaxial GPO with isolated return (GPO 1)
	Note: Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9902-2UDX-H-HDBNC or RM20-9902-2UDX-H-DIN, respectively.

2

9902-2UDX Rear I/O Module	Description
RM20-9902-2UDX-JImage: state sta	 Provides the following connections: Two 3G/HD/SD-SDI video input BNCs (SDI IN A and SDI IN B) One SDI/CVBS video input; selectable as 3G/HD, SD-SDI or CVBS (D/CVBS IN) Four analog balanced audio inputs (AN-AUD IN 1 thru AN-AUD IN 4) Two AES audio inputs (AES IN 1 and AES IN 2) Four 3G/HD/SD-SDI video outputs, selectable as processed or reclocked input (SDI OUT 1 thru SDI OUT 4) One CVBS video output (CVBS OUT) Four analog balanced audio outputs (AI-AUD OUT 4) Two AES audio outputs (AES OUT 1 and AES OUT 2) One GPI / 6Hz coaxial input (GPI 1) One coaxial GPO with isolated return (GPO 1) Note: Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9902-2UDX-J-HDBNC or RM20-9902-2UDX-J-DIN, respectively.
RM20-9902-2UDX-K	 Provides the following connections: Four 3G/HD/SD-SDI video inputs (SDI IN A thru SDI IN D; IN D-to-OUT 1 as passive RLY bypass) SIx AES audio inputs (AES IN 1 thru AES IN 6) Two analog balanced audio inputs (AN-AUD IN 1 and AN-AUD IN 2) Four 3G/HD/SD-SDI video outputs (SDI OUT 1 thru SDI OUT 4) Four AES audio outputs (AES OUT 1 thru AES OUT 4) COMM/GPIO RJ-45 connector Note: • Refer to GPIO, Serial (COMM), and Analog Audio Connections (p. 2-10) for connector pinouts and important information regarding GPO electrical limits. Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9902-2UDX-K-HDBNC or RM20-9902-2UDX-K-DIN, respectively.

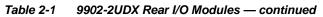

9902-2UDX Rear I/O Module	Description
RM20-9902-2UDX-L	Provides the following connections:
	 Four 3G/HD/SD-SDI video inputs (SDI IN A thru SDI IN D
SDI IN B O DO A SDI IN B O DO 7 - COM A RX	CVBS video input (CVBS IN)
Image: Constraint of the second se	 Eight 3G/HD/SD-SDI video outputs (SDI OUT 1A thru SDI OUT 4B; 1x2 DA output of each crosspoint output)
SDI PROC/RCK/ O O PREVIEW OUT 1B 2B	• CVBS video output (CVBS OUT)
B 4B ⊙1A ⊙ ⊙ Note: A and B outputs	COMM/GPIO RJ-45 connector
OUT IN are DA pairs of	ETHERNET 100/1000 BaseT Ethernet connector
O 2A CVBS⊙ O O 3A Image: CVBS O O O 3A Image: CVBS O O O 4A Image: CVBS O O	Note: Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9902-2UDX-L-HDBNC or RM20-9902-2UDX-L-DIN, respectively.
RM20-9902-2UDX-M/S	Split Rear Module. Provides each of the following connections for two 9902-2UDX cards:
	• Four 3G/HD/SD-SDI coaxial input BNCs (SDI IN A and SDI IN D)
⊙ SDI IN B ⊙ SDI IN B	 Six 3G/HD/SD-SDI Video Out BNCs (SDI OUT 1A thru SDI OUT 4B)
Sdiin c Sdiin c Sdiin d Sdiin d	Note: Available equipped with High-Density BNC (HDBNC) or DIN1.0/2.3 connectors as: RM20-9902-2UDX-M/S-HDBNC or
$ \begin{array}{c} \bigcirc 1 \mathbb{A} \\ SDI OUT \\ \bigcirc 2 \mathbb{A} \\ 3 \mathbb{A} \\ \bigcirc \\ 4 \mathbb{A} \\ \bigcirc \\ 4 \mathbb{B} \\ \bigcirc \\ $	RM20-9902-2UDX-M/S-DIN, respectively.

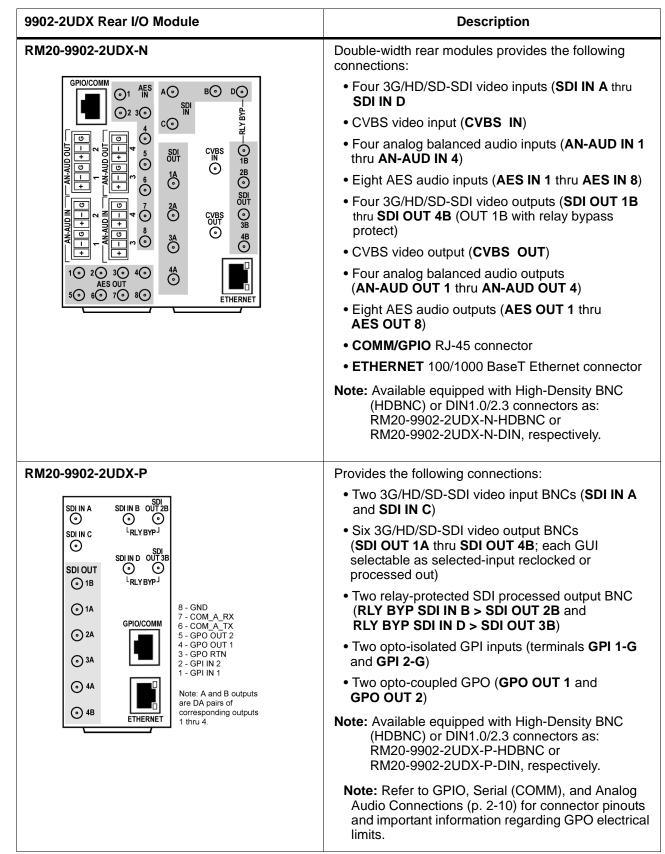

GPIO, Serial (COMM), and Analog Audio Connections

Figure 2-2 shows connections to the card multi-pin terminal block connectors. These connectors are used for card serial comm, GPIO, and balanced analog audio connections.

Note: It is preferable to wire connections to plugs oriented as shown in Figure 2-2 rather than assessing orientation on rear module connectors. Note that the orientation of rear module 3-wire audio connectors is not necessarily consistent within a rear module, or between different rear modules. If wiring is first connected to plug oriented as shown here, the electrical orientation will be correct regardless of rear module connector orientation.

Setting Up 9902-2UDX Network Remote Control

Perform remote control setup in accordance with Cobalt[®] reference guide "Remote Control User Guide" (PN 9000RCS-RM).

Note: If network remote control is to be used for the frame and the frame has not yet been set up for remote control, Cobalt[®] reference guide Remote Control User Guide (PN 9000RCS-RM) provides thorough information and step-by-step instructions for setting up network remote control of Cobalt[®] cards using DashBoard[™]. (Cobalt[®] OGCP-9000 and OGCP-9000/CC Remote Control Panel product manuals have complete instructions for setting up remote control using a Remote Control Panel.)

Download a copy of this guide by clicking on the **Support>Reference Documents** link at www.cobaltdigital.com and then select DashBoard Remote Control Setup Guide as a download, or contact Cobalt[®] as listed in Contact Cobalt Digital Inc. (p. 1-22).

 If installing a card in a frame already equipped for, and connected to DashBoard[™], no network setup is required for the card. The card will be discovered by DashBoard[™] and be ready for use.

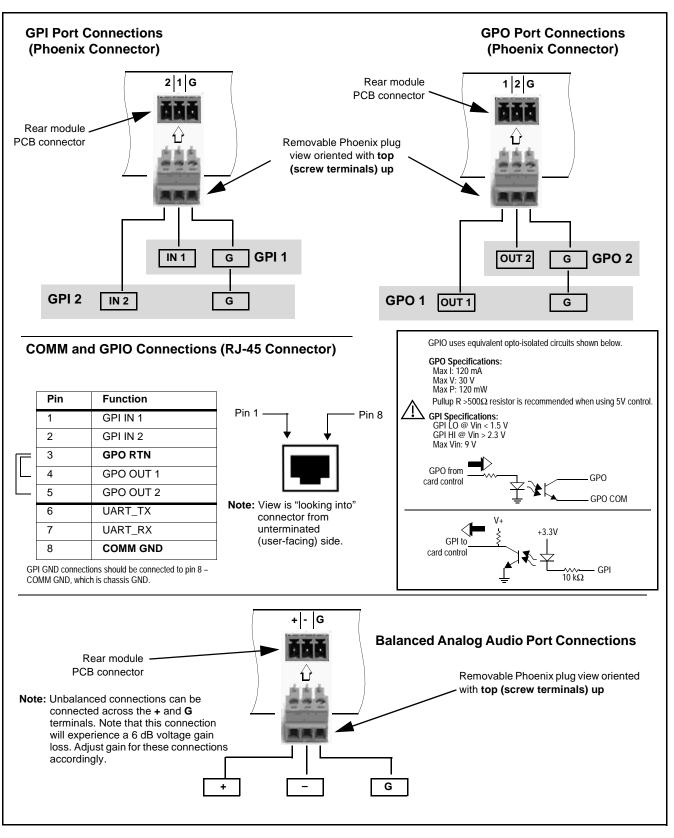


Figure 2-2 COMM, GPIO, and Analog Audio Connector Pinouts

This page intentionally blank

Chapter 3

Operating Instructions

Overview

This chapter contains the following information:

If you are already familiar with using DashBoard or a Cobalt Remote Control Panel to control Cobalt cards, please skip to 9902-2UDX Function Menu List and Descriptions (p. 3-10).

- Control and Display Descriptions (p. 3-1)
- Accessing the 9902-2UDX Card via Remote Control (p. 3-6)
- Checking 9902-2UDX Card Information (p. 3-8)
- Ancillary Data Line Number Locations and Ranges (p. 3-9)
- 9902-2UDX Function Menu List and Descriptions (p. 3-10)
- Troubleshooting (p. 3-76)

Control and Display Descriptions

This section describes the user interface controls, indicators, and displays for using the 9902-2UDX card. The 9902-2UDX functions can be accessed and controlled using any of the user interfaces described here.

The format in which the 9902-2UDX functional controls, indicators, and displays appear and are used varies depending on the user interface being used. Regardless of the user interface being used, access to the 9902-2UDX functions (and the controls, indicators, and displays related to a particular function) follows a general arrangement of Function Menus under which related controls can be accessed (as described in Function Menu/Parameter Overview below).

Note: When a setting is changed, settings displayed on DashBoard[™] (or a Remote Control Panel) are the settings as effected by the card itself and reported back to the remote control; the value displayed at any time is the actual value as set on the card.

Function Menu/Parameter Overview

The functions and related parameters available on the 9902-2UDX card are organized into function **menus**, which consist of parameter groups as shown below.

Figure 3-1 shows how the 9902-2UDX card and its menus are organized, and also provides an overview of how navigation is performed between cards, function menus, and parameters.

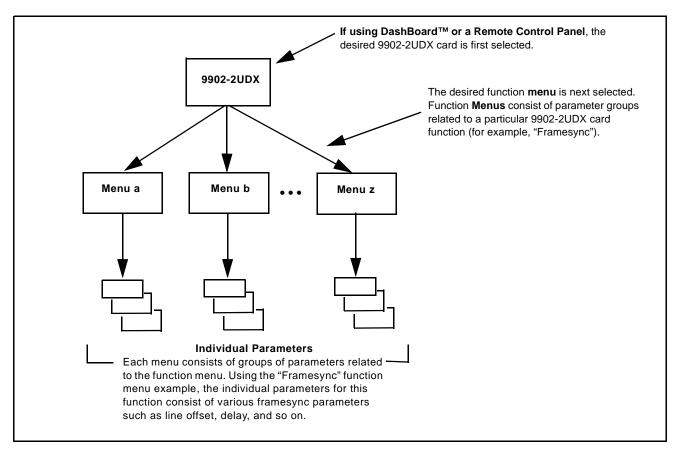


Figure 3-1 Function Menu/Parameter Overview

3

DashBoard[™] User Interface

(See Figure 3-2.) The card function menus are organized in DashBoard[™] using tabs. When a tab is selected, each parametric control or selection list item associated with the function is displayed. Scalar (numeric) parametric values can then be adjusted as desired using the GUI slider controls. Items in a list can then be selected using GUI drop-down lists.

Typical Selection List		Typical Status Display	DashBoard Tabs
\ \			/
\backslash			
\backslash			
		<u> </u>	
Output Audio Routing/Controls	Timecode Closed Captioning		Presets Admin ring Box YC Alignment 9 Silence Events Video Proc
Reference Viic Status	00:34:01:01.0		
Input VITC . status	Not Present		
Input ATC LTC Status	00:34:00:28.0 Field 1 Line 10		
Input ATC VITC Status	00:34:00:28.1 Field 1 Line 9, Field 2 Line 571		
Input LTC Status			
LTC Input	Embed Ch 1		
Mute LTC Audio on Input Loss	Disabled		
Incoming ATC Packet Removal	Disabled		
Source Priority 1	Viee Run		
Source Priority 2	Free Run		
Source Priority 5	Free Run		
Source Prior y 4	Free Run		
Offset	Advanced		
ffset Field			
) Offset Frame		2	5
	$\overline{\mathbf{n}}$		
/	\backslash		
/	\backslash		
Typical Button Control	Typical Parametric Control		

Figure 3-2 Typical DashBoard Tabs and Controls

Cobalt® Remote Control Panel User Interfaces

(See Figure 3-3.) Similar to the function menu tabs using DashBoardTM, the Remote Control Panels have a Select Submenu key that is used to display a list of function submenus. From this list, a control knob on the Control Panel is used to select a function from the list of displayed function submenu items.

When the desired function submenu is selected, each parametric control or selection list item associated with the function is displayed. Scalar (numeric) parametric values can then be adjusted as desired using the control knobs, which act like a potentiometer. Items in a list can then be selected using the control knobs which correspondingly act like a rotary switch.

Figure 3-3 shows accessing a function submenu and its parameters (in this example, "Video Proc") using the Control Panel as compared to using the card edge controls.

Note: Refer to "OGCP-9000 Remote Control Panel User Manual" (PN OGCP-9000-OM) or "OGCP-9000/CC Remote Control Panel User Manual" (PN OGCP-9000/CC-OM) for complete instructions on using the Control Panels.

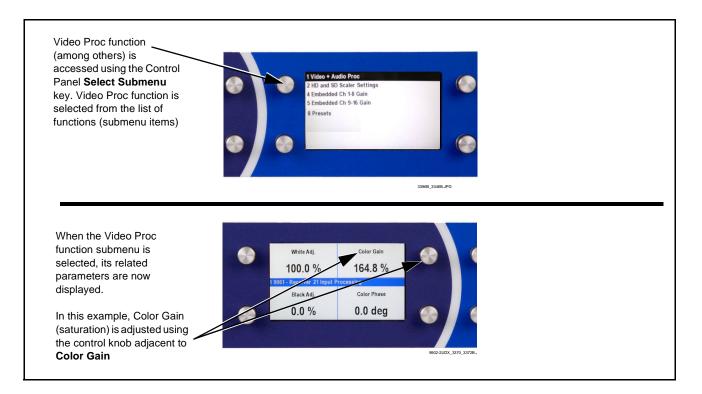


Figure 3-3 Remote Control Panel Setup of Example Video Proc Function Setup

Web HTML5 User Interface

(See Figure 3-4.) When equipped with a rear I/O module having an Ethernet port, the 9902-2UDX controls can be accessed via a web network connection with no additional remote control software needed. The web GUI shows the same tabs, controls and status displays as those accessed using DashBoardTM. This allows very convenient control access to the card, even if using a computer without DashBoard remote control or in case the frame network connection is down.

The card can be accessed in a web browser by entering the card IP address as set in the card **Admin** tab. (See Admin (p. 3-68) for more information.)

Note: Card must be equipped with a rear I/O module with an Ethernet port, or installed in a "smart" frame with per-slot Ethernet, to use html access. The card address is entirely independent of, and requires no association with, the frame openGear IP address.

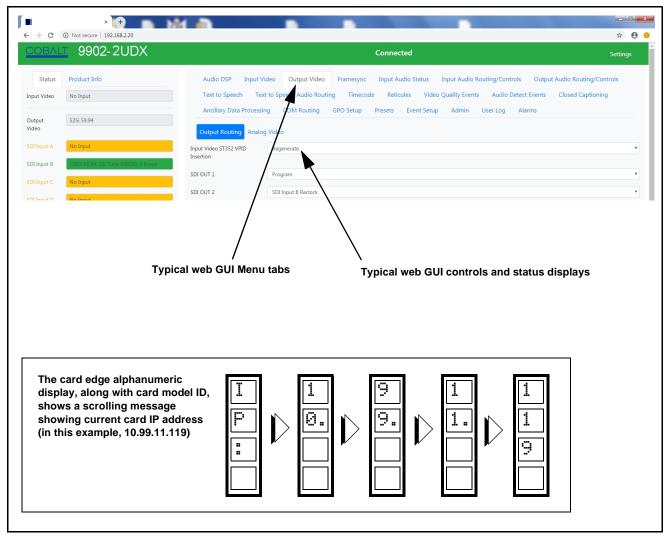



Figure 3-4 Typical Web GUI Tabs and Controls

Accessing the 9902-2UDX Card via Remote Control


Access the 9902-2UDX card using DashBoardTM or Cobalt[®] Remote Control Panel as described below.

Accessing the 9902-2UDX Card Using DashBoard™

- 1. On the computer connected to the frame LAN, open DashBoardTM.
- 2. As shown below, in the left side Basic View Tree locate the Network Controller Card associated with the frame containing the 9902-2UDX card to be accessed (in this example, "MFC-8320-N SN: 00108053").

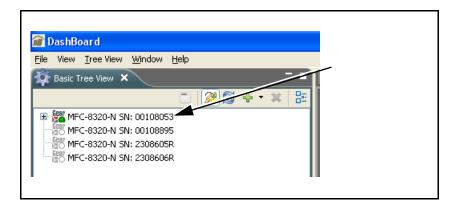

3. As shown below, expand the tree to access the cards within the frame. Click on the card to be accessed (in this example, "Slot 6: 9902-2UDX").

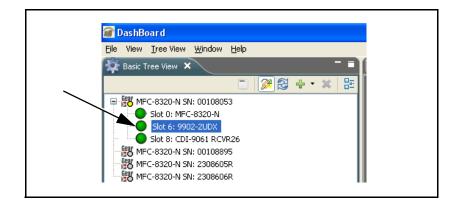


As shown on the next page, when the card is accessed in DashBoardTM its function menu screen showing tabs for each function is displayed. (The particular menu screen displayed is the previously displayed screen from the last time the card was accessed by DashBoardTM).

	vigation	Card Info				ion Menu and	
Tree Pane	e	Pane /			Contro	ols Pane	
						/	
oard <u>D</u> B View <u>Wi</u> ndow <u>H</u> elp							
•							ar Curr
c Tree View 🗙 🗖 🖬	HPF-9000_SW-D - S	ilot 6 - 9902-2UDX 🗙					
evice Configuration Files	Slot 6: 9902-2UDX		Path 1 Closed	SCTE 104 Insertion COM Routing Captioning AFD Moving B peech Text to Speech Audio Routing	GPO Setup Wings	Presets Event Setup Ancillary Data Processing Path 1	Admin User Log Alar Ancillary Data Processing Path 2
G-1078-ANC-MON F-9000_SW-D	Card state: 🔵 OK		Text to S	peech Text to Speech Audio Routing to Output Video Scaler	Timecode Re Framesync Input Aud	ticules Video Proc \ io Status Input Audio Routing.	/ideo Quality Events Audio Detect Eve Controls Output Audio Routing/Contr
Slot 0: HPF-FC Slot 2: 9223-D-HD-P	Connection: ONL	INE				input riting riting	
Slot 4: 9990-DEC-MPEG Slot 6: 9902-2UDX	Status Produ	ict Info					
Slot 11: 9903-UDX-ADDA Slot 14: 9933-EMDE-75/110				Status		Peak	
Slot 16: 9433-EMDE-ADDA-E Slot 18: 9902-DC-4K	Path 1 Input Video	1080i 59.94, OK Timi	Emb 1-2	Present - PCM	-40 dBFS/-35 dBFS		
Slot 20: 9415DA-SFP	Path 2 Input Video	Unlocked	Emb 3-4	Present - PCM	-30 dBFS/-25 dBFS		
	Path 1 Output Video		Emb 5-6	Present - PCM	-15 dBFS/-10 dBFS		
	Path 2 Output Video	1080i 59.94	Emb 7-8	Present - PCM	-5 dBFS/0 dBFS		
	Path 2 Output Video	5251 59.94	Emb 9-10	Absent	/		
	SDI Input A	Unlocked	Emb 11-12	Absent			
	SDI Input B	0 1080i 59.94, OK	Emb 13-14	Absent			
	SDI Input C	Unlocked	Emb 15-16	Absent			
	SDI Input D	Unlocked		Status		Peak	SRC
	CVBS Input	Unlocked		Absent			SRC On
	GPI1	O Open	AES 3-4	Absent	/		SRC On
	GP12	Open	AES 5-6	Absent			SRC On
	Reference	Unlocked (Ref 2	AES 7-8	Absent	/		SRC On
	Card Voltage	11.90 V	AES 9-10	Absent			SRC On
	Card Power	19.03 W	AES 11-12	Absent	/		SRC On
	Card Temp Front	23.1 C	AES 13-14	Absent	/		SRC On
	Card Temp Rear	43.8 C	AES 15-16	Absent			SRC On
	Card Temp FPGA	43.0 C amb 49.0 C c	120 10 10			Peak	site off

Accessing the 9902-2UDX Card Using a Cobalt® Remote Control Panel

Press the **Select Device** key and select a card as shown in the example below.

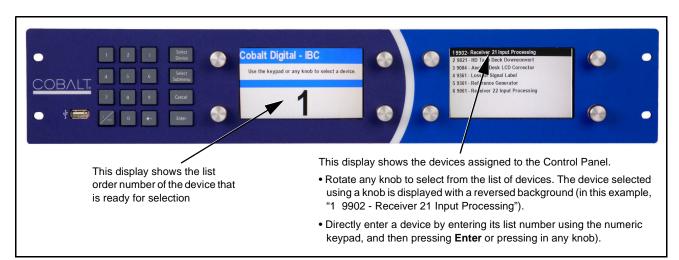

Checking 9902-2UDX Card Information

The operating status and software version the 9902-2UDX card can be checked using DashBoardTM or the card edge control user interface. Figure 3-5 shows and describes the 9902-2UDX card information screen using DashBoardTM and accessing card information using the card edge control user interface.

Note: Proper operating status in DashBoard[™] is denoted by green icons for the status indicators shown in Figure 3-5. Yellow or red icons respectively indicate an alert or failure condition. Refer to Troubleshooting (p. 3-76) for corrective action.

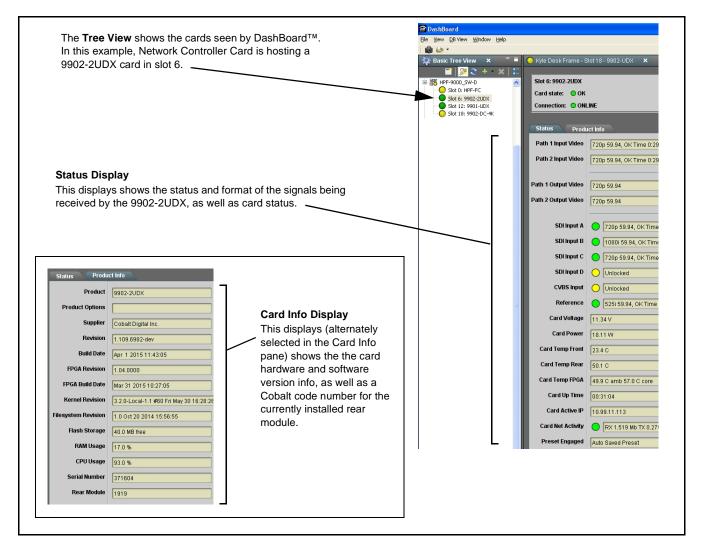


Figure 3-5 9902-2UDX Card Info/Status Utility

Ancillary Data Line Number Locations and Ranges

Table 3-1 lists typical default output video VANC line number locations for various ancillary data items that may be passed or handled by the card.

	Default Line No. / Range			
Item	SD	HD		
AFD	12 (Note 2)	9 (Note 2)		
ATC_VITC	13 (Note 2)	9/8 (Note 2)		
ATC_LTC	_	10 (Note 2)		
Dolby [®] Metadata	13 (Note 2)	13 (Note 2)		
SDI VITC Waveform	14/16 (Note 2)	—		
Closed Captioning	21 (locked)	10 (Note 2)		

Table 3-1 Typical Ancillary Data Line Number Locations/Ranges

Notes:

- 1. The card does not check for conflicts on a given line number. Make certain the selected line is available and carrying no other data.
- 2. While range indicated by drop-down list on GUI may allow a particular range of choices, the actual range is automatically clamped (limited) to certain ranges to prevent inadvertent conflict with active picture area depending on video format. Limiting ranges for various output formats are as follows:

Format	Line No. Limiting	Format	Line No. Limiting	Format	Line No. Limiting
525i	12-19	720p	9-25	1080p	9-41
625i	9-22	1080i	9-20		

Because line number allocation is not standardized for all ancillary items, consideration should be given to all items when performing set-ups. Figure 3-6 shows an example of improper and corrected VANC allocation within an HD-SDI stream.

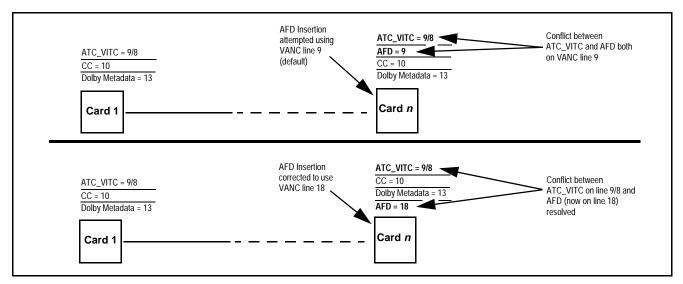


Figure 3-6 Example VANC Line Number Allocation Example

9902-2UDX Function Menu List and Descriptions

Table 3-2 individually lists and describes each 9902-2UDX function menu and its related list selections, controls, and parameters. Where helpful, examples showing usage of a function are also provided. Table 3-2 is primarily based upon using DashBoardTM to access each function and its corresponding menus and parameters.

Note: Option ⊡ For any DashBoard tabs on card not appearing in this manual, this indicates the function is an option and covered in a separate Manual Supplement. Please refer to card web page Product Downloads for pdf Manual Supplements covering these options.

On DashBoardTM itself and in Table 3-2, the function menu items are organized using tabs as shown below.

Output Video

Framesync

Framesync
Path 1 Path 2

ordinate tab along with its sub-tabs. Highlighted sub-tabs indicate that controls described are found by selecting this sub-tab (in this example, the **Path 1** sub-tab on the **Framesync** page). Note that selection of controls from one processing path to another is selected using this sub-tab which appears on many card function tabs.

Some functions use sub-tabs to help maintain clarity and organization. In these instances, Table 3-2 shows the

Function Menu Item	Page	Function Menu Item	Page
Input Video Controls	3-11	Reticules	3-44
Output Video Mode Controls	3-12	Wings Insertion	3-47
Scaler	3-14	AFD Processor Controls	3-48
Framesync	3-18	Moving Box Insertion	3-54
Input Audio Status	3-21	Ancillary Data Proc Controls	3-56
Input Audio Routing/Controls	3-22	COMM Ports Setup Controls	3-59
Video Quality Events	3-27	Presets	3-61
Audio Detect Events Setup Controls	3-28	GPO Setup Controls	3-63
Closed Captioning	3-29	Event Setup Controls	3-64
Video Proc/Color Correction	3-30	Admin	3-68
Output Audio Routing/Controls	3-33	User Log	3-71
Timecode	3-39	Alarms Setup Controls	3-72

The table below provides a quick-reference to the page numbers where each function menu item can be found.

Table 3-2 9902-2UDX Function Menu List

In	put Video			program	nanual or fail video inputs f received SI	and display		
 Input Video 	Input Video Source/Status				out video source m video inputs.	to be applied t	o the card I	Path 1 and
Path 1 Input Source Path 1 Input Video	SDI A SDI A SDI B SDI C SDI D Path 1 Program Path 2 Program CVBS Failover A to B Failover B to A	Te 0:06:15, 0 Errors		Note: • SDI corr • Inp pro Thi witt mo offs • Carr pat frar "up cor mu	inputs selected espondingly equ ut select also all cessing path out s allows "serial" out requiring ex dule. Serial jump vide identical pro- et between the t e should be take n is not applied a nesync Lock to I stream" path mu trol (for examples t be set for Path	uipped with inter ows internal co tput to the opport or cascaded pr ternal jumperin pering can, in a ogram video ou two streams. In to make cert as an input for input else Free ist be selected e, if Path 1 caso n 1 as lock sou	ended input onnection fro posite proces occessing c addition to o utput stream ain an outp the same p Run is sele using Lock cades to Pa rce).	ports. om one ssing path input. onnections rid rear I/O ther functions, is with a delay ut from a video ath. Also, if octed, the initial
Path 2 Input Source Path 2 Input Video	SDI B 1080i 59.94, OK Tir			sim usir	ess upstream loc ultaneously-use ng this card's Fra 3-18).	d inputs should	d be ref lock	
	1080159.94, OK Hr	ne 0.06.44, 0 Errors		SDI A Status	1080i_5994, OK Tim	2:05:51_0 Erroro		thru SDI D and Status show
				SDI B Status	1080p_5994, OK Tir		raster/f	format for all puts. If signal is
				SDI C Status	Input Format Disable		not pre	sent or is Unlocked is
				SDI D Status	Unlocked		display	ed. (These
				CVBS Status	525i_5994		also pr	indications are opagated to the nfo pane.)
Input SDI Ra			ha Inj I teri	as been rejec put SDI Rast ing	Disabled by Us ted from being p er Size / Frame ster or rate forr	bassed by card Rate Filtering).	ster size an (as describ	d/or frame rate bed below in
Default setting	s have all raster si	zes and frame ra	ates "o	checked", the	ereby providing r	no filtering (exc	lusion.)	
Allowed Raster S	izes 525i	625i 7	720p	1080i	1080psf	1080p		
Allowed Frame R	ates 23.98	24	25	29.97	30	50	59.94	60
In the example	below, only 720p	and 29.97 are c	hecke	ed, filtering al	lowed input to o	nly be 720p 29	.97 ("720p l	nalf-rate").
Allowed Raster S	izes 525i	625i 7	20p	1080i	1080psf	1080p		
Allowed Frame Ra	ates <u>23.98</u>		25	29.97	30	50	59.94	60
Note: Rates st								
11010. 110105 51	Note: Rates shown in selector are frame rates and not field rates.							


Table 3-2	9902-2UDX Function Menu List — continued

Output Video Output Routing Analog Video	Allows selection of each of the four video output coaxial connectors as processed SDI out or reclocked SDI out. Also provides CVBS parameter controls and test pattern output controls for card CVBS output.
ST352 VPID Insertion/Pass-Thru Select / Colorimetry Mark Select	 ST 352 VPID Insertion selects from default Regenerate mode and special Pass-Through mode (see below for important usage notes).
ST352 VPID Insertion Path 1 Regenerate	 Regenerate makes certain ST352 is marked for whatever the card is passing, or if the payload is being modified by the card. (An example of where ST352 would have to be modified would be if the card Framesync is user-set to change the frame rate from 59.94 to 60.)
ST352 VPID OETF Path 1 SDR ST352 VPID Colorimetry Path 1 BT.703	 Pass-Through will extract and preserve the ST352 information from input SDI, and re-insert it on the output regardless of any changes the card has locally done to identifying characteristics carried in the ST352 metadata.
	 In all normal usages, it is recommended to leave this control set to default Regenerate setting. This ensures that downstream devices will "see" ST352 that represents the payload being provided by the card. Pass-Through is only used in highly specialized cases where special ST352 data must be preserved (even if the data may not match the payload). ST 352 VPID OETF selects from SDR, HLG, PQ, or unspecified marking. ST 352 VPID Colorimetry selects from BT.709 or BT.2020 colorimetry marking. Note: This tab has identical independent controls for Path 1 and 2.
	Therefore, only the Path 1 controls are shown here.
Output Video Crosspoint	For each SDI output port supported by the card, provides a crosspoint for routing Path 1 and Path 2 program processed video or selected-input reclocked to an SDI output.
SDI OUT 1 Path 1 Program Path 1 Program Path 2 Program SDI Input A Reclock SDI Input B Reclock SDI Input C Reclock SDI Input D Reclock	In this example: - SDI OUT 1 set to use Path 1 Program video out - SDI OUT 2 set to use Path 2 Program video out - SDI OUT 3 set to output SDI Input A reclocked copy - SDI OUT 4 set to output SDI Input B reclocked copy Note: Outputs set to Input Reclocked will pass input SDI regardless of Input SDI Raster Size / Frame Rate Filtering. Input filtering applies only to card program video paths.
SDI OUT 2 Path 2 Program	
SDI OUT 3 SDI Input A Reclock	
SDI OUT 4 SDI Input B Reclock	

9902-2UDX Function Menu List — continued

Table 3-2


Output Video Output Routing Analog Video	Provides CVBS output parameter controls and test pattern output controls
CVBS Output Source Select CVBS Out Path 1 Program Path 1 Program Path 2 Program	Selects the card processing path to be sourced for the CVBS output.
CVBS Oversampling and Color Controls Oversampling Enable Color Enable	 Oversampling enables or disables video DAC oversampling. Oversampling can improve rendering of motion for down-conversions to the CVBS SD analog output. Color enables or disables chroma content in the CVBS output.
CVBS Test Pattern Generator Control Test Pattern Disable	Enables manual insertion (replacement) of CVBS output video to instead output 75% color bars.
DAC Custom/Cal Offset Controls DAC Gain Calibration Cb Calibration -6.00 Calibration to EEPROM Save	Gain and Cb calibration controls allow custom offsets from factory calibration values. Calibration to EEPROM stores custom offsets. Note: Factory default settings are recommended for typical use.

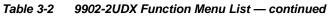

Scaler Path 1 Path 2	Provides up/down/cross-converter, aspect ratio controls, and user H/V controls.
	ols for both Path 1 and Path 2 using the Path 1 / Path 2 sub-tabs. Therefore et controls for other path using the respective sub-tab.
• Scaler Enable Control Scaler Enabled V Bypassed Enabled	Enables or disables Scaler function. Note: When scaler is disabled, all ancillary data is passed from input to output intact. If the scaler is enabled, ancillary data such as timecode and closed captioning must be set for re-insertion as desired. See Timecode (p. 3-39) and Closed Captioning (p. 3-29) for more information about insertion into scaled output video.
Input/Output Video Status Input Video 1080i_5994 Output Video 525i_5994	Displays signal format/status sent to scaler and output format/status. If invalid or no signal is present, No Input is displayed.
• Output Format Selector Output Format Match Input Match Input SD 720p - 50/59.94/60 720p - 25/29.97/30 720p film - 23.98/24 1080i - 50/59.94/60 1080p - 25/29.97/30 1080p film - 23.98/24 1080psf - 25/29.97/30 1080psf film - 23.98/24 1080psf - 25/29.97/30	Provides conversions to formats as shown.
Noise Reduction/Detail Enhancement Controls Noise Reduction Level Off Off Off Off Low Med High	Provides individual Noise Reduction and Detail Enhancement controls for optimizing scaled output where source is not optimum for scaled format

Table 3-2	9902-2UDX Function Menu List — continued

Scaler Path 1 Path 2	(continued)
• 3:2 Alignment Optimization Selector 3:2 Pulldown Alignment Free Run Free Run Input ATC_LTC Input ATC_VITC Reference VITC Input VITC Input VITC Input LTC Audio GPI 1: 6Hz Input GPI 2: 6Hz Input	Provides selection to optimize 3:2 pulldown conversion where timecode or other selections shown are to be relied upon to indicate frame transitions. In the example below, A-frame is aligned using 6Hz pulse imported via GPI. fid fid fid fid fid fid fid fid fid fid
Alignment Offset Selector Alignment Offset (Frames)	Based on alignment selection selected above, offsets A-frame by amount selected.
• Low-Latency PSF to Interlaced Control Low Latency PSF to I (Scaling Disabled) Disabled Enabled (Use Both Fields) Enabled (Use Top Field)	 Allows PsF to Interlaced conversions bypassing Scaler ARC and Pan controls to enhance processing latency performance over that available in normal mode. Disabled: This is card "normal" setting that locks out the low-latency processing function. Normal scaler processing latency (along with full ARC and pan control) is available with this setting. Enabled (Use Both Fields): This setting provides a highest-quality low-latency setting, and can be expected to provide an approximate latency of 12 msec for North American frame rates. Enabled (Use Top Field): This setting provides the lowest available latency with a slight reduction of motion smoothness due to alignment not waiting for both fields. This setting can be expected to provide an approximate latency of 6 msec for North American frame rates. Note: When either low latency mode is enabled, image ARC scaling and/ or panning is locked out.

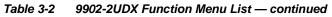

Scaler Path 1 Path 2	(continued)					
Standard Quick Set Aspect Ratio Conversion Selectors	 Selects between the standard preset Aspect Ratio Conversions (ARC) shown below or scaler follow AFD. Note: • The Scaler follow AFD control also appears on the AFD tab and is mutually ganged with the selection performed on either tab. Refer to AFD Processor Controls (p. 3-48) for more information. • This function is intended for aspect ratio adjustment of a particular signal without AFD considerations. • If ARC is being used on a case-by-case basis for a particular signal, it is easier to use the Scaler ARC tools described here. • If AFD is to be used to set and apply a standard AFD code label for ARC, use Follow AFD Settings. Do not perform ARC here; instead, perform ARC as described in the AFD function description per AFD Processor Controls (p. 3-48). 					
Scaler follow AFD Disabled Unity 1.0HV Pillar Box (Quick Set Apply						
User-defined Aspect Ratio Controls	Aspect Ratio Horizontal and Aspect Ratio Vertical controls adjust horizontal and vertical zoom percentage. Settings less than (<) 100% provide zoom-out; settings greater than (>) 100% provide zoom-in. (50% to 150% range in 0.1% steps; null = 100.0)					
Aspect Ratio Horizontal 50.0 100.0 Aspect Ratio Vertical 50.0 100.0	Buttons allow standard ARC presets to be applied to output video. For any setting, using the Horizontal or Vertical controls allow user custom settings. Pressing any of the preset buttons restores the ARC to the selected setting and overrides any previous custom settings.					

Scaler Path 1 Path 2	(continued)
• H Pan and V Pan Controls	H Pan control shifts horizontal center of image left (negative settings) or right (positive settings) (-74% to 74% range in 0.1% steps; null = 0.0) $\begin{array}{c} \hline \\ \hline $
Downscale Filtering Control Softer Jownscale Filtering Jowns	Adjusts the aggressiveness of sharpening or filtering applied to output video. Optimum setting results in overall perception of increased sharpness, while avoiding pattern noise artifacts. (Range is 0.50 thru 1.50 in 0.01 steps; null = 1.00)

Table 3-2	9902-2UDX Function Menu List — continued

Framesync Path 1 Path 2	Provides video frame sync/delay offset control and output control/loss of program video failover selection controls.
	controls for both Path 1 and Path 2 using the Path 1 / Path 2 sub-tabs. wn here. Set controls for other path using the respective sub-tab.
Framesync Enable/Disable Control Framesync Enable Framesync Enable Framesync Bypassed Framesync Enabled	Provides master enable/disable of all card framesync functions/controls.
• Lock Mode Select Lock Mode Reference 1 else Lock to Input Reference 2 else Lock to Input Lock to Input else Free Run Free Run Lock To Input Path 1 Input Path 1 Input Path 2	 Selects Frame Sync functions from the choices shown to the left and described below. Lock to Reference: Output video is locked to selected external reference received on the frame reference bus. (External reference signal Ref 1 / Ref 2 are distributed to the card and other cards via the Ref 1 / Ref 2 buses on the frame.) Note: If valid reference is not received, the Card state: O Reference Invalid indication appears in the Card Info status portion of DashBoard™, indicating invalid frame sync reference standard. Lock To Input Path selects the program video source which is used for ref. Note: If Lock to Input is used for framesync, any timing instability on the input video. Free Run: Output video is locked to the card internal clock. Output video is not locked to external reference. • For cases where minimum latency is desired (no framesync), Mode should be set to Lock to Input with Framesync set to Enabled. If Disabled is selected when using dual paths, severe video and audio corruption can occur.
• Output Rate Select Output Rate Match Input Video 23.98/29.97/59.94 24/30/60	 Allows frame rate to be outputted same as input video, or converted to from the choices shown to the left and described below. Auto – output video frame rate tracks with input video. 23.98/29.97/59.94 – forces standard North American frame rates. Can be used to convert 24/30/60 Hz camera frame rates to corresponding 23.98/29.97/59.94 standard North American frame rates. 24/30/60 – forces 24/30/60 frame rates. Can be used to convert 23.98/29.97/59.94 Hz frame rates to corresponding 24/30/60 Hz frame rates.

Framesync Path 1 Path 2	(continued)					
Initial Startup Format Select	Selects a frame sync format/rate to be invoked (from the choices show to the left) in the time preceding stable lock to external reference. Set this control to that of the intended external reference to help ensur smoothest frame sync locking. This control also sets the card test patte format where the card initial output at power-up is the internal pattern instead of program video.					
Program Video Output Mode Select Input Video Input Video Flat Field Freeze Test Pattern Snow	 Provides a convenient location to select between card program video output and other technical outputs from the choices shown to the left a described below. Input Video – card outputs input program video (or loss of signa choices described below). Flat Field (Black) – card outputs black flat field. Freeze – card outputs last frame having valid SAV and EAV code Test Pattern – card outputs standard technical test pattern (patter is selected using the Pattern drop-down described below). Snow – card outputs snow multi-color pattern. 					
Loss of Input Signal Selection Disable Outputs Disable Outputs Flat Field Freeze Test Pattern Snow	 In the event of program input video Loss of Signal (LOS), determines action to be taken as follows: Disable Outputs: Disable program video SDI outputs. Flat Field – go to flat field on program video output. Freeze – go to last frame having valid SAV and EAV codes on program video output. Test Pattern – go to standard technical test pattern on program video output (pattern is selected using the Pattern drop-down described below). Snow – output snow multi-color pattern. 					
Test Pattern Select Test Pattern 75% Bars 75% Bars 100% Bars SMPTE Bars Tartan Pluge Ramp H Sweep Pulse and Bar Multiburst Gray 5 Step Gray 10 Step Checkfield	Provides a choice of standard technical patterns (shown to the left) wh Test Pattern is invoked (either by LOS failover or directly by selecting Test Pattern on the Program Video Output Mode Select control).					



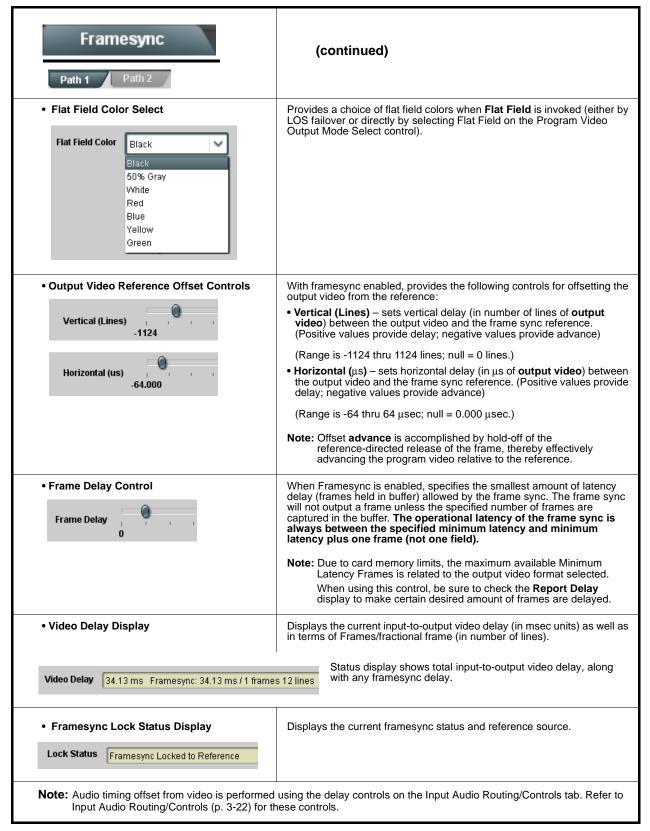


Table 3-2 9902-2UDX Function Menu List — continued


3

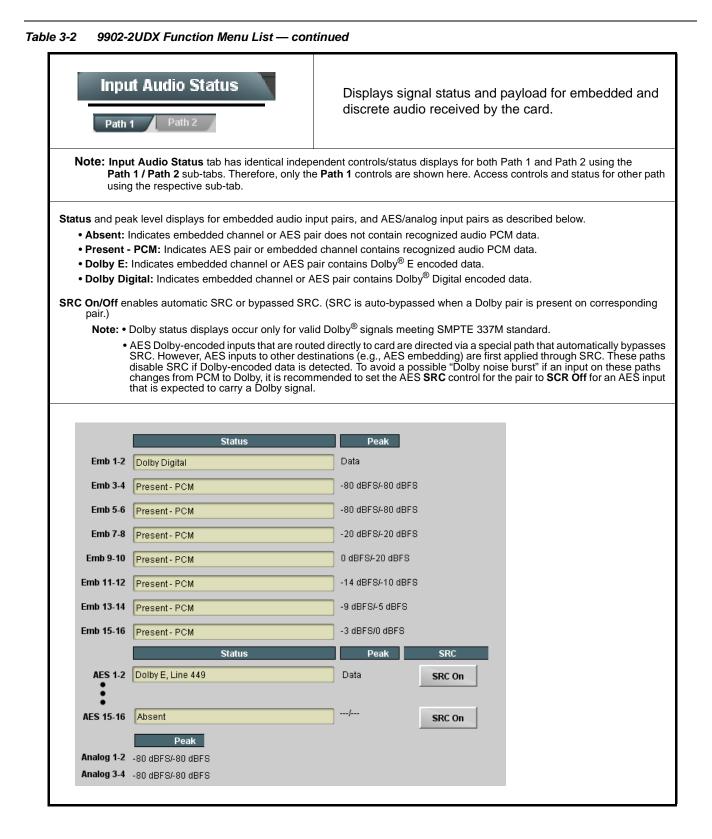

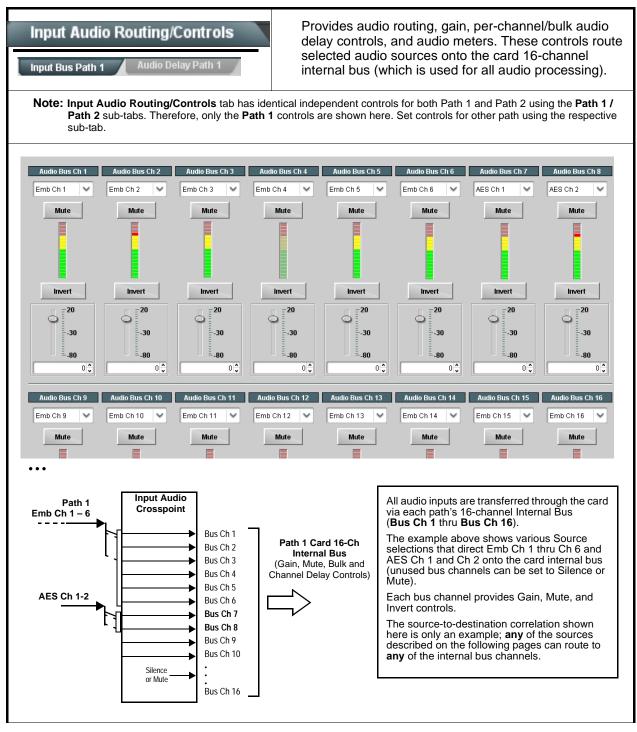

ed Ch 1 thru Ch 16 to bus channels Audio Bus Ch 1 thru Ch 16. tical to the controls described here for Bus Ch 1 . Therefore, only the Using the Source drop-down list, selects the audio input source to be bouted to the card bus channel from the following choices: Embedded input channel 1 thru 16 (Emb Ch 1 thru Emb Ch 16) AES input channel 1 thru 16 (AES Ch 1 thru AES Ch 16) Analog input channel 1 thru 4 (Analog Ch 1 thru Analog Ch 4) Input Flex Bus summed mix output nodes A thru P (see Input Flex M p. 3-25) Iote: • AES pair and analog channel count are dependent on rear I/C module used. Current rear modules may not support full input complement. • Embedded channel sources are only the embedded channels associated with the respective path.
 tical to the controls described here for Bus Ch 1. Therefore, only the Jsing the Source drop-down list, selects the audio input source to be buted to the card bus channel from the following choices: Embedded input channel 1 thru 16 (Emb Ch 1 thru Emb Ch 16) AES input channel 1 thru 16 (AES Ch 1 thru AES Ch 16) Analog input channel 1 thru 4 (Analog Ch 1 thru Analog Ch 4) Input Flex Bus summed mix output nodes A thru P (see Input Flex N p. 3-25) Iote: • AES pair and analog channel count are dependent on rear I/C module used. Current rear modules may not support full input complement. Embedded channel sources are only the embedded channels associated with the respective path.
 buted to the card bus channel from the following choices: Embedded input channel 1 thru 16 (Emb Ch 1 thru Emb Ch 16) AES input channel 1 thru 16 (AES Ch 1 thru AES Ch 16) Analog input channel 1 thru 4 (Analog Ch 1 thru Analog Ch 4) Input Flex Bus summed mix output nodes A thru P (see Input Flex No. 3-25) Iote: • AES pair and analog channel count are dependent on rear I/C module used. Current rear modules may not support full input complement. Embedded channel sources are only the embedded channels associated with the respective path.
 Analog input channel 1 thru 4 (Analog Ch 1 thru Analog Ch 4) Input Flex Bus summed mix output nodes A thru P (see Input Flex M b. 3-25) Iote: • AES pair and analog channel count are dependent on rear I/C module used. Current rear modules may not support full input complement. • Embedded channel sources are only the embedded channels associated with the respective path.
 Analog input channel 1 thru 4 (Analog Ch 1 thru Analog Ch 4) Input Flex Bus summed mix output nodes A thru P (see Input Flex M b. 3-25) Iote: • AES pair and analog channel count are dependent on rear I/C module used. Current rear modules may not support full input complement. • Embedded channel sources are only the embedded channels associated with the respective path.
 Input Flex Bus summed mix output nodes A thru P (see Input Flex N p. 3-25) Iote: • AES pair and analog channel count are dependent on rear I/C module used. Current rear modules may not support full input complement. • Embedded channel sources are only the embedded channels associated with the respective path.
 module used. Current rear modules may not support full input complement. Embedded channel sources are only the embedded channels associated with the respective path.
associated with the respective path.
Provides Mute and phase Invert channel controls, as well as peak le
neter for each output channel. (Meter shows level as affected by Level ontrol.)
Gain controls allow relative gain (in dB) control for the corresponding estination Embedded Audio Group channel.
80 to +20 dB range in 1.0 dB steps; unity = 0 dB)
lote: Although the card can pass non-PCM data such as Dolby [®] E o AC-3, setting the gain control to any setting other than default 0 corrupt Dolby data.

Input Audio Routing/Controls Input Bus Path 1 Audio Delay Path 1 Dolt	Audio Delay – Provides bulk (all four groups/master) and individual card audio bus channel delay offset controls and delay parametric displays.				
• Bulk (Master) Audio/Video Delay Control	Bulk Delay control adds bulk (all four groups) audio delay from any video delay (net audio delay offset setting adds delay in addition to any delay included by other actions). This control is useful for correcting lip sync problems when video and audio paths in the chain experience differing overall delays. (-33 to +3000 msec range in 0.01-msec steps; null = 0 msec). Image: Additional control is useful for correcting lip sync problems when video and audio paths in the chain experience differing overall delays. (-33 to +3000 msec range in 0.01-msec steps; null = 0 msec). Image: Additional control control is useful for correcting lip sync problems when video and audio paths in the chain experience differing overall delays. (-33 to +3000 msec range in 0.01-msec steps; null = 0 msec). Image: Additional control control is useful for correcting lip sync problems when video and audio paths in the chain experience differing overall delays. (-33 to +3000 msec range in 0.01-msec steps; null = 0 msec). Image: Additional control control is useful for correcting lip sync processed audio. This burst can damage monitors or other equipment if not considered. Gain on output should be reduced if performing large adjustments to delay.				
or removes delay in addition to any delay included to when video and audio paths in the chain experience (-800.0 to +800.0 msec range in 0.02 msec steps; r Delay Status shows current delay from video for the Note: • Maximum advance/delay offset is dependent	null = 0.0 msec) e corresponding audio channel.				
Audio/Video Delay Offse Channel 1 0 -800.00 -266.67 266.67 Channel 2 0 0 -800.00 -266.67 266.67 Channel 2 0 0 -800.00 -266.67 266.67	0.00 1620 samples / 33.8 ms 800.00 1620 samples / 33.8 ms 0.00 1620 samples / 33.8 ms				
Channel 16	0.00 Interview of the selectable of th				
Dolby E Embedding Alignment Control E Alignment Not aligned Alignment Select No Alignment Align to Reference Align to Output Video	 For incoming Dolby E data routed to the card audio bus (either over embedded channels or via AES embedding to the bus), aligns the embedded Dolby data corresponding to selection. Alignment line as a result of selection is shown in E Alignment status display. Note: Where a frame reference is available, it is recommended to use the Align to Reference selection. This helps ensure that the correct alignment is achieved even if the video is user delayed or output format is changed. Refer to "Preferred Alignment for Dolby E in HD Systems" (http://www.dolby.com/about/news-events/ newsletters-dtvaudio-dolby-e-alignment.html) for more information regarding Dolby E alignment. 				

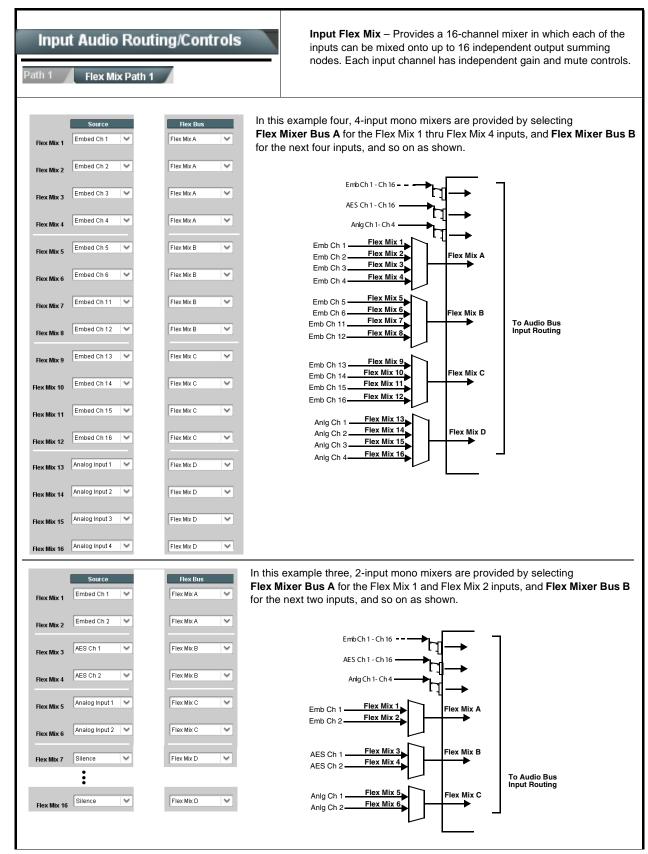

Input Audio Routing/Controls Path 1 Flex Mix Path 1	(continued)					
Therefore, only the Flex Mix 1 controls are	EX Mix 16 have controls identical to that described here for Flex Mix 1. shown here. should be considered and appropriately set. Unused input channels should					
• Flex Mix Input Channel Source/Bus Assignment	Using the Source drop-down list, selects the audio input source to be directed to the corresponding bus channel from the choices listed below. • Silence • Embed Ch 1 thru Embed Ch 16 • AES Ch 1 thru AES Ch 16 • Analog Ch 1 thru Analog Ch 4 The Flex Bus drop-down selects the bus (A thru P) to which the input is assigned to. Note: See the examples on the previous page showing various types of mixers using multiple flex buses.					
• Gain / Mute Control	Provides relative gain (in dB) control and a channel Mute checkbox. (-80 to +20 dB range in 0.1 dB steps; unity = 0.0 dB)					
Input Audio Routing/Controls	Clean and Quiet Switching (option +CQS only) – Allows SDI input selection to be changed from one source to another while ducking audio during controlled input video switching transitions to provide silence between input switches.					
 Note: • Clean audio switching is assured only for intentional, controlled switches via user control. Clean audio switching cannot be assured for failover switches. • Clean switching requires that both SDI signals (switch from and switch to) be stable and present, and of the same SDI format and rate. • Clean audio switching function is designed for PCM audio. This function does not assure clean decoded audio when switching from/to Dolby or other non-PCM audio. 						
Switching Enabled check box enables Clean and Quiet Switching. Duration sets the attack and decay ramp intervals (300 msec is recommended for typical use).						
Clean and Quiet Switching Enabled Ramp Time Duration (ms)	2500 5000					

 Table 3-2
 9902-2UDX Function Menu List — continued


3

	Option E	(Option +QC only) Sets quality check screening and thresholds for video quality event alerts. When a quality events occur, the event(s) can be used by the Event Setup function to invoke input routing or other changes.						
Event Status Indicator Event Status Disable Event Status No Inp Event Status Video Event Status Frozen	ut	Displays event status (based on criteria set below) for signal condition to be considered OK (green), or signal condition considered to be a quality alert event (red) due the condition exceeding the criteria threshold(s) se below.						
Position and Width Correct State Stat	100 50 ¢ 100 50 ¢ 100 50 ¢	Position and Width controls set the area of concern to be screened by the Quality Event function. X and Y Position controls set the origin point for the area of concern Origin (0,0) y = 100% X and Y Width controls set the size for the area of concern x and y @ 20% x and y @ 80%						
Threshold and Event Type Noise Immunity Event Type Frozen Engagement Holdoff (minutes) Frozen Disengagement Holdoff (minutes) Frozen Disengagement Holdoff (minutes) Black Engagement Holdoff (minutes) Black Engagement Holdoff (minutes)	High Slack, Frozen, or No Input Slack, Frozen, o	 Sets the thresholds for black, frozen, and/or no video event type to be considered. Also provides holdoff controls for event trigger engagement and disengagement. Noise Immunity sets the relative noise levels that are rejected in the course of black event assessment (Low, Medium, or High). Event Type selects the defect events (black, frozen, or no input) to be screened. Engagement and Disengagement Holdoff controls set the time (in msec) where, when time is exceeded, an event is to be considered a valid alert event, and when event time is has ceased, an alert event is cleared. Disengagement Holdoff sets the time (in msec) where, when event time is has ceased, an alert event is cleared. 						
Black Disengagement Holdoff (minutes) Black Disengagement Holdoff (ms)	3000							

Table 3-2	9902-2UDX Function Menu List — continued


Audio Detect Events Option 📧					n 🔁	(Option +QC only) Sets audio level screening and thresholds for audio silence/presence event alerts on embedded and/or AES discrete audio in. When an audio events occur, the event(s) can be used by the Event Setup function to invoke input routing or other changes.								
Any combination of embedded and AES input channels can be selected to be screened for silence or presence. In the example here, Audio Detect Event 1 is set to trigger if audio on any of channels Emb Ch 1 thru Ch 6 fall below the selected threshold for an interval exceeding the selected threshold. Status indicators for each channel show silence (S) / presence (P) status based on the configured thresholds. Up to eight independent audio silence/presence events can be set to be screened (with descending priority of consideration from Event 1 down to Event 8). This status here can be propagated to the Presets > Event Triggers sub-tab controls to issue a GPO, preset engage, or other command when audio silence events are detected.									nreshold us based tion from e a GPO,					
	Emb 1 (Ch 1	Emb 1 Ch	2	Emb 1 Ch 3	Ē	Emb 1 Ch 4	Emb 1 Ch 5	Emb 1 Ch 6	Emb 1 C	Ch 7	Emb 1 Ch	8 •••	AES Chan 16
Status: S=Silent P=Present			P		P	P		P	P	P		P		S
Audio Detect Event 1	Silence	~	Silence	~	Don't Care 🗸 🗸	Do	on't Care 🗸 🗸	Don't Care 🗸	Don't Care 🗸	Don't Care	~	Don't Care	~	Don't Care 💙
Audio Detect Event 2	Presence	~	Presence	~	Don't Care 🛛 🗸	Do	in't Care 🛛 🗸	Don't Care 🖌 🗸	Don't Care 🗸 🗸	Don't Care	• •	Don't Care	\sim	Don't Care 🗸
	:													
Audio Detect Event 8	Don't Care	~	Don't Care	~	Don't Care 🗸 🗸	Do	in't Care 🗸 🗸	Don't Care 🗸 🗸	Don't Care 🗸	Don't Care	~	Don't Care	~	Don't Care 🗸 🗸
Audio Failover Threshold (dBFS)		60 🗘												
Trigger Holdoff (minutes)		0												
Trigger Holdoff (ms)	50	00 🗘												
Trigger Release (minutes)		0 🗘												
Trigger Release (ms)		0 🗘												
 Audio Failover Threshold sets the dBFS level at which channel content is considered to be silent, and correspondingly also a transition back to an untriggered condition with resumption of audio for the selected embedded channels. If the selected channels maintain levels above the selected Audio Failover Threshold, no triggering is invoked. Trigger Holdoff sets the period of time in which selected channel silence must occur before an Audio Silence Event trigger goes true. Release Holdoff control sets the time in which the trigger is revoked upon an event false condition. Note: Default threshold and holdoff settings shown here are recommended for typical use. "Don't Care" setting may be labeled as Don't Care, DC, or DSBL (disabled). All notations mean ignoring the channel from event triggering. Selections other than Don't Care work as an AND function. Where multiple selections are set, a true (trigger) condition is not propagated unless all selected channels experience the configured criteria. (In the example shown above, both channels Emb Ch 1 and Emb Ch 2 need to experience a Silence event for a trigger to be propagated.) 														

Table 3-2	9902-2UDX Funct	ion Menu List — cor	ntinued				
N		ing tab has identical inde	Provides support for closed captioning setup.Also provides controls for setting closed captioning absence and presence detection thresholds. ependent controls for both Path 1 and Path 2 using the Path 1 / Path 2 rols are shown here. Set controls for other path using the respective sub-tab.				
	 SMPTE embedde 		essing are correlated only to the path selected. CC data cannot be				
•	Closed Captioning Inp Input Status CDP Pack	et on Line 16	 Displays incoming Closed Captioning status as follows: If closed captioning is present, a message similar to the example shown is displayed. If no closed captioning is present in the video signal, Not Present or Present or Present displayed. 				
Note	The closed captioning	function assesses cdp	Disabled is displayed. Rejected Due To message can appear due to the items described below. <i>_identifier, cdp_frame_rate, ccdata_present,</i> and <i>caption_service_active</i> the determinations listed below. Refer to CEA-708-B for more information.				
	Message	Description					
	Unsupported Frame Rate	supported by the card					
	Data Not Present	Packet is marked from	n closed captioning source external to the card that no data is present.				
	No Data ID	Packet from closed ca 0x9669 as the first wo	aptioning source external to the card is not properly identified with ord of the header (unidentified packet).				
h	In this case, closed captioning data The closed captioning function does not supp Closed Captioning Remove/Regenerate and HD Insertion Line Controls Incoming Packet Removal If Regenerate Closed Captioning is enabled incoming packets will always be removed.						
	Closed Captioning Regenerate Source Select Progra	m Input m Input Video Input	 The card does not check for conflicts on a given line number. Make certain selected line is available and carrying no other data. 				
	HD Output Line 9						
	Presence/Absence Ch Presence Event Delay (sec)	0	Displays CC presence and/or absence event status. This status can be propagated to the Presets > Event Triggers tab controls to issue a card GPO or other command when CC presence/absence events are detected.				
	Presence Event Status	0 Active	Controls for both presence and absence provide for a holdoff time (in seconds) where, when time is exceeded, an event is to be considered a valid alert event.				
	Absence Event Delay (sec) Absence Event Status	Inactive	Note: These controls are present only in conjunction with option +QC.				

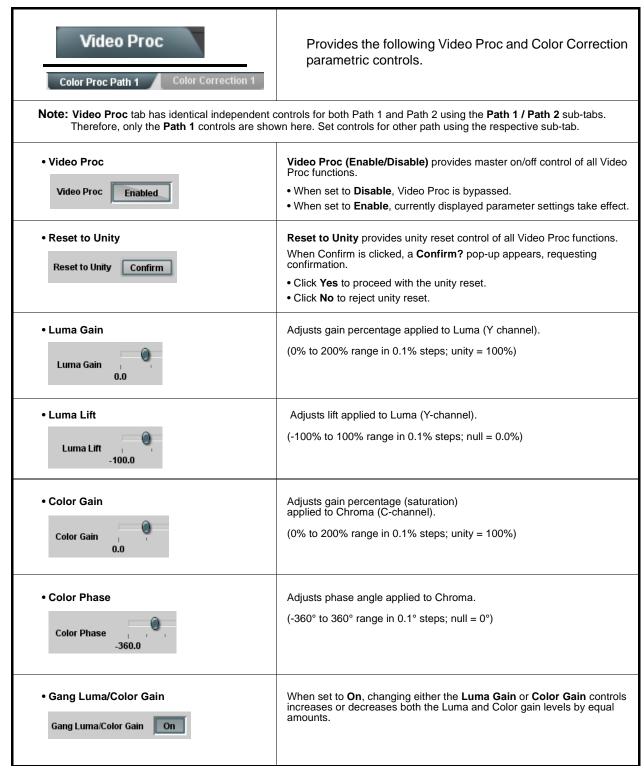

3

Video Proc	Option ⊡ (Option +COLOR only) Provides color corrector functions f the individual RGB channels for the card program video pa
Color Corrector Color Corrector On	 Color Corrector (On/Off) provides master on/off control of all Color Corrector functions. When set to Off, all processing is bypassed. When set to On, currently displayed parameters settings take effect.
Reset to Unity Reset to Unity Confirm	 Reset to Unity provides unity reset control of all Color Corrector functions. When Confirm is clicked, a Confirm? pop-up appears, requesting confirmation. Click Yes to proceed with the unity reset. Click No to reject unity reset.
• Luma Gain R-G-B controls Green Green IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII	Separate red, green, and blue channels controls for Luma Gain, Black Gain, and Gamma curve adjustment. Gain controls provide gain adjustment from 0.0 to 200.0% range in 0.1 steps (unity = 100.0) Gamma controls apply gamma curve adjustment in 0.125 to 8.000 ran in thousandths steps (unity = 1.000) Each of the three control groups (Luma, Black, and Gamma have a Gang Column button which allows settings to be proportionally chang across a control group by changing any of the group's controls.
• Black Gain R-G-B controls Green Green Blue -100.0 0.0 0.0 0.0 0.0 0.0 0.0 0.0 0.0 0.	
• Gamma Factor R-G-B controls Green Green Blue 0.125 3.125 5.000 8.000 1.000	
Red 0.125 3.125 5.000 8.000 ↓	

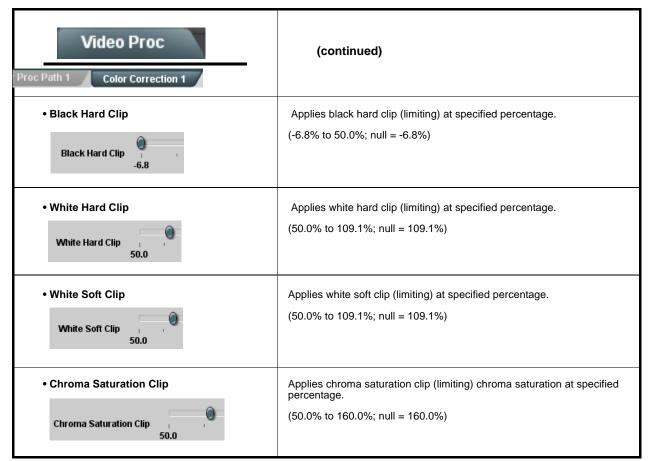

3-2 9902-2UDX Function Menu List — continued	
Output Audio Routing/Controls Embedded Output Path 1 Downmixer Path 1	Provides an audio crosspoint allowing the audio sour selection for each embedded audio output channel. Also provides Gain, Phase Invert, and Muting contro and peak level meters for each output channel.
 sub-tabs. Therefore, only the Path 1 controls Embedded Ch 2 thru Embedded Ch 16 because described here for Embedded Ch 1. Ther Although either path can embed from, and 	ent controls for both Embedded Path 1 and Path 2 using the Path 1 / Path ols are shown here. Set controls for other path using the respective sub- have controls identical to the Source , Gain , Mute , and Invert controls efore, only the Embedded Ch 1 controls are shown here. I de-embed to, discrete audio interfaces, the embedded channels within within the respective path's 4-group embedded audio (e.g., Path 1 2 Emb Ch 1).
Group Enable/Disable Controls Group 1 Group 2 Group 3 Group 4 Enabled Enabled Enabled	Allows enable/disable of embedded audio groups 1 thru 4 on card program video output to accommodate some legacy downstream systems that may not support all four embedded audio groups.
	Note: Changing the setting of this control will result in a noise burst in groups. This control should not be manipulated when carrying on-air content.
• Embedded Output Channel Source	 Using the drop-down list, selects the audio input source to be embedd in the corresponding embedded output channel from the following choices: Card Audio Bus Ch 1 thru Ch 16 (Path 1 or Path 2) Built-in Tone generators Tone n (-20 dBFS level tone generators with n being frequencies of 100, 200 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) Flex Bus A thru P mixer sum node outputs Option I Audio LTC (Path 1 or Path 2) Downmixer L (Path 1 or Path 2) Downmixer R (Path 1 or Path 2) Option I Embedded Data L and R (SMPTE 337 non-PCM data embedding with option +ANC) Note: Embedded data pair is pair associated with selected path only.
• Channel Mute/Phase Invert/Gain Controls and Peak Level Display	 Provides Mute and phase Invert channel controls, as well as peak lever meter for each output channel. (Meter shows level as affected by Lever control.) Gain controls allow relative gain (in dB) control for the corresponding destination Embedded Audio Group channel. (-80 to +20 dB range in 1.0 dB steps; unity = 0 dB) Note: Although the 9902-2UDX can pass non-PCM data such as Dolb E or AC-3, setting the gain control to any setting other than defa 0 will corrupt Dolby data.

Fable 3-2 9902-2UDX Function Menu List — continued		
Output Audio Routing/Controls	Provides audio down-mix audio routing selections that multiplexes any five audio channel sources into a stereo pair.	
 Note: • Downmixer sub-tabs offer identical independent controls for both Embedded Path 1 and Path 2. Therefore, only the Path 1 controls are shown here. Set controls for other path using the respective sub-tab. • Downmix L/R channel pair sources are available only within a respective path (e.g., Path 1 downmixed channels can only be sourced from Path 1). 		
Downmixer Source Controls	Left Channel Input thru Right Surround Channel Input select the five audio bus source channels to be used for the downmix.	
Left Channel Input Audio Bus Ch 1 Path 1	Downmix channels Downmixer L and Downmixer R are available as sources for embedded, AES, or analog audio outputs using the Channel	
Right Channel Input Audio Bus Ch 2 Path 1	Source controls described above.	
Center Channel Input Audio Bus Ch 3 Path 1 💙		
Left Surround Channel Input Audio Bus Ch 5 Path 1		
Right Surround Channel Input Audio Bus Ch 6 Path 1 🗸		
• Center Mix Ratio Control	Adjusts the attenuation ratio of center-channel content from 5-channel source that is re-applied as Lt and Rt content to the DM-L and DM-R stereo mix.	
	 0 dB setting applies no ratiometric reduction. Center channel content is restored as in-phase center-channel content with no attenuation, making center-channel content more predominate in the overall mix. 	
	 Maximum attenuation setting (-80 dB) applies a -80 dB ratiometric reduction of center-channel content. Center-channel content is restored as in-phase center-channel content at a -80 dB ratio relative to overall level, making center-channel content less predominate in the overall mix. 	
	(20 dB to -80 dB range in 0 dB steps; default = 0 dB)	
	Note: Default setting is recommended to maintain center-channel predominance in downmix representative to that of the original source 5-channel mix.	
• Surround Mix Ratio Control	Adjusts the attenuation ratio of surround-channel content from 5-channel source that is re-applied as Lo and Ro content to the DM-L and DM-R stereo mix.	
	 0 dB setting applies no ratiometric reduction. Surround-channel content is restored with no attenuation, making Lo and Ro content more predominate in the overall mix. 	
	 Maximum attenuation setting (-80 dB) applies a -80 dB ratiometric reduction of surround-channel content. Surround-channel content is restored at a -80 dB ratio relative to overall level, making surround-channel content less predominate in the overall mix. 	
	(20 dB to -80 dB range in 0 dB steps; default = 0 dB)	
	Note: Default setting is recommended to maintain surround-channel predominance in downmix representative to that of the original source 5-channel mix.	

Output Audio Routing/Controls	inputs car nodes. Th	be mixed e input sou dded audio	Provides a 16-char onto up to 16 inde urces include audi o paths. Each inpu ols.	ependent o o bus chan	utput summir	ng e card
In this example, audio bus channels 1 thru 8 from each path are summed with the like-channel of the other path. These summed outputs can then be outputted on any of the card audio outputs. The output flex bus allows cross-sourcing from both Path 1 and Path 2 embedded internal Audio Bus sources to the Path 1 and Path 2 discrete output audio crosspoints.						
			Source	~	Flex Bus	
1 Flex Mix 2 Flex Bus A		Flex Mix 1	Audio Bus Ch 1 Path 2	~	Flex Bus A	~
Flex Mix 3		Flex Mix 2	Addio Bus Cil T Patri 2	-		•
2 Flex Mix 4 Flex Bus B		Flex Mix 3	Audio Bus Ch 2 Path 1	~	Flex Bus B	~
	Path 1 / Path 2 tput Audio	Flex Mix 4	Audio Bus Ch 2 Path 2	~	Flex Bus B	~
	osspoints	Flex Mix 5	Audio Bus Ch 3 Path 1	~	Flex Bus C	~
Flex Mix 15		:				
8 Flex Mix 16		Flex Mix 15	Audio Bus Ch 8 Path 1	~	Flex Bus P	~
Path 1		Flex Mix 16	Audio Bus Ch 8 Path 2	~	Flex Bus P	~
Note: For each Flex Mix input channel, its source should be considered and appropriately set. Unused input channels should be set to the Silence selection. • Flex Bus Input Channel Source/Bus Assignment Using the Source drop-down list, selects the audio input source to be directed to the corresponding bus channel from the choices listed below Flex Bus Flex Mix Input 1 Flex Bus Flex Mix Input 1 Flex Bus Flex Mix Input 1 Flex Bus Imput 1 Flex Bus A Imput 1 Flex Bus Ch 1 Path 1 Imput 1 Flex Bus drop-down selects the bus (A thru P) to which the input is assigned to. Imput 1) be below.			
• Gain / Mute Control	Provides relat	ve gain (ir	n dB) control and a	a channel N	lute checkbo	x.
Mute -30 -80	(-80 to +20 dE	range in (0.1 dB steps; unity	r = 0.0 dB)		

ble 3-2 9902-2UDX Function Menu List — continued		
Output Audio Routing/Controls	Provides an audio crosspoint allowing the audio source selection for each AES audio output channel. Also provides Gain, Phase Invert, and Muting controls and peak level meters for each output channel.	
Ch 1. Therefore, only the AES Out Ch 1 of	ion should be considered and appropriately set. Unused destination	
• AES Output Channel Source	 Using the drop-down list, selects the audio input source to be embedded in the corresponding embedded output channel from the following choices: Card Audio Bus Ch 1 thru Ch 16 (Path 1 or 2) Built-in Tone generators Tone n (-20 dBFS level tone generators with n being frequencies of 100, 200, 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) Flex Bus A thru P mixer sum node outputs Option ≅ Audio LTC (Path1 or 2) Downmixer L (Path1 or 2) Option ≅ Embedded Data L and R (Path 1 or 2) (SMPTE 337 non-PCM data embedding with option +ANC) 	
• Channel Mute/Phase Invert/Gain Controls and Peak Level Display	 Provides Mute and phase Invert channel controls, as well as peak level meter for each output channel. (Meter shows level as affected by Level control.) Gain controls allow relative gain (in dB) control for the corresponding destination AES output channel. (-80 to +20 dB range in 1.0 dB steps; unity = 0 dB) Note: Although the 9902-2UDX can pass non-PCM data such as Dolby[®] E or AC-3, setting the gain control to any setting other than default 0 will corrupt Dolby data. 	

Tal

Provides an audio crosspoint allowing the audio source Output Audio Routing/Controls selection for each analog audio output channel. Also provides Gain, Phase Invert, and Muting controls and Analog Audio Out peak level meters for each output channel. Analog Output Channel Source Using the drop-down list, selects the audio input source to be embedded in the corresponding embedded output channel from the following choices: AN Out Ch 1 • Card Audio Bus Ch 1 thru Ch 16 (Path 1 or 2) Audio Bus Ch 1 Path 1 \sim • Built-in Tone generators Tone n (-20 dBFS level tone generators with *n* being frequencies of 100, 200, 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) • Flex Bus A thru P mixer sum node outputs • Option 🔁 Audio LTC (Path 1 or 2) • Downmixer L (Path 1 or 2) • Downmixer R (Path 1 or 2) Provides Mute and phase Invert channel controls, as well as peak level Channel Mute/Phase Invert/Gain Controls meter for each output channel. (Meter shows level as affected by Level and Peak Level Display control.) Gain controls allow relative gain (in dB) control for each corresponding Mute Mute destination analog audio out channel. (-80 to +20 dB range in 1.0 dB steps; unity = 0 dB) Invert Invert 20 20 -30 -30 E-80 -- 80 0 🗘 0 🗘

Output Audio Routing/Controls Analog Audio Out Downmixer	(continued)
• Analog Output Channel Source	 Using the Source drop-down list, selects the audio input source to be routed to the corresponding analog audio output channel from the following choices: Card Audio Bus Ch 1 thru Ch 16 (Path 1 or Path 2) Built-in Tone generators Tone n (-20 dBFS level tone generators with n being frequencies of 100, 200, 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) Flex Bus A thru P mixer sum node outputs Option Audio LTC (Path 1 or Path 2) Downmixer L (Path 1 or Path 2)
• Channel Mute/Phase Invert/Gain Controls and Peak Level Display	 Provides Mute and phase Invert channel controls, as well as peak level meter for each output channel. (Meter shows level as affected by Level control.) Gain controls allow relative gain (in dB) control for each corresponding destination analog audio out channel. (-80 to +20 dB range in 1.0 dB steps; unity = 0 dB)

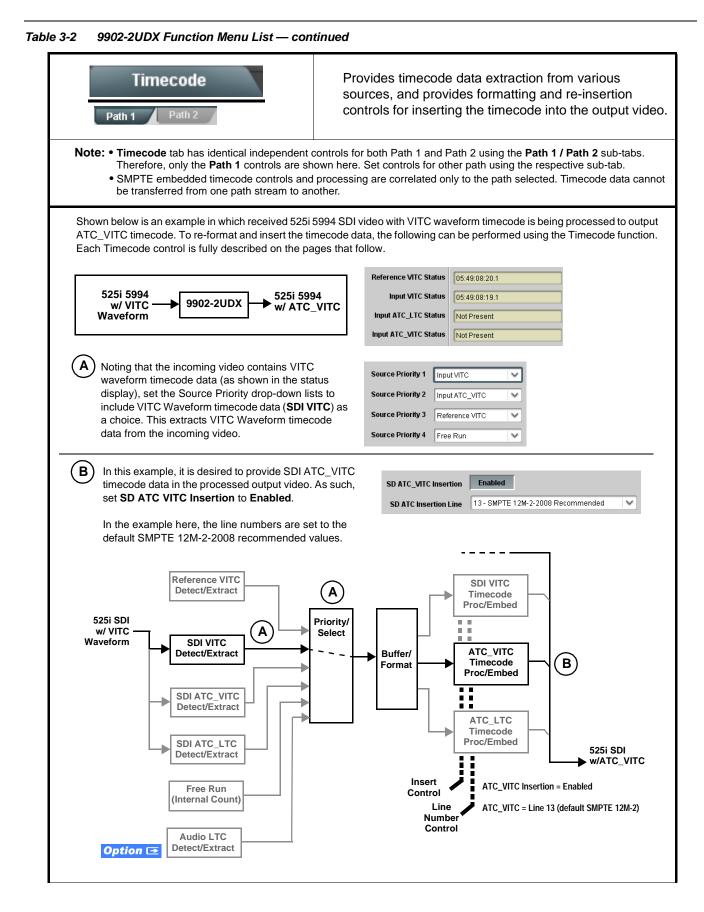


Table 3-2 9902-2UDX Function Menu List — continued		
Timecode Path 1 Path 2	(continued)	
Option E Audio LTC controls described bel allows audio LTC from an audio channel to be used a the output video.	low only appear on cards with +LTC licensed optional feature. This feature is a timecode source, with conversion to a selected SMPTE 12M format on	
Timecode Source Status Displays	Displays the current status and contents of the four supported external timecode formats shown to the left.	
Reference VITC Status 06:09:15:06.0 Input VITC Status 06:09:15:05.0	 If a format is receiving timecode data, the current content (timecode running count and line number) is displayed. 	
Input VITC Status 06:09:15:05.0 Input ATC_LTC Status Not Present Input ATC_VITC Status 06:09:15:05.0 Field 1 Line 13, Field 2 Line 278	 If a format is not receiving timecode data, Not Present is displayed. 	
LTC Input Control	Selects source to be used by card to receive LTC as listed below. • RS-485 over COM1 or COM 2	
LTC Input COM 1 (RS485)	Audio LTC over Emb Ch 1 thru Ch 16 Audio LTC over AFC Ch 4 thru Ch 46	
COM 1 (RS485)	 Audio LTC over AES Ch 1 thru Ch 16 Audio LTC over Analog audio Ch 1 thru Ch 4 	
COM 2 (RS485) Embed Ch 1	Note: • Audio LTC Source must be appropriately set for card to receive and process received LTC.	
Analog Input 8	 If COM 1 or COM 2 is used for LTC receive, the port function must be set for LTC. See COMM Ports Setup Controls (p. 3-59) for more information. 	
	 Card audio inputs will not center inputs with DC offset. If input has DC offset, the source may need to be capacitively coupled to remove the offset. 	
	 LTC embedded channel selections are only channels associated with the selected path. 	
Mute LTC Control	Allows LTC audio or RS-485 output to mute upon loss of selected timecode inputs.	
Mute LTC Audio on input loss Enabled	• When set to Enabled and input timecode is lost:	
	 • RS-485 LTC output goes to frozen state. • Audio LTC output mutes. 	
	When set to Disabled and input timecode is lost:	
	 RS-485 LTC output keeps counting, with count value being free-run count. 	
	 Audio LTC output is not muted, with count value being free-run count. 	
	Note: If muting upon loss of a particular input format is desired, set all Source Priority 1 thru 4 to that particular input format. If this is not done, the card failover timecode selection may substitute another format choice for the format not being received.	
Incoming ATC Packet Removal Control Incoming ATC Packet Removal Disabled	Enables or disables removal of existing input video ATC timecode packets from the output. This allows removal of undesired existing timecodes from the output, resulting in a "clean slate" where only desired timecodes are then re-inserted into the output. (For example, if both SDI ATC_VITC and ATC_LTC are present on the input video, and only ATC_LTC is desired, using the Removal control will remove both timecodes from the output. The ATC_LTC timecode by itself can then be re-inserted on the output using the other controls discussed here.)	
	Note: Set this control to Enabled if Free-Run timecode is to be used. If incoming packets are not removed, output embedded SMPTE timecode may alternate between free-run and embedded SMPTE timecode values.	

3


Timecode Path 1 Path 2	(continued)	
lower priority, the card will indeed disable all Typically, choices other than Disable should	Selects the priority assigned to each of the four supported external formats, and internal Free Run in the event the preferred source is unavailable. Source Priority 1 thru Source Priority 4 select the preferred format to be used in descending order (i.e., Source Priority 2 selects the second-most preferred format, and so on. See example below.) $\begin{array}{c} & & \\ \hline \hline & \\ \hline \hline & \\ \hline \hline & \\ \hline \hline $	
to remove all timecode data. In this example, even though and ATC_LTC could be available to substitute for ATC_VITC not being present, the card will revert to no timecode output since the choice of Disable Output "out-prioritizes" ATC_LTC with these settings.	Input VITC Input VITC The choices shown here will allow ATC_LTC to "out-prioritize" Disable Output Input ATC_VITC Input ATC_LTC Output if ATC_VITC is not available. Input ATC_LTC Disable Output Disable Output	
• Offset Controls	Allows the current timecode count to be advanced or delayed on the output video. • Offset Advance or Delay selects offset advance or delay. • Offset Field delays or advances or delays timecode by one field. • Offset Frame delays or advances or delays timecode by up to 5 frames. Note: Default settings are null, with both controls set at zero as shown.	

3302-20DX T unction menu List — continued	
Timecode	(continue

Timecode	(continued)	
Path 1 Path 2		
• Output Status Display Output Status 00:04:46:06.1 (Source: SDI VITC)	 Displays the current content and source being used for the timecode data as follows: Output Status 00:04:46:06.1 (Source: SDI VITC) Output status OK (in this example, SDI VITC timecode received and outputted). Output Status Insertion Disabled Timecode Insertion button set to Disabled; output insertion disabled. Note: • If timecode is not available from Source Priority selections performed, timecode on output reverts to Free Run (internal count) mode. Because the 1's digit of the display Frames counter goes from 0 to 29, the fractional digit (along with the 1's digit) indicates frame count as follows: 0.0 Frame 0 0.1 Frame 1 1.0 Frame 1 29.1 Frame 59 	
Audio LTC Output Option	Audio LTC output is routed to desired embedded, AES, or analog audio outputs using the Output Audio Routing/Controls (p. 3-33). Whatever timecode is displayed on the Output Status is converted to audio LTC and available as an LTC audio output.	
range is automatically clamped (limited) to depending on video format. See Ancillary	controls described below will allow a particular range of choices, the actual ocertain ranges to prevent inadvertent conflict with active picture area Data Line Number Locations and Ranges (p. 3-9) for more information. given line number. Make certain the selected line is available and carrying	
SD VITC Waveform Insertion Controls SD VITC Waveform Output 1 Line Number SD VITC Waveform Output 2 Line Number SD VITC Waveform Insertion Enabled	 For SD output, enables or disables SD VITC waveform timecode insertion into the output video, and selects the VITC1 and VITC2 line numbers (6 thru 22) where the VITC waveform is inserted. Note: • If only one output line is to be used, set both controls for the same line number. • SD VITC Waveform Insertion control only affects VITC waveforms inserted (or copied to a new line number) by this function. An existing VITC waveform on an unscaled SD SDI stream is not affected by this control and is passed on an SDI output. 	
SD ATC Insertion Control SD ATC_VITC Insertion Enabled SD ATC Insertion Line 13 - SMPTE 12M-2-2008 Recommended	For SD output, enables or disables SD ATC_VITC timecode insertion into the output video, and selects the line number for ATC_VITC.	

Table 3-2	9902-2UDX Function Menu List — continued

Timecode Path 1 Path 2	(continued)
HD ATC_LTC Insertion Control HD ATC_LTC Insertion HD ATC_LTC Insertion Line 10 - SMPTE 12M-2-2008 Recommended	For HD output, enables or disables ATC_LTC timecode insertion into the output video, and selects the line number for ATC_LTC timecode data.
HD ATC_VITC Insertion Control HD ATC_VITC Insertion Insertion HD ATC_VITC Insertion Line Field 1 9 - SMPTE 12M-2-2008 Recommended HD ATC_VITC Insertion Line Field 2 8 (571) - SMPTE 12M-2-2008 Recommended	For HD output, enables or disables ATC_VITC timecode insertion into the output video, and selects the line number for ATC_VITC1 and ATC_VITC2.
ATC_VITC Legacy Support Control ATC VITC Legacy Support Disabled	 When enabled, accommodates equipment requiring ATC_VITC packet in both fields as a "field 1" packet (non-toggling). Note: Non-toggling VITC1 and VITC2 packets do not conform to SMPTE 12M-2-2008 preferences. As such, ATC_VITC Legacy Support should be enabled only if required by downstream equipment.
Free Run Timecode Controls Free Run Hours 7 Free Run Minutes 0 Free Run Seconds 0 Apply Free Run Values Confirm	 Allows an initial (starting) count to be applied to output video timecode when Free Run insertion is enabled. Note: • Initialization can only be applied when card is outputting Free Run timecode (as shown by Output Status displaying "Free Run"). • If failover to Free Run occurs due to loss of external timecode(s), the Free Run count assumes its initial count from the last valid externally supplied count.

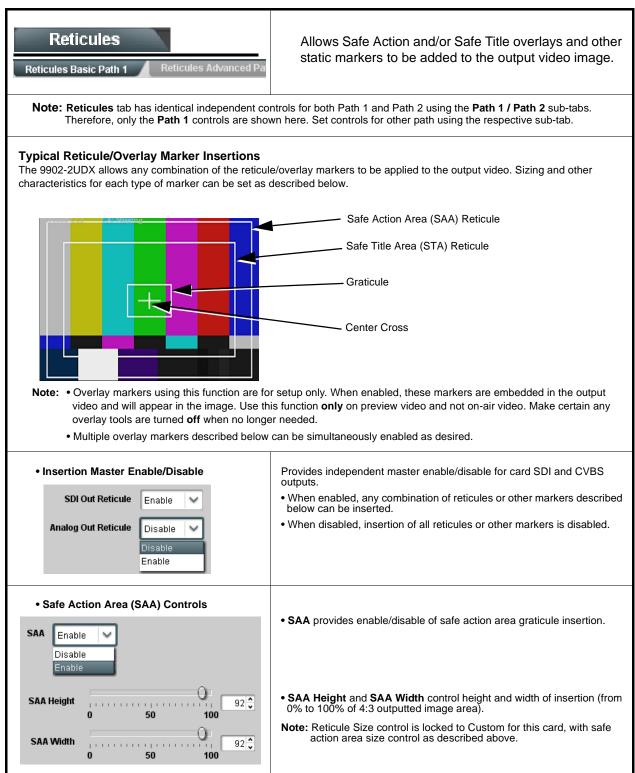

Reticules Reticules Basic Path 1 Reticules Advanced Pat	(continued)		
Safe Title Area (STA) Controls STA Enable Disable Enable Enable	• STA provides enable/disable of safe title area graticule insertion.		
STA Height 92 0 50 100 STA Width 92 0 50 100	• STA Height and STA Width control height and width of insertion (from 0% to 100% of 4:3 outputted image area).		
Overlay Color Controls Overlay Color White Disable Disable 100 Thickness 1 6 12	 Overlay Color selects from white, various gray fills, or black colors. Inverse Color selects inversion (negative) of current selection. Opacity sets the opacity of the overlay for both white/black and inverse color modes. Thickness sets the line thickness (in pixels). 		
	 White overlay color Black overlay color 		
Reticules ath 1 Reticules Advanced Path 1	Provides insertion and sizing controls for custom graticules and other markers. Also provides NTSC legacy 4:3 master reticule sizing.		
Note: Color attributes of markers described below	Note: Color attributes of markers described below are set using the master Overlay Color Controls described above.		
Graticule Controls Graticule Enable	• Graticule provides enable/disable of user graticule insertion.		
Graticule Height 20 2 0 50 100 Graticule Width 20 2 0 50 100 0 50 100	• Graticule Height and Width control height and width of insertion (from 0% to 100% of 4:3 outputted image area).		

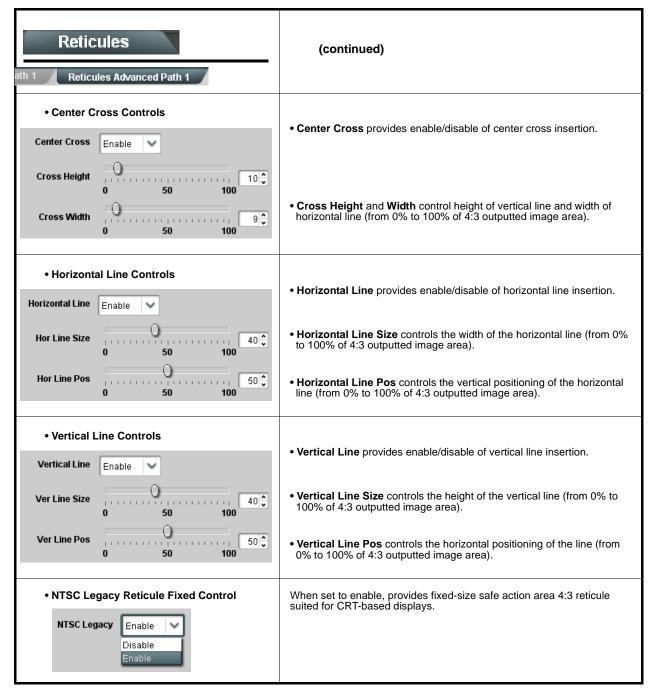
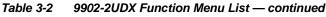
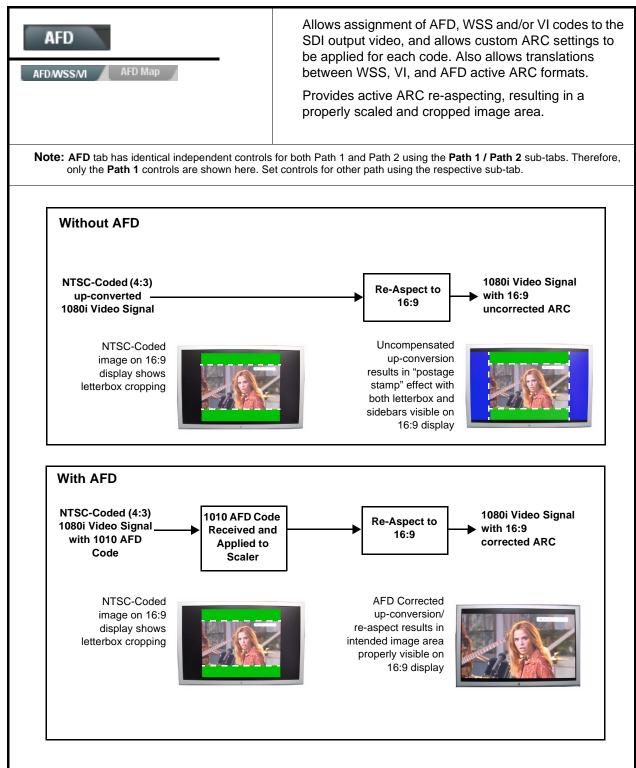


Table 3-2 9902-2UDX Function Menu List — continued Provides wings insertion/width controls and displays Winas insertion status. Path 1 Note: Wings tab has identical independent controls for both Path 1 and Path 2 using the Path 1 / Path 2 sub-tabs. Therefore, only the Path 1 controls are shown here. Set controls for other path using the respective sub-tab. Wings Source Control Selects the card SDI input video port to serve as the card wings source. Note: • SDI inputs selected must be used with Rear I/O Module SDI A Wings Source correspondingly equipped with intended input ports. Other wings input choices sourced from Path 1 and Path 2 SDLA program video outputs also are available using this SDI B drop-down. These selections are not typically used for normal SDI C use. A white paper describing these use cases may be developed in the future that explains the use of special looping SDI D alternate-path inputs. In brief, these alternate inputs are useful for providing two identical video paths with a delay offset provided by the second card path. • Wings Insertion Enable Control Enables or disables wings insertion into the output video. **Note:** For conditions where wings is not intended to be inserted, make certain this control is set to Disabled. Wings Enable Enabled • Wings Width Mode Control Selects wings width control from the choices shown to the left and described below. • Manual: Wings L/R width is set using Wings Width manual control Wings Adjustment Manual (see below). · Follow Scaler: Wings width automatically tracks with Scaler aspect Follow Scaler ratio control settings (as configured by Scaler). Note: Path 2 can only use Manual setting since Path 2 is not scaler-equipped. • Wings Width Control Allows symmetrical L/R wings insertion width, from none to widths extending into active image area if desired. (0 to 300 pixel range; null = 0) Wings Width (pixels) • Wings Status Displays Displays wings timing status as described below. Note: • Wings timing is a function of the wings frame sync card/ device. Ideal wings timing is within 0 to 200 samples early of output video timing. Wings timing cannot be controlled on host card wings inserter. · Error in wings timing will result in loss of wings (however, program video image will not be corrupted). Wings Status Insertion OK, Wings Offset 0 lines early, 25 samples early Wings insertion within target 0-200 samples early Winas О ок Wings insertion late Wings Status Insertion Error Adjust Wings Timing, Wings Offset 0 lines early, 99 samples late Wings Timing Error Wings insertion too early Wings Status Insertion Error Adjust Wings Timing, Wings Offset 0 lines early, 984 samples early Wings Timing Error Wings video wrong/mismatched format Format Mismatch Wings Status Wings Format Does Not Match Output Format, Wings Offset 259 lines early, 1685 samples late Wings





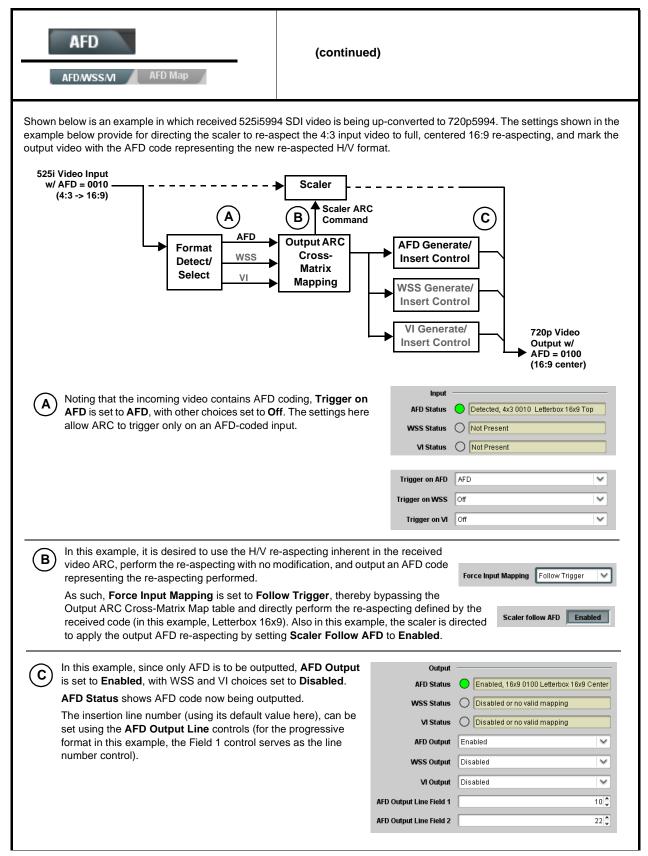


Table 3-2	9902-2UDX Function Menu List — continued

5	AFD/WSS/VI sub-tab provides prioritized and gated input monitoring for AFD, WSS and/or VI formats. Also provides translation between input and output AFD, WSS, and VI ARC formats.
Input Format Status Displays Input AFD Status Detected, 16x9 0010 Letterbox 16x9 Top WSS Status Not Present VI Status Not Present	 Displays the current status and contents of the three supported ARC formats shown to the left. If a format is received, the current formatting code and description is displayed (as shown in the example). If a format is not receiving data, Not Present is displayed.
Scaler AFD Enable Scaler follow AFD Enabled	 Enables scaler to apply ARC settings provided by ARC controls in this function. Enabled sets the output aspect ratio to track with AFD settings performed in this tab, overriding any other scaler manual ARC control settings. Disabled allows ARC coding processing performed in this tab, but does not apply ARC settings in scaler. Note: This control also appears on the Scaler tab and is mutually ganged with the selection performed on either tab. Scaler follows AFD functions only when a valid AFD output format is being generated and enabled. The scaler only observes AFD code commands, with the controls on this tab set to generate an AFD-coded output. WSS and/or VI formats must be translated to a supported AFD cross-translation for scaler active ARC to function when using WSS or VI input formats.
Input Mapping Force Input Mapping Follow Trigger 4x3 0010 Letterbox 16x9 Top 4x3 0011 Letterbox 14x9 Top • • 16x9 1110 Protect 14x9 16x9 1111 Protect 4x3	 When received ARC code is received, applies H/V coding as follows: Follow Trigger – Uses the ARC coding inherent in the received triggering ARC. 4x3 ARC Codes – For received triggering formats coded as 4x3, applies the H/V coding selected in this drop-down. 16x9 ARC Codes – For received triggering formats coded as 16x9, applies the H/V coding selected in this drop-down. Note: Settings performed here can be applied directly to the output video, or the settings applied here can be custom modified if desired for any of the 11 4x3 codes and any of the 11 16x9 codes available here using the AFD Map sub-tab. Refer to AFD/WSS/VI Translation Matrix on page 3-52 for more information and coding descriptions.

AFD AFD/WSS/MI AFD Map	(continued)
• Input Triggering Controls Trigger on AFD Off Trigger on WSS Off Trigger on VI Off WSS/M Priority WSS	 Individual ARC format input controls allow accepting or rejecting received ARC formats as follows: Trigger on AFD: Off rejects AFD-coded triggering. On allows trigger on AFD. Trigger on WSS: Off rejects WSS-coded triggering. AFD allows triggering on AFD-coded WSS. ETSI allows triggering on ETSI-coded WSS. Trigger on VI: Off rejects VI-coded triggering. AFD allows triggering on AFD-coded WSS. SMPTE allows triggering on SMPTE-coded WSS. Note: If multiple formats are present on the input video, AFD preempts other formats, followed by WSS or VI (as set by the WSS/VI Priority control).
• Output Enable Controls Output AFD Output Enabled V WSS Output Disabled VI Output Disabled V	 Individual ARC format input controls allow accepting or rejecting received ARC formats as follows: AFD Output: Disable turns off AFD format on output. Enable inserts AFD packet on output, and allows changing line number. Follow Input Line inserts AFD packet on same line as received AFD line number (where applicable). WSS Output: Disable turns off WSS format on output. AFD Enabled inserts AFD-coded WSS on output. ETSI Enabled inserts ETSI-coded WSS on output. VI Output: Disable turns off WSS format on output. SMPTE Enabled inserts AFD-coded VI on output.
Output Status Displays Output AFD Status Enabled, 16x9 1111 Protect 4x3 WSS Status Disabled or no valid mapping VI Status Enabled, SMPTE 6 625/50/16x9	 Displays the current output status, coding, and H/V ratio for AFD, WSS, and VI formats. If a format is active and enabled (as set with the Output Enable controls), the code and H/V description is displayed. If a format is not outputting data, Disabled is displayed. Note: The code displayed shows the outputted code. If the code is modified by user settings performed in the AFD Map sub-tab, these changes are shown here. Refer to AFD Map sub-tab for more information. As shown in the example, settings that result in invalid mapping across format translations will display Disabled. In these cases, no output is inserted for the format.
AFD Output Line Field 1 10 AFD Output Line Field 2 22	 Allows selecting the line location of the AFD data within the video signal Ancillary Data space. Note: • The card does not check for conflicts on a given line number. Make certain the selected line is available and carrying no other data. • For progressive formats, the Field 1 control serves as the line number control.

AFD (continued) AFD/WSS/MI AFD Map **AFD/WSS/VI** Translation Matrix The table below lists valid translations between WSS, VI, and SMPTE 2016 AFD codes for both 4x3 and 16x9-coded frames. Input Output WSS WSS WSS WSS AFD VI Description AFD VI Description **ETSI 625 ETSI 525 ETSI 625 ETSI 525** 1 (NTSC) 2 (PAL) 4x3 Letterbox 16x9 4x3 Letterbox 16x9 0010 4 0 0010 4 Тор Тор 1 (NTSC) 2 (PAL) 4x3 Letterbox 14x9 4x3 Letterbox 14x9 0011 2 0 0011 2 Тор Top 1 (NTSC) 4x3 Letterbox 16x9 4x3 Letterbox 16x9 2 0100 5 0100 5 2 2 (PAL) Center Center 0101, 0110, 0111 Undefined 0 1 (NTSC) 2 (PAL) 0 0 1000 0 0 1 (NTSC) 4x3 Coded Frame 1000 4x3 Coded Frame 2 (PAL) 4:3 Coded 1 (NTSC) 0 0 1001 1001 4x3 Center 4x3 Center 2 (PAL) 1 (NTSC) 3 1010 3 2 1010 4x3 16x9 Center 4x3 16x9 Center 2 (PAL) 1 (NTSC) 1011 1 0 1011 1 4x3 14x9 Center 4x3 14x9 Center 2 (PAL) 1 (NTSC) 1100 0 1100 3, 4, 7 Reserved Reserved 2 (PAL) 1 (NTSC) 1101 6 0 1101 6 4x3 Protect 14x9 4x3 Protect 14x9 2 (PAL) 4x3 Letterbox 16x9; 1 (NTSC) 4x3 Letterbox 16x9; 2 1110 1110 2 (PAL) Protect 14x9 Center Protect 14x9 Center 1 (NTSC) 4x3 Letterbox 16x9; 4x3 Letterbox 16x9; 1111 2 1111 Protect 4x3 Center 2 (PAL) Protect 4x3 Center 16x9 Letterbox 16x9 5 (NTSC) 16x9 Letterbox 16x9 0010 1 0010 6 (PAL) Тор Тор 16x9 Letterbox 14x9 5 (NTSC) 16x9 Letterbox 14x9 0011 1 0011 6 (PAL) Тор Тор 5 (NTSC) 6 (PAL) 16x9 Letterbox 16x9 16x9 Letterbox 16x9 0100 0100 1 Center Center 0101, 0110, Undefined 0111 5 (NTSC) 6 (PAL) 7 5 (NTSC) 1000 11 7 1000 1 16x9 Coded Frame 16x9 Coded Frame 16:9 Coded 6 (PAL) 5 (NTSC) 1001 1 16x9 4x3 Center 16x9 4x3 Center 1001 6 (PAL) 16x9 Center Protect 5 (NTSC) 16x9 Center Protect 1010 7 1 1010 6 (PAL) 16x9 16x9 5 (NTSC) 6 (PAL) 1100 1100 Reserved 1 Reserved 16x9 4x3 Protect 5 (NTSC) 1101 1 16x9 4x3 Protect 14x9 1101 14x9 6 (PAL) 5 (NTSC) 1110 1 1110 16x9 Protect 14x9 16x9 Protect 14x9 6 (PAL) 5 (NTSC) 6 (PAL) 1111 1 1111 16x9 Protect 4x3 16x9 Protect 4x3 Note: Shaded cells indicate invalid translation which cannot be used.

AFD/WSS/VI A		frame	s to compar	nion 16x9 fra	rectionally re-aspecting from 4 ames, and allows customizing es (and the corresponding W	a		
	AFD/WSS/MI AFD Map			VI translation equivalents) supported by the card.				
input:4)	a							
	V Zoom(60-200)	H Zoom(60-200)	Pan	Tilt	Output AFD Code			
4x3 Letterbox 16x9 Top 001	10 100.0	100.0 🗘	0.0	12.5 🗘	16x9 0010 Letterbox 16x9 Top			
4x3 Letterbox 14x9 Top 001	11 116.7	100.0	0.0	7.1 🗘	16x9 0011 Letterbox 14x9 Top			
÷								
4x3 Letterbox 16x9 Protect 4x3 111	11 133.3	100.0 🗘	0.0	0.0	16x9 1111 Protect 4x3			
Input:16)	(9					_		
	V Zoom(60-200)	H Zoom(60-200)	Pan	Tilt	Output AFD Code	_		
16x9 Letterbox 16x9 Top 001	10 75.0 🗘	100.0 🗘	0.0	-12.5 🗘	4x3 0010 Letterbox 16x9 Top			
16x9 Letterbox 14x9 Top 001	11 75.0 🗘	100.0	0.0	-7.1	4x3 0011 Letterbox 14x9 Top			
•								
	11 100.0 🗘	133.0 🗘	0.0					
By default, each row is set 4x3 frames get re-aspected	4x3 and 16x9 cod for its companion to a companion 1	led input frames allo re-aspected output 16x9 re-aspecting ar	w custom Al	output AFD	4x3 1111 Letterbox 16x9 Protect 4x3 as pan/tilt) for various coded code for the companion outp rly 16x9 frames get re-aspect	fr: ut		
eparate control groups for 4 By default, each row is set 4x3 frames get re-aspected companion 4x3 re-aspecting	4x3 and 16x9 cod for its companion to a companion 7 g and AFD code).	led input frames allo re-aspected output 16x9 re-aspecting ar the scaling and tilt f	w custom Al , along with o nd AFD code	RC (as well output AFD e, and simila	as pan/tilt) for various coded code for the companion output	fra ut		
eparate control groups for 4 By default, each row is set 4x3 frames get re-aspected companion 4x3 re-aspecting In this example, default	4x3 and 16x9 cod for its companion to a companion 7 g and AFD code).	led input frames allo re-aspected output 16x9 re-aspecting ar the scaling and tilt f	w custom Al , along with o nd AFD code	RC (as well output AFD e, and simila	as pan/tilt) for various coded code for the companion outp rly 16x9 frames get re-aspect	fra ut		
eparate control groups for 4 By default, each row is set 4x3 frames get re-aspected companion 4x3 re-aspecting In this example, default companion 4x3 0010 L Input:16x9	4x3 and 16x9 cod for its companion to a companion g and AFD code). t settings provide etterbox 16x9 Top	led input frames allo re-aspected output 16x9 re-aspecting ar the scaling and tilt f p frame. H Zoom(60-200)	w custom Al , along with and AFD code actors to cor Pan	RC (as well output AFD e, and simila nvert a 16x9 Titt	as pan/tilt) for various coded code for the companion outp rly 16x9 frames get re-aspect	fra ut		
eparate control groups for 4 By default, each row is set 4x3 frames get re-aspected companion 4x3 re-aspecting In this example, default companion 4x3 0010 L	4x3 and 16x9 cod for its companion to a companion 1 g and AFD code). t settings provide etterbox 16x9 Top	led input frames allo re-aspected output 16x9 re-aspecting ar the scaling and tilt f p frame.	w custom Al , along with nd AFD code actors to cor	RC (as well output AFD e, and simila nvert a 16x9 Titt	as pan/tilt) for various coded code for the companion outp rly 16x9 frames get re-aspect -coded 0010 frame to its	fra ut		




Moving Box Path 1 Path 2	Provides a "moving box" graphic insertion (overlay) on the output video. Moving-box insertion can serve as a dynamic raster confidence check even in cases where the input video image is static or lost.
	nt controls for both Path 1 and Path 2 using the Path 1 / Path 2 sub-tabs. nown here. Set controls for other path using the respective sub-tab.
	Moving-box insertion provides dynamic display even on static video. Attributes such as box size, color, vertical movement speed, and horizontal movement speed are all user configurable. Moving box can be set to insert continuously, or only upon loss of input.
• Moving Box Insertion Controls Moving Box Always disabled Always enabled Enabled on loss of video	 Selects the rules for moving-box overlay insertion into output video. Note: If moving-box insertion is desired for input LOS conditions, the Framesync On Loss of Video control for the selected path must be set to provide a raster (from one of the choices shown) to support the moving-box insertion. If this control is set to "Disable Outputs", no raster or moving-box insertion will be present on the output video under input LOS conditions. See Framesync (p. 3-18) for more information.
Moving Box Size Controls Moving Box Width (%) I Moving Box Height (%) I I	 Sets size of box image burn-in as follows: Moving Box Width sets the width (as a percentage of maximum available raster width. (Range is 0% thru 40%) Moving Box Height sets the height (as a percentage of maximum available raster height. (Range is 0% thru 40%) Note: • Moving box sizing for a given raster format may not be appropriate for another format (especially if transitioning from HD to SD). Set size and position for a balanced appearance that accommodates both HD and SD raster formats if multiple format use is required. • For SD usage, moving box can impinge on and corrupt line 21 closed-captioning waveform if positioned too close to the upper


Moving B Path 1 Path 2	ox	(continued)
• Moving Box Speed Co Moving Box Horizontal Speed Moving Box Vertical Speed	Normal Normal Fast	 Sets speed of motion for moving box image burn-in as follows: Moving Box Horizontal Speed sets the X-axis speed from choices shown. Moving Box Vertical Speed sets the Y-axis speed from choices shown.
	s Controls	 Provides independent controls for setting the color and opacity of the moving-box insertion. Color drop-down sets box color from multiple choices shown. Opacity controls sets box opacity from 0% (least opacity) to 100% (full opacity).



Ancillary Data Processing ADP Routing IP Port Setup Option (Ξ)	Provides controls for VANC/HANC ancillary data de-embedding and embedding to and from program video stream. Data can be extracted and inserted within the card (Bridge mode), or inserted and/or extracted to and from external interfaces via serial or IP interfaces.
Path 2. Only the Path 1 controls are show	vided for this function with identical independent controls for both Path 1 and wn here. Set controls for other path using the other tab. ard for both paths on card. Other modes described here are available with
Eight individual Ancillary Data Processors (ADPs) pro program video SDI stream.	vide for insertion, extraction, or bridging ancillary data to and from the card
 Bridge extracts ANC from the deserialized input video and re-inserts in the output video, thereby allowing full control of specialized ANC packets Insert and Extract modes respectively allow insertion to the output stream or extraction from the input stream between external interfaces 	available for ADP Proc 1 removal of incoming packets DPs use IP only for external sertion/extraction. removal of incoming packets DID controls select the cket to be handled by ponding ANC Data Line Number controls select the VANC location of packet
ADP Proc 8 Disabled V IP V 0x0 C	SDID Field 1 Line Number Field 2 Line Number Insert in HANC Insert in C Remove Incoming 0x0 0 10 0 10 0 Disabled Disabled Disabled
IP), status is displayed as shown below. Extracting 15.0 Kbit/s, dropped 0.0 Kbit When set to extract to	ode at DID60 _h / SDID 60 _h . Depending on the interface used to carry the extraction (COM or COM interface, displays rate and dropped data (if any)
Note: DashBoard versions 4.1 and earlier display DID and SDID r hexadecimal. Hexadecimal notation is denoted by the "0x"	numbers in decimal; newer DashBoard versions display DID and SDID numbers in preceding the value.

Ancillary Data Processing	IP Port Setup sub-tab provides IP setup for card UDP IP communications.
Card IP Receive Setup/Status Card Active IP 10.99.16.100 Card Port Insertion RX Status 1.2 kb/s	 Shows card receiving IP address/status and sets port as follows: Card Active IP: Shows the card IP address. (IP address is set using Admin tab Networking settings; see Admin on page 3-68). Card Port: Sets card IP receive port. Insertion / Rx Status: Shows card IP receive/Rx insertion status. Stopped (with yellow indicator) means no data is being received. Green indicator means data is being received and inserted. Data rate is also shown.
• Card IP Transmit Setup/Status Extraction TX Status 1.2 kb/s Destination IP 10.99.16.101 Destination Port 4000 Extraction Mode Payload Only Payload Only Formatted Packet	 Provides setup for destination IP address and shows card transmit status as follows: Extraction / Tx Status: Shows card extraction from stream to Tx status. Stopped (with yellow indicator) means no data is being sent. Green indicator means data is being extracted and sent. Data rate is also shown. Destination IP/Port: Allows setting destination IP address and port. Extraction Mode: Sets the IP data sent to consist of only payload, or send as formatted packets.

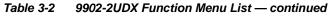


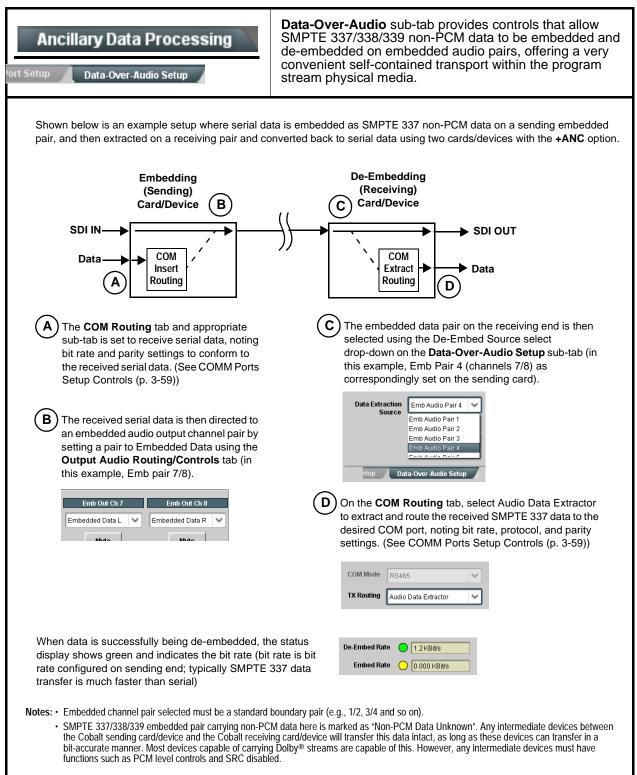

-2 9902-2UDX Function Menu List — continued			
COM Routing COM 1 Setup COM 2 Setup	Provides controls for setting up the two COMM (serial) ports for LTC or ANC functions, and setting comm protocol for each port.		
Note: • COM 1 and COM 2 sub-tabs provide inde are described here.	ependent controls for COM1 and COM2. Therefore, only the COM 1 controls		
 Controls provided here allow highly detai 	iled setup of serial communications. Control settings must be carefully espond to both sending and receiving systems. Incorrectly set controls may		
• COM 1 and COM 2 are multi-function inte	erfaces and must be set for ANC Data Extractor for port(s) is to be used here.		
• COM Mode (Protocol)	Selects serial comm protocol for the respective port as RS-232 or RS-485.		
COM 1 Mode RS232 RS232 RS485	Note: Protocol choices should consider the payload to be carried. Typically, LTC is sent or received using only RS-485 serial protocol.		
COM Port Tx Routing Function TX Routing LTC Encoder LTC Encoder Anc Data Extractor Audio Data Extractor	Selects port function for the respective port as LTC Encoder input or output, or ANC Data Extractor / Audio (SMPTE 337) non-PCM input or output.		
Rx/Tx Status Display RX Status No data received TX Status 15.0 Kbit/s	Shows either no data received/sent, or where transfer is present shows data rate (in kbit/sec).		
Insertion Mode Control	Where data is being inserted (received), sets the insertion as follows:		
Insertion Mode Insert Any Data Received	 Insert Any Data Received: Insert all received data with no regard for packet size. 		
Insert Any Data Received Insert Any Data Received Fixed Length Packet	 Fixed Length Packet: Sets receive to wait and accumulate n-number of packet bytes (as set using Insertion Fixed Packet Size control) before inserting data. 		
Break-Defined Packet Insertion Fixed Packet Size 64	Break-Defined Packet: Card receiver looks for character-defined break from source being received to define breaks.		
Insertion Flow Control	Allows communication between card receive and sending source to regulate data receive as follows:		
Insertion Flow Control No Flow Control	• No Flow Control: Data is received without buffering or checking to		
No Flow Control XON/XOFF	 see if data is being received faster than it can be inserted. XON / XOFF: The card UART Tx will tell the sending source whether it can or cannot accept data at current bit rate. 		
Hold Break	• Hold Break: Card, if close to not being able to accept new data, tells the sending source to hold, and releases this hold when the card is again able to accept new data.		

Table 3-2	9902-2UDX Function Menu List — continued


COM Routing COM 1 Setup COM 2 Setup	(continued)
• Insertion Sync Byte Control Insertion Sync Byte Disabled Field Number at SOF Ack on Insertion	 Allows use of a sync byte from card receiver back to sending source to synchronize communication between card receive and sending source as follows: Disabled: No special synchronization. Field Number at SOF: The card sends a single byte telling sending source when start of field 1 or field 2 is occurring. Ack on Insertion: Card sends a single byte back to sending source when data has been inserted.
Extraction Mode Control Extraction Mode Payload Only Payload Only Full Anc Data Packet	 Where data is being extracted from input video, sets the data to be sent as follows: Payload Only: Sends payload only (for example, for closed captioning this would be only the ASCII character string representing the CC content). Full Anc Data Packet: Sends the entire packet, including payload, DID, SDID, and any handling or marking characters.
• Extraction Flow Control	 Allows communication between card transmit and receiving destinations to regulate data receive as follows: No Flow Control: Data is transmitted without buffering or checking to see if data is being transmitted faster than it can be received. XON / XOFF: The card UART Rx will acknowledge from the receiving system whether it can or cannot accept data at current bit rate. Hold Break: Card, if receiving notification from the receiving system that it is close to not being able to accept new data, tells the card to hold. Card releases this hold when the receiving system removes the break command, indicating destination is now ready again to accept new data.
• Bit Rate/ Parity Gen Control Bit Rate 115200 V Parity Disabled V Disabled Odd Even	 For both Rx and Tx, sets UART for bit rate and parity as follows: Bit Rate: Sets Tx/Rx bit rate from 1 of 5 speeds ranging from 9600 to 230400 Baud. Parity: Sets card Rx to expect odd or even parity from incoming data, and sets card Tx to generate a parity bit to satisfy selected parity. Where parity is set, incoming data not conforming to parity selection is rejected.

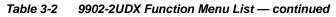

Pres	ets			then loaded	r control settings to be saved in a Preset and d (recalled) as desired, and provides a restore of factory default settings.
Allows selecting	Preset Layer Select Allows selecting a functional layer (or "area of concern") that the preset is concerned with. Limiting presets to a layer or area of concern allows for highly specific presets, and masks changing card settings in areas outside of the layer or area of concern.				
Default All settin	ng will "look" at	all card settings	s and save	e all settings to th	e defined preset with no masking.
Layers	In Audio Routing	Γ	Video Proc	Framesync	Selecting a layer (in the example, "In Audio Routing") will set the preset to only "look at" and "touch" audio routing settings and save these settings under the preset. When the preset is loaded (recalled), the card will only "touch" the audio routing layer.
			14001100	Tranooyno	l layer.
	g in effect, and				Example: Since EAS audio routing can be considered independent of video proc settings, if normal audio routing was set up with a particular to be saved and invoked as a preset, selecting
video proc settin In Audio Routir settings in effect	g in effect, and g here tells the when the EAS	d at a later time l preset save an preset is invok	EAS audio d load to r ed will not	o routing is desire not concern itself t affect any video	considered independent of video proc settings, if normal audio routing was set up with a particular ed to be saved and invoked as a preset, selecting with video proc settings. In this manner, any video proc proc settings that might be currently in effect.
video proc settin In Audio Routir settings in effect • Preset Ente	g in effect, and	d at a later time l preset save an preset is invok	EAS audio d load to r ed will not	o routing is desire not concern itself t affect any video	considered independent of video proc settings, if normal audio routing was set up with a particular d to be saved and invoked as a preset, selecting with video proc settings. In this manner, any video proc
video proc settin In Audio Routir settings in effect	g in effect, and g here tells the when the EAS	d at a later time l preset save an preset is invok	EAS audio d load to r ed will not	o routing is desire not concern itself t affect any video cocks and unlock ollows: Protect (ready) Delete button to	considered independent of video proc settings, if normal audio routing was set up with a particular ed to be saved and invoked as a preset, selecting with video proc settings. In this manner, any video proc proc settings that might be currently in effect.
video proc settin In Audio Routir settings in effect • Preset Ente Presets Controls	g in effect, and g here tells the when the EAS er/Save/Delete	d at a later time l preset save an preset is invok	EAS audio d load to r ed will not	o routing is desire not concern itself t affect any video cocks and unlocks ollows: Protect (ready): Delete button to preset. Use this Protected: Togg	 considered independent of video proc settings, if normal audio routing was set up with a particular do be saved and invoked as a preset, selecting with video proc settings. In this manner, any video proc proc settings that might be currently in effect. s editing of presets to prevent accidental overwrite as This state awaits Protected and allows preset Save/ save or delete current card settings to the selected setting when writing or editing a preset. le to this setting to lock down all presets from being saved or deleted. Use this setting when all presets
video proc settin In Audio Routin settings in effect • Preset Entr Presets Controls Save/Delete New/Updated	g in effect, and g here tells the when the EAS er/Save/Delete	d at a later time l preset save an preset is invok	EAS audio d load to r ed will not	o routing is desire to concern itself to affect any video cocks and unlock ollows: Protect (ready): Delete button to preset. Use this Protected: Togg inadvertently re- are as intended Create New Pre	 considered independent of video proc settings, if normal audio routing was set up with a particular do be saved and invoked as a preset, selecting with video proc settings. In this manner, any video proc proc settings that might be currently in effect. s editing of presets to prevent accidental overwrite as This state awaits Protected and allows preset Save/ save or delete current card settings to the selected setting when writing or editing a preset. le to this setting to lock down all presets from being saved or deleted. Use this setting when all presets
video proc settin In Audio Routir settings in effect • Preset Ente Presets Controls Save/Delete New/Updated Preset Name:	g in effect, and g here tells the when the EAS er/Save/Delete Protected	e IRD Roy122	EAS audio d load to r ed will not	o routing is desire ot concern itself it affect any video cocks and unlock ollows: Protect (ready): Delete button to preset. Use this Protected: Togg inadvertently re- are as intended Create New Pre being saved (in f	 considered independent of video proc settings, if normal audio routing was set up with a particular do be saved and invoked as a preset, selecting with video proc settings. In this manner, any video proc proc settings that might be currently in effect. s editing of presets to prevent accidental overwrite as This state awaits Protected and allows preset Save/ save or delete current card setting a preset. le to this setting to lock down all presets from being saved or deleted. Use this setting when all presets set: Field for entering user-defined name for the preset
video proc settin In Audio Routir settings in effect • Preset Ente Presets Controls Save/Delete New/Updated Preset Name:	g in effect, and g here tells the when the EAS er/Save/Delete Protected New Preset Nam Save	e IRD Roy122	EAS audio d load to r ed will not 2 2 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4	corouting is desire to concern itself to t affect any video cocks and unlock ollows: Protect (ready): Delete button to preset. Use this Protected: Togg inadvertently re- are as intended Create New Pre being saved (in to Save: Saves the	 considered independent of video proc settings, if normal audio routing was set up with a particular do be saved and invoked as a preset, selecting with video proc settings. In this manner, any video proc proc settings that might be currently in effect. s editing of presets to prevent accidental overwrite as This state awaits Protected and allows preset Save/ save or delete current card settings to the selected setting when writing or editing a preset. le to this setting to lock down all presets from being saved or deleted. Use this setting when all presets set: Field for entering user-defined name for the preset his example, "IRD Rcv122").

Presets		(continued)
Preset Save/Load Co	ontrols	
Load/Delete Existing Preset		• Select Preset: drop-down allows a preset saved above to be selected to be loaded or deleted (in this example, custom preset "IRD Rcv122").
Select Preset: Load Selected Preset	IRD Rcv122	 Load Selected Preset button allows loading (engaging) the selected preset. When this button is pressed, the changes called out in the preset are immediately applied.
Update Selected Preset	Confirm	Note: Controls below that modify or delete presets are grayed-out (inactive) when Save/Delete button is in Protected mode. To use these controls, make certain Protected is not enabled.
Rename Selected Preset	Confirm	• Update - Rename - Delete Selected Preset buttons allow selected preset to be updated (take in current custom settings), be renamed, or be deleted. A Confirm prompt appears in all cases.
Delete Selected Preset Delete All Presets	Confirm	• Delete All Presets button allows a delete of all stored presets. (This is useful if all presets are to be replaced by a new Presets bin file.)
Load Factory Defaults	Confirm	 Load Factory Defaults button allows loading (recalling) the factory default preset. When this button is pressed, the changes called out in the preset are immediately applied.
Download Presets	StoredPresets.bin Save	Note: Load Factory Defaults functions with no masking. The Preset Layer Select controls have no effect on this control and will reset all layers to factory default.
		• Download Presets saving the preset files to a folder on the connected computer.
Upload Options		Upload Options checkboxes function as follows:
Delete All Presets on Upload		• Delete All Presets on Upload clears all stored presets, and then replaces or adds any presets as defined in the uploaded Presets .bin file. (This is useful to establish a "clean slate" and remove any presets that may no longer be desired.)
on Upload Load Saved Settings on Preset Upload		Delete Duplicate Presets on Upload clears stored presets bearing the same name as currently stored presets. (This avoids dual iterations of same preset name (plain and duplicate using "*" marking), and avoids possibility of "stale" presets no longer desired from appearing as a choice.)
		 Load Saved Settings on Preset Upload makes certain any local card settings card state is retained following a preset upload. When checked, a preset within the upload is invoked only when specifically selected and invoked.
		Note: Any combination of checkboxes can be checked or unchecked (enabled or disabled) as desired.

3

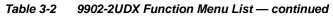


Presets	(continued)	
Download (save) card presets to a network computer by clicking Download Presets – Save at the bottom of the Presets page.	Upload (open) card presets from a network computer by clicking Upload at the bottom of DashBoard.	
Browse to a desired save location (in this example, <i>My Documents\Cobalt Presets</i>). The file can then be renamed if desired (<i>RCVR21 Presets</i>) before committing the save.	Browse to the location where the file was saved on the computer or drive (in this example, My Documents (Cobalt Presets). Image: Comparison of the location of the computer or drive (in this example, My Documents (Cobalt Presets). Select the desired file and click Open to load the file to the card. Image: Comparison of the location of the card download and file upload is on a group basis (i.e., individual presets cannot be downloaded or uploaded separately). Note: Preset transfer between card download and file upload is on a group basis (i.e., individual presets cannot be downloaded or uploaded separately). After uploading a presets file, engagement of a desired preset is only assured by selecting and loading a desired preset as described on the previous page.	
GPO Setup	Provides controls for setting up the two GPO's power-up states as well as forced manual or event action triggered.	
Note: This tab has identical independent controls	for GPO 1 and 2. Therefore, only the GPO 1 controls are described here.	
GPO1 Current State OClosed	• Current State indicates GPO status regardless of any pre-setup.	
GPO1 Power-on State Open Open Closed	• Power-on State allows the power-up GPO state to be set (initialized) upon power-up	
GPO1 Control Mode Follow Event Actions Follow Event Actions Force Open Force Closed	 Control Mode allows GPO manual asserted open or closed states, or hands over control to Event Action triggering. 	

Event Setup Event Triggers Email Alerts	Provides event-based loading allowing a defined action to be automatically engaged upon various received signal status. Actions can be "canned" control commands or user-defined by going to a user preset.
processing changes if not proper Loading button is set to Disable • Because event based preset load	ling can apply card control changes by invoking presets, loading conditions cannot be ent-based loading settings performed here cannot be saved to presets, although the
	ing criteria, and in turn provide an Event Action "go to" in response to the detected es can be set as "Don't Care" or set to specific criteria to broaden or concentrate on
• The Event-Based Loading button serves a	
	esets, "canned" (hard-coded) selections (such as GPO triggers or routing changes), see Email Alerts (p. 3-67) for setting up e-mail alerts).
to 32 separate events can be defined. In add	set to screen for any or several Definer criteria as shown in the example below. Up ition to events screened for and triggered here, each Event can be set to trigger from larms Setup Controls (p. 3-72)). Engage Mode (True/False) allows triggering on an
screening is enabled, lower-priority events a	ent 1 having the highest priority, descending down to Event 32. Where multiple event re serviced first, with the highest-priority event being the final event serviced and last e Event History (see below). This helps ensure that a lower-priority event does not
	e activation status of each Event. Green indicator means event is currently engaged.
 Some columns in the DashBoard Event Setucolumn appears only with option +QC). 	p table are present only when certain options are installed (for example, Video Quality
Event Definers	
	iquely set up for any of the condition types in these columns. Unless set to Don't ditions will need to be true in order for the Event to be considered active
\\	
Status Acquired Video Format	GPI Video Quality Audio Events ANC Data User States Event Action:
Event 1 Cast Active Event Don't Care	nt Care 🗸 Input A Event Engaged 🗸 Dont Care 🗸 Dont Care V go to B V
Event 2 Condition Not Met Don't Care	nt Care 🗸 Input A Event Disengaged 💙 Dont Care 💙 Dont Care 💙 Dont Care V normal path A 💙
Event 32 Condition Not Met Don't Care	nt Care 🗸 Dont Care 🗸 Dont Care V Dont Care V Dont Care V
Note: Event criteria settings in any row com	rise an AND function. Where multiple criteria are selected, a true (trigger) condition
is not propagated unless all specified	riteria are true. To independently screen for multiple criteria, rows should be set up
where each criteria is screened in its	own Event row. Examples of this are shown on the following pages.
Event History Time Event Nu	
19:22:39 02/05/15 2	GP0 1 Close events in groups of five most recent events (newest at the top).
19:22:39 02/05/15 4	GP0 2 Close In the example here, log shows Event 2 as the
19:22:17 02/05/15 2	GP0 1 Close most recent event, and its user-selected action of GPO 1 Close.
19:22:17 02/05/15 4	GP0 2 Close Pressing the Force Event Refresh button
	updates the list.
Card Time 19:25:43 02/05/15	
Force Event Refresh	

Event Setup Event Triggers Email Alerts		(continued)					
status can Action sele an alternat Conversel	be used here (Video C ector, go-to action of "g te input source). y, to go back to the or ed" and in turn invoke	Quality set to "Input A E go to B " can be invoke iginal source, an even	vents tab is set to screer Event Engaged" indication ed (which in this example It could be set up with Vi ing routing to the origina	g black or frozen vic is a user preset th ideo Quality here lo	deo detecte at changes ooking for "Ir	ed). Using the card routing nput A Even	e Eve i to u t
Video Quality	,						
Event Stat	us 🥚 Frozen video det	27					
		Video Quality	Audio Events	ANC Data		Event Actio	n:
Event Type	e 🛛 Black or Frozen 🖌 🗸	Input A Event Engaged	✓ Don't Care	✓ Don't Care	~	go to B	~
Input A	Input B	Input A Event Disengaged	V Don't Care	✓ Don't Care	~	normal path A	~
			out video routing change actions to resume norma				GPU
event. Bot	h Events 1 and 3 have	e corresponding go-to Video Quality	Audio Events	al operation when t	the event ce	Eases.	
event. Bot	h Events 1 and 3 have	Video Quality	Audio Events	Al operation when t ANC Data Don't Care		Event Action	~
Event 1	h Events 1 and 3 have	Video Quality Input A Event Engaged	Audio Events Dont Care Dont Care	ANC Data ANC Data Don't Care Don't Care		Event Action go to B normal path A	~
event. Bot	h Events 1 and 3 have	Video Quality Input A Event Engaged Input A Event Disengaged Dont Care	Audio Events	ANC Data ANC Data Don't Care Closed Caption Absen	the event ce	Event Action	~
Event 1 Event 2 Event 3 Event 4	h Events 1 and 3 have Status Last Active Event Condition Not Met Condition Not Met eened conditions are	Video Quality Input A Event Engaged Input A Event Disengaged Dont Care	Audio Events Audio Events Dont Care Dont Care Dont Care Dont Care t of event. Any event-ba	ANC Data ANC Data Don't Care Closed Caption Absence Closed Caption Preser	the event ce	Event Action go to B normal path A GPO 1 Close GPO 1 Open	> > > >
Event 1 Event 2 Event 2 Event 3 Event 4 Ote: • Scr trig • If a at t	h Events 1 and 3 have Status Last Active Event Condition Not Met Condition Not Met Condition Not Met eened conditions are gering event in orde desired user preset the bottom of the page	Video Quality Input A Event Engaged Input A Event Disengaged Dont Care Event Care Event Care Event Care Event to be detected does not appear in the target oupdate the list in the set of the set oupdate the list in the set oupdate the set oupdate the list in the set oupdate the set	Audio Events Audio Events Dont Care Dont Care Dont Care Dont Care t of event. Any event-baseted. he Event Action drop-donn.	ANC Data ANC Data Don't Care Closed Caption Absent Closed Caption Present ased setup must be down, press the Data	the event ce	Event Action go to B normal path A GPO 1 Close GPO 1 Open advance of Refresh but	the tton
Event 1 Event 2 Event 2 Event 3 Event 4 Ote: • Scr trig • If a at t • Los def	h Events 1 and 3 have Status Last Active Event Condition Not Met Condition Not Met Condition Not Met condition Not Met eened conditions are gering event in orde desired user preset the bottom of the page ss of true conditions ined and then occur	Video Quality Input A Event Engaged Input A Event Disengaged Dont Care triggered upon starf for event to be dete does not appear in t ge to update the list i does not disengage a to transition from on	Audio Events Audio Events Dont Care Dont Care Dont Care Dont Care Dont Care t of event. Any event-based trigger t e event-based trigger t	ANC Data ANC Data Don't Care Closed Caption Absent Closed Caption Preset ased setup must b down, press the Data ing. A new set of the	the event ce ce Event v ce Event v be done in a ashBoard F true conditi	Event Action go to B normal path A GPO 1 Close GPO 1 Open advance of Refresh but ions must b	the tton
Event 1 Event 2 Event 2 Event 3 Event 4 Ote: • Scr trig • If a at t • Los def • Tim a p	Status Status Last Active Event Condition Not Met Condition Not	Video Quality Input A Event Engaged Input A Event Disengaged Dont Care triggered upon start for event to be detected does not appear in t ge to update the list i does not disengage a to transition from on e an event-based trig	Audio Events Audio Events Dont Care Dont Care Dont Care Dont Care Dont Care t of event. Any event-based triggeri an event-based triggeri	ANC Data ANC Data Don't Care Closed Caption Absent Closed Caption Present ased setup must be down, press the Data ing. A new set of the co another. mplexity of the call	the event ce ce Event v ce Event v be done in a ashBoard F true conditi led preset.	Event Action go to B normal path A GPO 1 Close GPO 1 Open advance of Refresh but ions must b (For exam)	the close,
Event 1 Event 1 Event 2 Event 3 Event 4 Dte: • Scr trig • If a a t t • Los def • Tim a p cha • Mal Even 525	Status Last Active Event Condition Not Met Condition Not Met Condi	video Quality	Audio Events Audio Events Dont Care to f event. Any event-based trigger depends upon contexe longer to engage that the card might be etain that the card will a card is expected to "see conditions are defined	ANC Data ANC Data Don't Care Closed Caption Absen Closed Caption Absen Closed Caption Prese ased setup must b down, press the Data ing. A new set of the canother. mplexity of the call an a preset involvious expected to "see" lways have a defin e" a 720p5994 str	the event ce ce Event v ce E	Event Action go to B normal path A GPO 1 Close GPO 1 Open advance of Refresh but ions must b (For examp a udio routi d in any of t " action if a an alternatio	the the ton e ble, ng the e, a
Event 1 Event 1 Event 2 Event 3 Event 4 Dte: • Scr trig • If a at t • Los def • Tim a p cha • Mai Even • Scr • Cos def • Cos C	Status Last Active Event Condition Not Met Condition Second Condition Not Met Condition Second Condition Not Met Condition Second Condition Second Conditio	video Quality	Audio Events Audio Events Dont Care Dont Care Don	ANC Data ANC Data Don't Care Don't Care Closed Caption Absen Closed Caption Prese ased setup must b down, press the Data ing. A new set of the calling another. mplexity of the calling an a preset involvi expected to "see" lways have a defii e" a 720p5994 str (with your desired prevent conditions	the event ce the event ce ce Event v ce	Event Action go to B normal path A GPO 1 Close GPO 1 Open advance of Refresh but ions must b (For example a udio routi d in any of t " action if a an alternato sets) in any d cause loop	the the tople, ing the e, a two



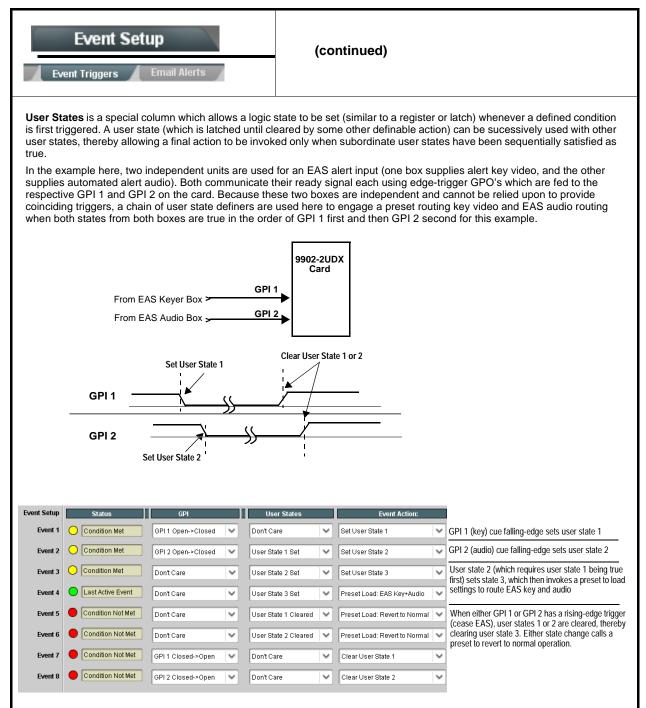

Event S		Provides three general-purpose timers that can be triggered to start, pause, reset, or stop upon event actions. The state of each timer, in turn, can also be used to invoke other actions.
Reset Value (seconds)	Reset/Start automated of 15.0 Pause Timer eset/Cancel Timer	rs 1 thru 3 (Timer 1 shown) can be set with count-down values. The Pause/ control here are manual controls. The timers are typically used with cues to start and stop the timer(s), as shown below.
the logo, along wi	th a time started at that time. Upo GPI I 1 Open->Closed ♥ I 1 Open->Closed ♥ Don Don	Event Timers t Care t Care Care t Care t
Event S		Provides setup for automated Email alerts when an event has occurred.
shown in the exan Note: Frame host	nple below.	ub-tab, an Email alert can be sent as a response. Set up email fields as email recipient's network. It is recommended to set up and generate a test
Last Event:	Frozen video detected	When fields are filled-in to specify recipient and sender, and email alert is selected for Event Action on Event Triggers
To:	joe.doe@xyzmedia.com	sub-tab page, recipeient receives an email alert upon event, with the triggering event shown (in this example, "frozen
From:	9902slot8frame1A21@xyzmedia.com	
SMTP User:	frame1A21	
SMTP Password:	•••••	
SMTP Server:	smtp.gmail.com	
SMTP Port:	25	

Admin System Networking	Provides a global card operating status and allows a log download for factory engineering support. Also provides controls for selecting and loading card firmware upgrade files. Networking controls provide dedicated card networking setup in conjunction with rear module Ethernet port.
Log Status and Download Controls	Log Status indicates overall card internal operating status.
Log Status Card OK Download Log File 9902-DC-4K.tar.gz Save	 Download Log File allows a card operational log file to be saved to a host computer. This log file can be useful in case of a card error or in the case of an operational error or condition. The file can be submitted to Cobalt engineering for further analysis.
Thermal Shutdown Enable	 Thermal Shutdown enable/disable allows the built-in thermal failover to be defeated. (Thermal shutdown is enabled by default).
,	CAUTION
	The 9902-2UDX FPGA is designed for a normal-range operating temperature around 85° C core temperature. Operation in severe conditions exceeding this limit for non-sustained usage are within device operating safe parameters, and can be allowed by setting this control to Disable. However, the disable (override) setting should be avoided under normal conditions to ensure maximum card protection.
• Parameter Blast Parameter Blast	When enabled, Parameter Blast can reduce the time it takes for the card to appear and populate in DashBoard (this is especially relevant where high-latency connections are present). This is facilitated by reducing some handshakes on initial DashBoard setup where control settings are static (not being manipulated) while the card is first appearing.
	Note: The frame network card is the arbiter of all frame/card communications and in some cases may not accept full extent of parameter blast under some conditions.
Card DashBoard Name Control	Allows card name In DashBoard to be changed as desired. Click return to engage change.
Display Name	• Append to Product Name appends (or adds to) existing OEM name (for example, "9902-2UDX <i>Processing 1A</i> ").
Display Name Mode Append to Product Name	 Replace Product Name completely replaces the OEM name OEM name (for example, "Processing 1A").
Append to Product Name Replace Product Name	Note: DashBoard instance(s) may have to be refreshed before name change appears.
• Firmware Upgrade Controls	Firmware upgrade controls allow a selected firmware version (where multiple versions can be uploaded to the card's internal memory) to invoke an upgrade to a selected version either instantly, or set to install on the next card reboot (thereby allowing card upgrade downtime to be controlled at a scheduled point in time).

3

Table 3-2	9902-2UDX Function Menu List — continued

Admin System Networking	(continued)
site can always be directly uploaded to the	e firmware versions saved on the card. New upgrade firmware from our web card without using this page. Instructions for firmware downloading to your found at the Support>Firmware Downloads link at www.cobaltdigital.com.
 Access a firmware upgrade file from a network con bottom of DashBoard. 	nputer by clicking Upload at the Refresh Upload Reboot
 Browse to the location of the firmware upgrade file <i>Documents\v1.0.0019.bin</i>). Select the desired file and click Open to upload the 	Look jr: 🔛 My Documents 💌 🔇 🎓 🗊 -
 Immediate firmware upload. The card default setti Reboot After Upgrade checked allow a selected fir immediately uploaded as follows: Click Firmware To Load and select the desired upg this example, "v1.0.0019"). 	rmware version to be Automatically Reboot After Upgrade 🔽
2. Click Load Selected Firmware. The card now reb firmware is loaded.	poots and the selected
 Deferred firmware upload. With Automatically Reunchecked, firmware upgrade loading is held off unt rebooted. This allows scheduling a firmware upgrad when it is convenient to experience to downtime (up 60 seconds). Click Firmware To Load and select the desired up this example, "v1.0.0019"). Note now how the displayed and the second select the desired up this example. 	til the card is manually le downtime event until loads typically take about bgrade file to be loaded (in
card is manually rebooted (by pressing the Reboot	,
3. To cancel a deferred upload, press Cancel Pendin immediate upload/upgrade.	ng Upgrade. The card reverts to the default settings that allow an

Table 3-2	9902-2UDX	Function	Menu Li	ist — continued


Admin System Networking	(continued)			
Card Check and Restore Utilities Memory Test FPGA Memory Test Test	Memory Test allows all cells of the card FPGA memory to be tested. This control should only be activated under direction of product support. Exercising the memory test is not part of normal card maintenance.			
Memory Test Status Running Memory Test: 8.99% Memory Test Status Memory test completed successfully, please reboot the card Restore From SD Card Confirm Please contact support	Restore from SD Card allows card rendered inoperable to be restored using an SD memory card fitted to the card internal SD slot. Product support must be contacted prior to performing this operation. Use of any SD card not supplied by support can corrupt the card.			
Admin System Networking	The Networking sub-tab provides a dedicated Ethernet connection to card control and monitoring via a rear module Ethernet port. (This IP interface is entirely independent and separate from the card's DashBoard frame-based remote control/monitoring interface.) (Dedicated card control using IP has not been fully implemented at this release. Some functions may be reserved.)			
Card IP Physical Port Select Control Network Interface Frame Frame Rear I/O	 Allows card dedicated IP interface (as set below) to use frame communications or dedicated rear I/O module Ethernet RJ-45 port. Note: • Frame net connection allows cards with per-card Ethernet connection to connect with network via a shared frame Ethernet port instead of per-card dedicated Ethernet connectors on the card's rear module. Frame net connection is available only on certain frame models. • Card slot must be fitted with a rear I/O module equipped with an Ethernet connector in order to use Rear I/O selection. 			
Card IP Setup Controls Addressing Mode DHCP Static IP Address 192.168.1.106 Static Subnet Mask 265.255.255.0 Static Default Gateway 192.168.1.1 Static DNS 0.0.0 Allow SSH and Teinet Access	 Provides controls for setting up card dedicated IP interface. Addressing Mode selsects either DHCP or static. Where Static is selected, standard IP fields allow entry of Address, Subnet Mask, and Default Gateway. Where supported, allows card SNMP MIB files to be downloaded and saved using user-configured name. 			
Download SNMP MIB Files MIB-FILES.tar.gz Save				

Table 3-2 9902-2UDX Function Menu List — continued


Admin System Networking	9	(con	tinued)			
NTP Clock Setup Clock Setup NTP IP (use 0.0.0.0 for pool NTP) Local Timezone (NTP Only) NTP Status Use Network Interface for NTP Use Frame Network Card for NTP	0.0.0.0 US-Central Synchronized with NTP	device will • NTP I • Local • NTP \$ • Use N	use for logs IP sets the II I Timezone Status show Network Inte (aboxes allow	and other reco P address whe sets the record s if time is syn erface and Use	orded ad re NTP ded time ced wit er Fran	zation. This is the clock/time ctions. It is to be obtained. It to the localized time. In NTP or if an error exists. In NTP or if an error exists. In NTP or if an error exists.
User L	Auton lock s		naintains a l	og of	user actions and input	
User Log shows input lock and other user conditions (recent event at top of list).		with most		Time 22:40:36 12/02/15 22:40:34 12/02/15 21:17:36 12/02/15	Type Info Info	Event SDI Input sdi_in_c Locked to 720p 59.94 SDI Input sdi_in_d Locked to 1080i 59.94 SDI Input sdi_in_b Locked to 1080i 59.94
Clear User Log clears all entries. Download Log File opens a browser allowing the log saved on the host machine.		g file to be	Clear User Log Download Log File	21:17:18 12/02/15 Confirm 9922-FS tar.gz Save) [Info	Log file cleared


Table 3-2 9902-2UDX Function Menu List — continued


Alarn	าร	for and pro	controls for setting up opagate input prograr lio, and ancillary data	n video alarms for
		DashBoar	s and alarm status ca d tree-view frame ala or Syslog IP-based ala	rms, downloadable .tz
	eral sub-tabs which allow and ancillary data defect		nd alarm severity/propagati ed and shown below)	ion for input program video
Video Alarm Setup Video	Audio Aları Path 1 Audio		Ancillary Data Alarm Setur 2 Audio	D Logging Ancillary Data
Video Alarm Setup	for frozen and/or blac input). In the default e	k video detection on th	up screening engagement a ne card's four SDI inputs (ir n here, engagement and d etect.	ndependent for each SDI
\triangle			are recommended for at lea be generated during transit	
		Frozen Video Det	ection Setup	
Engagement	Holdoff (minutes) Engage		ngagement Holdoff (minutes)	Disengagement Holdoff (m
SDI Input A	0	3000 🔶 🗌	0 🗘	3000
SDI Input B	0 🗧	3000 🔶	0 🗘	3000
SDI Input C	0 🔶 📃	3000 🔶	0 🗘	3000
DI Input D	0 🔤	3000 🤤	0 🗘	3000
F		Black Video Dete		
SDI Input A	Holdoff (minutes) Engage 0 🔷	ment Holdoff (ms) Dise 3000 📿	ngagement Holdoff (minutes) 0 🔷	Disengagement Holdoff (m 3000
DI Input B	0	3000	0	3000
DI Input C		3000	0	3000
DI Input D	0	3000 🗘	0	3000
Audio Alarm Setup				
Audio Failover Threshold (engagement and dis the card's embedde	b sub-tab allows setting up sengagement holdoff for lov d audio input channels.	w or missing audio levels o
Trigger Holdoff (minutes)	0		Failover Threshold are con Failover Threshold (and ex	
Trigger Holdoff (ms)	5000	considered below	normal.	C ,
Release Holdoff (minutes) Release Holdoff (ms)	0	the program v input source of	els screened are from the c rideo/audio path (for examp on the Input Video tab, the is video/audio input are sci	le, if SDI A is selected as the 16 embedded channels
		recommender brief (or thres	ult holdoff and threshold se d for at least initial settings shold set too high), nuisanc ions to and from programs	a. If holdoff periods are too be alarms may be generate

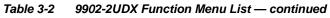

Alarms		(continued)		
Ancillary Data Alarm Setup Ancillary Data Alarm Setup sub-tab allows setting up screening engagement and disengagement holdoff for absence of closed captioning packets. Note: • Video screened is the card SDI that is selected for the program video/audio path. • Ancillary data condition detection is functional only for CEA608/708 packet-based closed captioning. This feature does not function for SD line 21 "waveform-based"				
Closed Captioning Presence Trigger Holdo Closed Captioning Absence Trigger Holdof	0) 10 20 30		
Alarm Propagation Tabs Video, Audio, and Ancillary Data sub-tab • Logging of alarms and conditions • Propagation of alarms to the card genera • Ignore alarm, or set severity as Warning Each of these sub-tabs is described below	l Card State/Da (yellow "LED")	ashBoard frame-based t	-	
Video Sub-tab independent triggered for any of the Sub- Condition/Status has LOS, Frozen, and Black status fields for all 4 SDI inputs. Illuminated "LED" indicates that condition is presently occurring. Color of LED is determined by user-set Severity level.	DI IN A thru SI • Log (wh • Alarm (v frame-le • Severity Error (re	DI IN D inputs. en checked) propagates when checked) propaga vel DashBoard tree-view v selects from Ignore/OK d "LED") alarm escalatio	s the alarm to a log tes the alarm to th / "LEDs". (green "LED"), Wa on states.	•
Condition Status Coss Of Signal SDI Input A Frozen Video SDI Input A	Log Alar	m Severity Error ~ Warning ~	Duration 00h 00m 23s 00h 00m 16s	Last Occurrence 07:28:13 07:23:57
Black Video SDI Input A		Warning ×	Never Triggered 01h 52m 00s	Never Triggered 03:37:57
Note: The Log, Alarm, Severity, and E identically as described here.	Ouration/Last C	occurrence columns appo	ear on the other al	arm sub-tabs and function

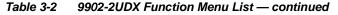

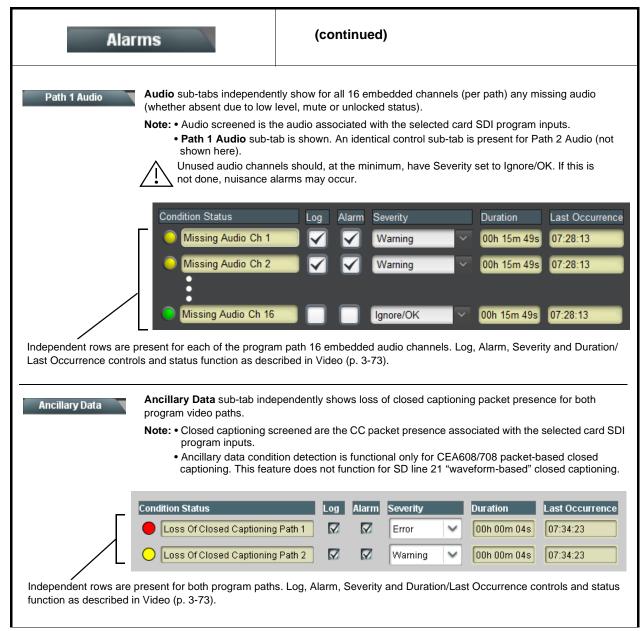

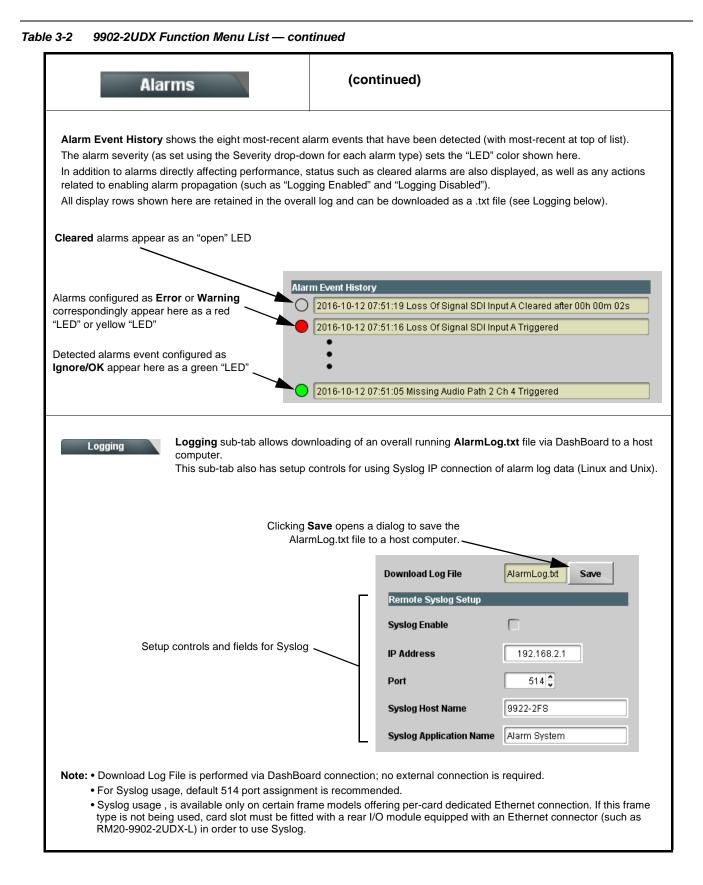

Troubleshooting

This section provides general troubleshooting information and specific symptom/corrective action for the 9902-2UDX card and its remote control interface. The 9902-2UDX card requires no periodic maintenance in its normal operation; if any error indication (as described in this section) occurs, use this section to correct the condition.

Error and Failure Indicator Overview

The 9902-2UDX card itself and its remote control systems all (to varying degrees) provide error and failure indications. Depending on how the 9902-2UDX card is being used (i.e, standalone or network controlled through DashBoardTM or a Remote Control Panel), check all available indications in the event of an error or failure condition.

The various 9902-2UDX card and remote control error and failure indicators are individually described below.

- **Note:** The descriptions below provide general information for the various status and error indicators. For specific failures, also use the appropriate subsection listed below.
 - Basic Troubleshooting Checks (p. 3-80)
 - 9902-2UDX Processing Error Troubleshooting (p. 3-81)
 - Troubleshooting Network/Remote Control Errors (p. 3-82)

9902-2UDX Card Edge Status/Error Indicators and Display

Figure 3-7 shows and describes the 9902-2UDX card edge status indicators and display. These indicators and the display show status and error conditions relating to the card itself and remote (network) communications (where applicable). Because these indicators are part of the card itself and require no external interface, the indicators are particularly useful in the event of communications problems with external devices such as network remote control devices.

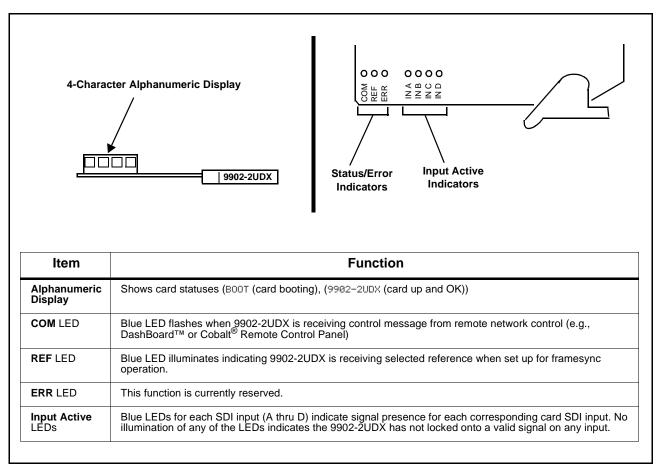


Figure 3-7 9902-2UDX Card Edge Status Indicators and Display

DashBoard[™] Status/Error Indicators and Displays

Figure 3-8 shows and describes the DashBoardTM status indicators and displays. These indicator icons and displays show status and error conditions relating to the 9902-2UDX card itself and remote (network) communications.

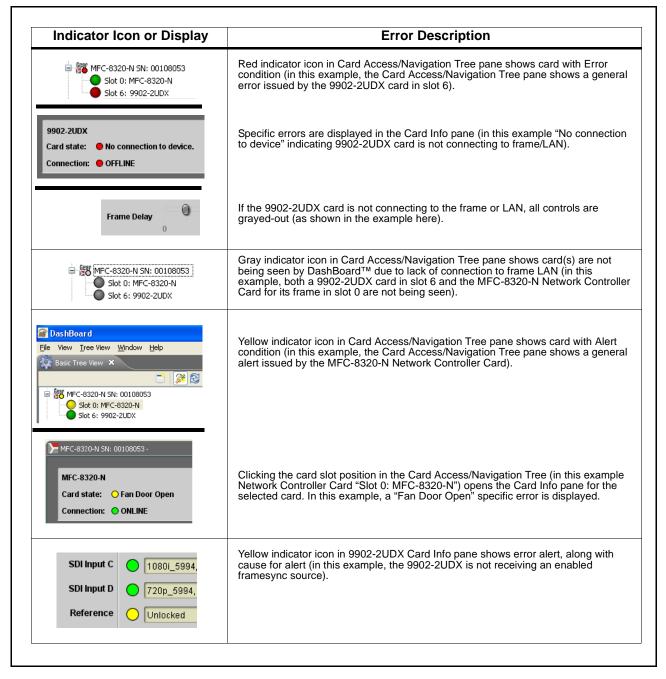


Figure 3-8 DashBoard[™] Status Indicator Icons and Displays

Access Card Info panes for specific cards by clicking the card slot position in the Card Access/Navigation Tree pane (as shown in the example in Figure 3-9).

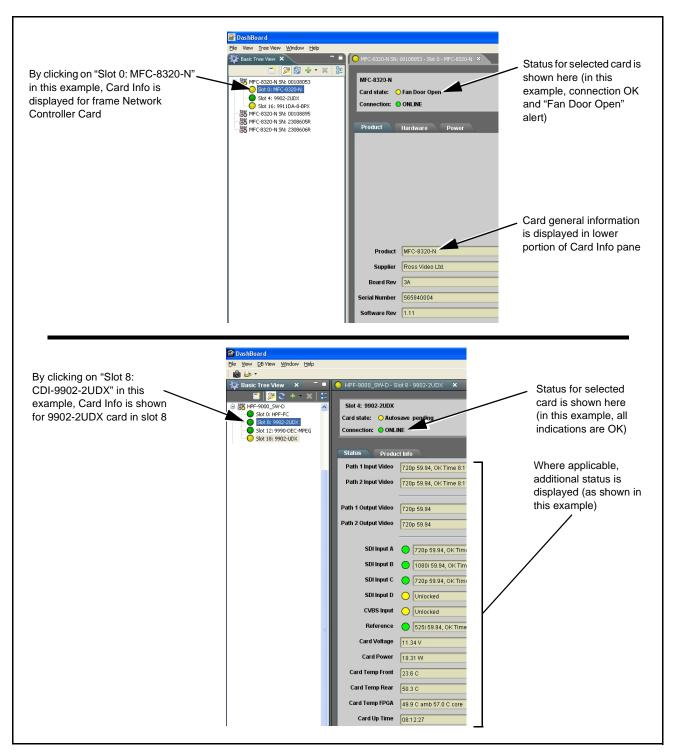


Figure 3-9 Selecting Specific Cards for Card Info Status Display

Basic Troubleshooting Checks

Failures of a general nature (affecting many cards and/or functions simultaneously), or gross inoperability errors are best addressed first by performing basic checks before proceeding further. Table 3-3 provides basic system checks that typically locate the source of most general problems. If required and applicable, perform further troubleshooting in accordance with the other troubleshooting tables in this section.

Item	Checks	
Verify power presence and characteristics	• On both the frame Network Controller Card and the 9902-2UDX, in all cases when power is being properly supplied there is always at least one indicator illuminated. Any card showing no illuminated indicators should be cause for concern.	
	 Check the Power Consumed indication for the 9902-2UDX card. This can be observed using the DashBoard[™] Card Info pane. 	
	 If display shows no power being consumed, either the frame power supply, connections, or the 9902-2UDX card itself is defective. 	
	 If display shows excessive power being consumed (see Technical Specifications (p. 1-15) in Chapter 1, "Introduction"), the 9902-2UDX card may be defective. 	
Check Cable connection secureness and connecting points	Make certain all cable connections are fully secure (including coaxial cable attachment to cable ferrules on BNC connectors). Also, make certain all connecting points are as intended. Make certain the selected connecting points correlate to the intended card inputs and/or outputs. Cabling mistakes are especially easy to make when working with large I/O modules.	
Card seating within slots	Make certain all cards are properly seated within its frame slot. (It is best to assure proper seating by ejecting the card and reseating it again.)	
Check status indicators and displays	On both DashBoard [™] and the 9902-2UDX card edge indicators, red indications signify an error condition. If a status indicator signifies an error, proceed to the following tables in this section for further action.	
Troubleshoot by substitution	All cards within the frame can be hot-swapped, replacing a suspect card or module with a known-good item.	

Table 3-3 Basic Troubleshooting Checks

9902-2UDX Processing Error Troubleshooting

Table 3-4 provides 9902-2UDX processing troubleshooting information. If the 9902-2UDX card exhibits any of the symptoms listed in Table 3-4, follow the troubleshooting instructions provided.

In the majority of cases, most errors are caused by simple errors where the 9902-2UDX is not appropriately set for the type of signal being received by the card.

- **Note:** The error indications shown below are typical for the corresponding error conditions listed. Other error indications not specified here may also be displayed on DashBoard[™] and/or the 9902-2UDX card edge status indicators.
- **Note:** Where errors are displayed on both the 9902-2UDX card and network remote controls, the respective indicators and displays are individually described in this section.

Symptom	Error/Condition	Corrective Action
 DashBoard[™] shows Unlocked message in 9902-2UDX Card Info pane SDI Input A O Unlocked SDI Input B O Unlocked Card edge Input LED corresponding to input is not illuminated 	No video input present	Make certain intended video source is connected to appropriate 9902-2UDX card video input. Make certain BNC cable connections between frame Rear I/O Module for the card and signal source are OK.
Ancillary data (closed captioning, timecode) not transferred	Control(s) not enabled	• Make certain respective control is set to On or Enabled (as appropriate).
through 9902-2UDX	VANC line number conflict between two or more ancillary data items	• Make certain each ancillary data item to be passed is assigned a unique line number (see Ancillary Data Line Number Locations and Ranges on page 3-9).
(Option +QC only) Audio silence event not detected or triggered on	Holdoff set too long to detect condition	The Trigger Holdoff controls on the Audio Detect Events tab allow ignoring silence events unless the event duration exceeds the holdoff setting. Make certain holdoff is set sufficiently low to detect events as desired.
Audio not processed or passed through card	Enable control not turned on	On Output Audio Routing/Controls tab, Audio Group Enable control for group 1 thru 4 must be turned on for sources to be embedded into respective embedded channel groups.

Table 3-4	Troubleshooting Processing Errors by Symptom
-----------	--

Symptom	Error/Condition	Corrective Action
Excessive or nuisance input signal quality events in log or Card State status display	Holdoff periods are too brief (or threshold set too high)	If holdoff periods are too brief (or threshold set too sensitive), nuisance alarms may be generated during transitions to and from programs and interstitials, as well as during certain content.
Selected upgrade firmware will not upload	Automatic reboot after upgrade turned off	Card Presets > Automatically Reboot After Upgrade box unchecked. Either reboot the card manually, or leave this box checked to allow automatic reboot to engage an upgrade upon selecting the upgrade.
SD closed captioning waveform or character rendering is corrupted	Moving box insertions running into line 21	For SD usage, burn-ins can impinge on and corrupt line 21 closed-captioning waveform if positioned too close to the upper right of the raster. Typically, moving box insertions are not intended for content (such as OTA) where CC is required. If CC is present and must be retained, make certain to check CC content if burn-in insertions are enabled and reposition burn-ins to avoid line 21 interference.
Card does not pass video or audio as expected. Control settings spontaneously changed from expected settings.	Event-based preset inadvertently invoked	Event-based preset loading (Event Setup tab > Event Triggers sub-tab) should be set to Disabled if this function is not to be used. Read and understand this control description before using these controls to make sure engagement for all expected conditions is considered. See Presets (p. 3-61) for more information.
Card will not retain user settings, or setting changes or presets spontaneously invoke.	Event Based Loading sub-tab inadvertently set to trigger on event	If event based loading is not to be used, make certain Event Based Presets is disabled (either using master Enable/Disable control or through events settings. See Presets (p. 3-61) for more information.

 Table 3-4
 Troubleshooting Processing Errors by Symptom — continued

Troubleshooting Network/Remote Control Errors

Refer to Cobalt[®] reference guide "Remote Control User Guide" (PN 9000RCS-RM) for network/remote control troubleshooting information.

In Case of Problems

Recovering Card From SD Memory Card

New production cards come equipped with an SD card installed in a slot receptacle on the underside of the card. The data on this SD card can be used to restore a card should the card become unresponsive (can't communicate with DashBoard or other remote control). Recovering a card using the procedure here will restore the card to any installed option licenses and the most recent firmware installed.

- 1. (See Figure 3-10.) Make certain the card has the proper SD card installed in the under-card slot. If SD card is **not** installed, contact Product Support to obtain an SD card.
- Note: (Option +TTS only) Cards shipped with option +TTS use an SD card for the TTS library in addition to recovery files. If your +TTS-equipped device was received earlier than December 2015, your SD may not contain the recovery files. Contact Product Support to obtain the updated SD card containing both TTS library and SD recovery files.
 - If unit is a BBG-1000 Series device, remove the top cover before proceeding.

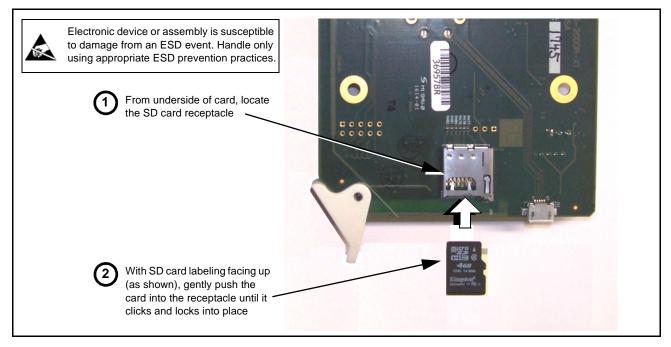


Figure 3-10 SD Card Installation

2. (See Figure 3-11.) With card powered-down, locate the **MMC BOOT** button on the card. Proceed as shown in picture.

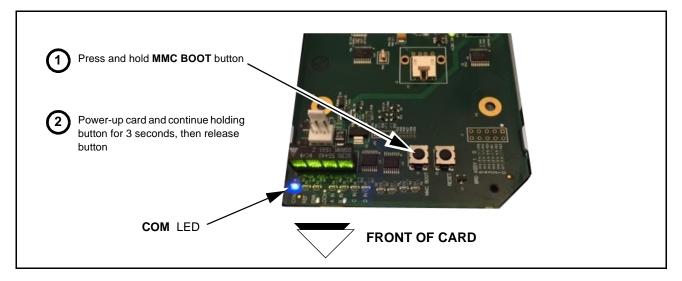


Figure 3-11 MMC Boot Button

- 3. With button now released, the card will begin reprogramming:
 - **COM** LED illuminates and remains illuminated.
 - When reprogram is complete, **COM** LED turns off, on, and then off again (entire process takes about 1-1/2 minute).
- 4. Remove power from the card (remove card from slot or power-down BBG-1000 Series unit).
- **5.** Re-apply power to the card. The card/device will display as *"UNLICENSED"* in DashBoard/remote control.
- In Dashboard or web remote control, go to Admin tab and click Restore from SD Card. After about 1/2-minute, the card license(s) will be restored and card will be using its most recently installed firmware.
- **7.** Card/device can now be used as normal. On BBG-1000 Series unit, re-install top cover.

Contact and Return Authorization

Should any problem arise with this product that was not solved by the information in this section, please contact the Cobalt Digital Inc. Technical Support Department.

If required, a Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions. If required, a temporary replacement item will be made available at a nominal charge. Any shipping costs incurred are the customer's responsibility. All products shipped to you from Cobalt Digital Inc. will be shipped collect.

The Cobalt Digital Inc. Technical Support Department will continue to provide advice on any product manufactured by Cobalt Digital Inc., beyond the warranty period without charge, for the life of the product.

See Contact Cobalt Digital Inc. (p. 1-22) in Chapter 1, "Introduction" for contact information.

This page intentionally blank

Cobalt Digital Inc.



2506 Galen Drive Champaign, IL 61821 Voice 217.344.1243 • Fax 217.344.1245 www.cobaltdigital.com