



3G/HD/SD-SDI Standalone Dual-Channel - Path 1 UDX / Path 2 Frame Sync with Audio Embed/De-Embed

Product Manual

	Cobalt Digital Inc.
<u>COBALT.</u>	2506 Galen Drive Champaign, IL 61821 Voice 217.344.1243 • Fax 217.344.1245 www.cobaltdigital.com

BBG-1002-UDX-FS-OM (V1.1)

Copyright

©Copyright 2021, Cobalt Digital Inc. All Rights Reserved.

Duplication or distribution of this manual and any information contained within is strictly prohibited without the express written permission of Cobalt Digital Inc. This manual and any information contained within, may not be reproduced, distributed, or transmitted in any form, or by any means, for any purpose, without the express written permission of Cobalt Digital Inc. Reproduction or reverse engineering of software used in this device is prohibited.

Disclaimer

The information in this document has been carefully examined and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, Cobalt Digital Inc. reserves the right to make changes to any products herein to improve readability, function, or design. Cobalt Digital Inc. does not assume any liability arising out of the application or use of any product or circuit described herein.

Trademark Information

Cobalt[®] is a registered trademark of Cobalt Digital Inc.

openGear[®] is a registered trademark of Ross Video Limited. DashBoardTM is a trademark of Ross Video Limited.

Dolby[®] is a registered trademark of Dolby Laboratories, Inc. Other product names or trademarks appearing in this manual are the property of their respective owners.

Congratulations on choosing the Cobalt[®] BBG-1002-UDX-FS 3G/HD/SD-SDI Standalone Dual-Channel - Path 1 UDX / Path 2 Frame Sync with Audio Embed/De-Embed. The BBG-1002-UDX-FS is part of a full line of modular processing and conversion gear for broadcast TV environments. The Cobalt Digital Inc. line includes video decoders and encoders, audio embedders and de-embedders, distribution amplifiers, format converters, remote control systems and much more. Should you have questions pertaining to the installation or operation of your BBG-1002-UDX-FS, please contact us at the contact information on the front cover.

Manual No.:	BBG-1002-UDX-FS-OM
Document Version:	V1.1
Release Date:	February 24, 2021
Applicable for Firmware Version (or greater):	v2.101 or greater
Description of product/manual changes:	 MInor additions of added UI controls, functions per latest formware Minor consistency edits to manual.

Table of Contents

Chapter 1	Introduction	1-1
	Overview	1-1
	Cobalt Reference Guides	1-1
	Manual Conventions	1-2
	Warnings, Cautions, and Notes	1-3
	Labeling Symbol Definitions	1-3
	Safety and Regulatory Summary	1-4
	Warnings	1-4
	Cautions	1-4
	EMC Compliance Per Market	1-4
	BBG-1002-UDX-FS Functional Description	1-5
	BBG-1002-UDX-FS Input/Output Formats	1-5
	Video Processor Description	1-7
	Audio Processor Description	1-11
	Control and Data Input/Output Interfaces	1-13
	Alarm Function	1-14
	User Control Interface	1-14
	Technical Specifications	1-15
	Warranty and Service Information	1-19
	Cobalt Digital Inc. Limited Warranty	1-19
	Contact Cobalt Digital Inc.	1-20
Chapter 2	Installation	2-1
_	Overview	2-1
	Installing the BBG-1002-UDX-FS	2-1
	Installing Using BBG-1000-TRAY Optional Mounting Tray	
	BBG-1002-UDX-FS Unit Dimensions	
	Rear Panel Connections	2-2
	GPIO, Serial (COMM), and Analog Audio Connections	2-5
Chapter 3	Operating Instructions	3-1
L	Overview	
	BBG-1002-UDX-FS Front Panel Display and Menu-Accessed Control	
	Connecting BBG-1002-UDX-FS To Your Network	
	Finding a BBG-1002-UDX-FS Device in DashBoard	
	Control and Display Descriptions	
	Function Menu/Parameter Overview	
	Web User Interface	
	Display Theme	
	Checking BBG-1002-UDX-FS Device Information	
	Ancillary Data Line Number Locations and Ranges	
	- mentary Dura Dire i vario er Docutorio una Rungoommentaria	

BBG-1002-UDX-FS Function Menu List and Descriptions	3-10
Input Video Controls	3-11
Output Video Mode Controls	3-12
Scaler	3-14
Framesync	3-18
Input Audio Status	3-21
Input Audio Routing/Controls	3-22
Video Quality Events	3-27
Audio Detect Events Setup Controls	3-28
Closed Captioning	3-29
Video Proc/Color Correction	3-30
Output Audio Routing/Controls	3-33
Timecode	3-38
Reticules	3-43
Wings Insertion	3-46
AFD Processor Controls	3-47
Moving Box Insertion	3-53
Ancillary Data Proc Controls	3-55
COMM Ports Setup Controls	3-58
Presets	3-60
GPO Setup Controls	3-62
Event Setup Controls	3-63
Admin	3-67
Alarms Setup Controls	3-69
Front Panel User Menus	3-73
User Log	3-73
Uploading Firmware Using Web Interface and GUI	3-74
Troubleshooting	3-75
Error and Failure Indicator Overview	3-75
Basic Troubleshooting Checks	3-77
BBG-1002-UDX-FS Processing Error Troubleshooting	3-78
Troubleshooting Network/Remote Control Errors	3-79
In Case of Problems	3-79
	517

Chapter 1

Introduction

Overview

This manual provides installation and operating instructions for the BBG-1002-UDX-FS Standalone Dual-Channel - Path 1 UDX / Path 2 Frame Sync with Audio Embed/De-Embed unit (also referred to herein as the BBG-1002-UDX-FS).

This manual consists of the following chapters:

- Chapter 1, "Introduction" Provides information about this manual and what is covered. Also provides general information regarding the BBG-1002-UDX-FS.
- Chapter 2, "Installation" Provides instructions for installing the BBG-1002-UDX-FS in a frame, and optionally installing a BBG-1002-UDX-FS Rear I/O Module.
- Chapter 3, "Operating Instructions" Provides overviews of operating controls and instructions for using the BBG-1002-UDX-FS.

This chapter contains the following information:

- Manual Conventions (p. 1-2)
- Safety and Regulatory Summary (p. 1-4)
- BBG-1002-UDX-FS Functional Description (p. 1-5)
- Technical Specifications (p. 1-15)
- Warranty and Service Information (p. 1-19)
- Contact Cobalt Digital Inc. (p. 1-20)

Cobalt Reference Guides

From the Cobalt[®] web home page, go to **Support>Reference Documents** for easy to use guides covering network remote control, card firmware updates, example card processing UI setups and other topics.

Manual Conventions

In this manual, display messages and connectors are shown using the exact name shown on the BBG-1002-UDX-FS itself. Examples are provided below.

• Device display messages are shown like this:



• Connector names are shown like this: SDI IN A

In this manual, the terms below are applicable as follows:

- BBG-1002-UDX-FS refers to the BBG-1002-UDX-FS Standalone Dual-Channel - Path 1 UDX / Path 2 Frame Sync with Audio Embed/ De-Embed unit.
- **Frame** refers to the HPF-9000, oGx, OG3-FR, 8321, or similar 20-slot frame that houses Cobalt[®] or other cards.
- Device and/or Card refers to a Cobalt® or other card.
- **System** and/or **Video System** refers to the mix of interconnected production and terminal equipment in which the BBG-1002-UDX-FS and other devices/cards operate.
- Functions and/or features that are available only as an option are denoted in this manual like this:

Option 🖻

Most options are covered in this manual. However, if your unit has DashBoard tabs that are not described in this manual it indicates that the optional function/feature is covered in a separate Manual Supplement.

You can download a pdf of the option supplement by entering the option code on the Cobalt web page search window (for example, **+TTS**) and then clicking on **Product Downloads** to view or download the supplement pdf.

Warnings, Cautions, and Notes

Certain items in this manual are highlighted by special messages. The definitions are provided below.

Warnings

Warning messages indicate a possible hazard which, if not avoided, could result in personal injury or death.

Cautions

Caution messages indicate a problem or incorrect practice which, if not avoided, could result in improper operation or damage to the product.

Notes

Notes provide supplemental information to the accompanying text. Notes typically precede the text to which they apply.

Labeling Symbol Definitions

Important note regarding product usage. Failure to observe may result in unexpected or incorrect operation.
Electronic device or assembly is susceptible to damage from an ESD event. Handle only using appropriate ESD prevention practices. If ESD wrist strap is not available, handle card only by edges and avoid contact with any connectors or components.
 Symbol (WEEE 2002/96/EC) For product disposal, ensure the following: Do not dispose of this product as unsorted municipal waste. Collect this product separately. Use collection and return systems available to you.


Safety and Regulatory Summary

Warnings



To reduce risk of electric shock do not remove line voltage service barrier cover on frame equipment containing an AC power supply. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

Cautions

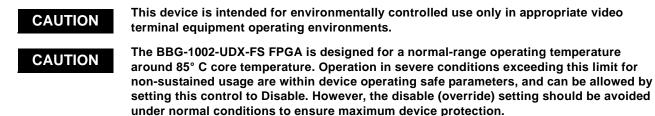

EMC Compliance Per Market

Market	Regulatory Standard or Code	
United States of America	FCC "Code of Federal Regulations" Title 47 Part15, Subpart B, Class A	
Canada	ICES-003	
International	CISPR 24:2010 IEC 61000-4-2:2008 IEC 61000-4-3:2006 with A1:2007 and A2:2010 IEC 61000-4-4:2004 IEC 61000-4-6:2008 IEC 61000-6-3:2006 with A1:2010 CISPR 22:2008	

BBG-1002-UDX-FS Functional Description

Figure 1-1 shows a functional block diagram of the BBG-1002-UDX-FS. The BBG-1002-UDX-FS dual-channel unit provides two independent signal paths (**Path 1** and **Path 2**) of UDX conversion, frame sync, and audio embedding and de-embedding on a single unit. The two paths share an input and output SDI crosspoint to receive and send two discrete SDI inputs and outputs. The BBG-1002-UDX-FS also includes AES/analog audio support and CVBS video I/O. In addition to a basic signal presence input failover function, a Quality Check option allows failover to alternate inputs based on user-configurable subjective criteria such as black or frozen frame. A moving-box insertion can be enabled to serve as a dynamic raster confidence check even in cases where the input video image is static or lost.

The BBG-1002-UDX-FS also provides timecode/closed-captioning conversion from packet-based timecode formats and CEA608/708 HD formats to HD ATC, SD_ATC, and SD VITC waveform-based timecode.

BBG-1002-UDX-FS Input/Output Formats

The BBG-1002-UDX-FS provides the following inputs and outputs (which can be independently used for Path 1 and/or Path 2:

- Inputs:
 - 3G/HD/SD SDI IN A thru SDI IN D four 3G/HD/SD-SDI inputs.
 SDI IN A or SDI IN B can be set to failover to A or B in absence of opposite channel of this pair.
 - CVBS IN CVBS coaxial analog video input.
 - AES IN BNC (AES-3id, 75 Ω) ports as AES input (number of ports dependent on rear I/O module used).
 - AN-AUD IN Four balanced analog audio embed inputs.
- Outputs:
 - **3G/HD/SD-SDI OUT (1-4)** four 3G/HD/SD-SDI buffered video outputs. Each output can be independently set as processed output video or selected input video reclocked.
 - **AES OUT –** BNC (AES-3id, 75Ω) ports as AES outputs (number of ports dependent on rear I/O module used).
 - AN-AUD OUT Four balanced analog audio de-embed outputs.
 - **CVBS OUT** CVBS coaxial analog video usable with SD video streams.
- **Note:** Input select also allows internal connection from one processing path output to the opposite processing path input. This allows "serial" processing connections without requiring external jumpering on the unit rear panel.

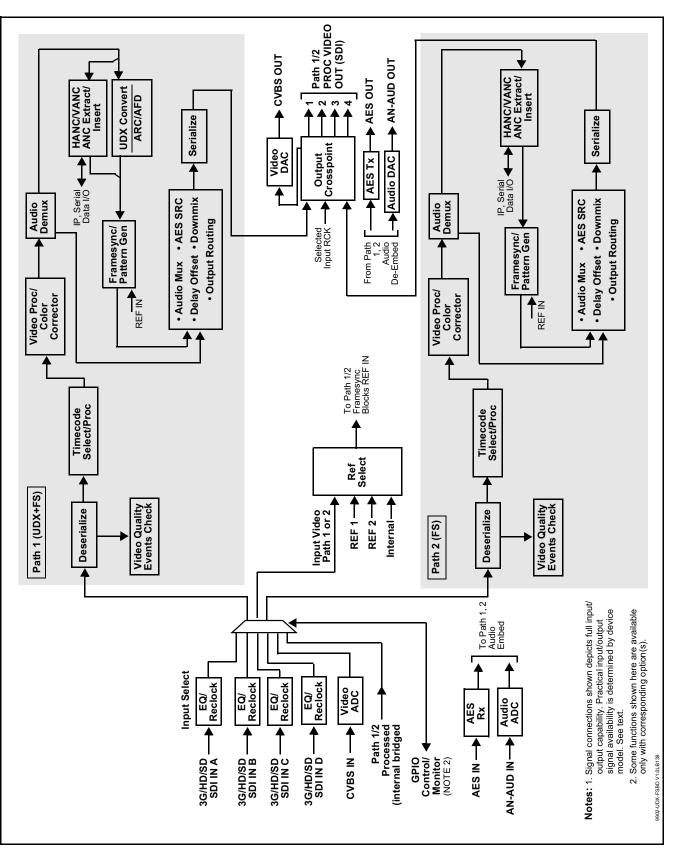


Figure 1-1 BBG-1002-UDX-FS Functional Block Diagram

Video Processor Description

Note: Unless otherwise noted, the following functions are independently available for Path 1 and Path 2 processing paths.

The BBG-1002-UDX-FS video subsystem provides the functions described below.

Input Video Select/Quality Check Functions

Used in common as a routing source for both **Path 1/Path 2** is a GUI-based control that allows selecting from up to four 3G/HD/SD-SDI inputs, and a SD CVBS analog video input. This function also allows processed outputs from one path to be routed to the alternate path input. For analog inputs, waveform-based ancillary data is preserved for extraction and usage later in the processing chain.

The input can be selected using DashBoard manual control, set to failover to an alternate input upon loss of the target input, and can be externally selected via a GPIO interface. An input **Allowed Rasters** and **Allowed Frame Rates** filter allows inputs to be filtered (screened) for only user-allowed raster sizes and frame rates, with unallowed raster/rates being rejected as an input (input unlock). Reclocked copies of any SDI input can be outputted by the unit when selected as a choice on the output crosspoint.

Option (Option +QC). Quality Check allows criteria such as black/ frozen frame events to propagate an event alert. This alert can be used by the Presets function to invoke input video routing changes, GPO, and other actions.

Timecode Processor

(See Figure 1-2.) This function provides for extraction of timecode data from input video source, and in turn allow individual timecode strings to be embedded into the output video. The function can monitor any of the video inputs for supported timecode formats such as ATC_LTC or ATC_VITC for down-conversions to HD, and ATC_VITC or VITC waveform (with selectable odd/even field line number control) for SD SDI or CVBS inputs. Waveform VITC timecode can also be extracted from a reference input and used as the output timecode value. If the preferred format is not detected, the unit uses other formats (where available) as desired. An internally-generated free-run timecode can be also be embedded on output video if desired.

The function also provides conversion between various timecode formats and provides independent insertion and line number controls for each SDI timecode output format.

Option D When licensed with option **+LTC**, this function also can receive, send and translate between audio/RS-485 LTC timecode formats and the VBI formats described above.

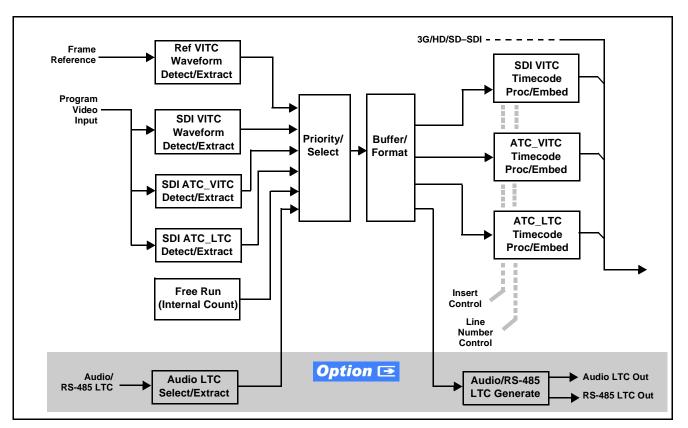


Figure 1-2 Timecode Processor

Frame Sync Function

This function provides for frame sync control using an external reference signal, selected input video, or internal timing as a frame sync reference.

This function also allows horizontal and/or vertical offset to be added between the output video and the frame sync reference.

Frame sync can select from external reference source, or free-run input video sync. Selectable failover allows alternate reference selection should the initial reference source become unavailable or invalid. In the event of input video loss of signal, the output can be set to disable video, go to black, go to an internal test signal generator pattern, or freeze to the last intact frame (last frame having valid SAV and EAV codes).

An internal test signal generator provides a selection of various standard patterns such as color bars, sweep patterns, and other technical patterns. The test patterns can be applied to the output video upon loss of input or manually inserted at any time.

Wings Insertion

Wings insertion allows a symmetrical L-R wings insertion to be integrated into the program video output. Wings video is accommodated using a separate wings SDI input. The wings user interface displays wings timing relative to the output video, allowing wings timing offset to be adjusted such that wings can be properly framed. (This function does not provide timing offset control of the wings video; offset must be provided by a external frame sync card or device controlling the wings video feed.)

The wings L/R insertion width can set to automatically track with scaler ARC (Path1) or be manually configured using a wings width control for either Path 1 or 2.

Scaler Function (Path 1 Only)

The scaler function provides **Path 1** up/down/cross-conversion to 3G/HD/SD from multiple SD and 3G/HD video formats and multiple frame rates, and cross-conversion between interlaced and progressive formats, with auto-format detect/down-conversion of SMPTE 424M/292M/259M formats.

The scaler function also provides aspect ratio conversion that provides a choice from several standard aspect ratios. User-defined settings allow custom user-defined H and V aspect ratio control. Reticule insertion provides safe action area marking as well as other reticule functions and patterns.

The scaler provides special modes that allow de-interlacing to be bypassed in certain cases to reduce processing latency. Also provided are selections to optimize 3:2 pulldown conversion where timecode or other timing references can be relied upon to indicate frame transitions.

Note: Option **+UDX-FS-TO-2UDX** upgrades Path 2 to full UDX/FS function. When this option is installed, the device functions as BBG-1002-2UDX. Refer to product manual BBG-1002-2UDX-OM for device with this option.

AFD ARC Processor

The AFD ARC Processor allows extracted Aspect Ratio Control (ARC) data from the input video (in AFD format) and provides:

- H/V cross-conversion matrix in which a received code directs a same or other user-selectable alternate H/V ratio on the output for any of several H/V ratios.
- Directs scaler automatic active ARC in response to received and/or converted ARC code (Scaler Follows ARC).

The input video is checked for ARC formats and can be set to provide a trigger upon when a selected ARC format is received, the code associated with the received format can be applied to the output. Received H/V codes can also be applied through an H/V conversion matrix that allows alternate H/V ratios for a given received input code. The selected output H/V ratio can be set to automatically apply this aspect ratio to the program video.

Color Corrector **Option E**

Option **+COLOR** converts the YCbCr SDI input video to the 4:4:4 RGB color space (where the color correction is applied), and then back to YCbCr SDI on the output. Controls are available to adjust each RGB level independently for both white levels (gain) and black levels (offset). Gamma can also be independently adjusted for each RGB channels. Various controls can be ganged to provide adjustment for all three color channels simultaneously. Color correction can be independently applied to either path.

Video Quality Events Detect Function **Option Detect**

Option +QC provides a Video Quality Events user interface and an Event Triggers user interface for setting an area of concern across the program raster which can be monitored for frozen or black video events. Threshold controls allow setting the sensitivity of the function, while engage and disengage threshold timing controls allow setting how fast the event detection engages and releases when triggered. The Event Triggers user interface allows instructing the unit as to the action to take upon an event (such as go to a changed signal routing, activate a GPO, send an automated email, or go to a user-defined preset).

An **Event Triggers** user interface can detect Closed Caption Presence and Closed Caption Absence events. The **Event Triggers** user interface in turn allows instructing the unit as to the action to take upon an event (such as go to a changed signal routing, activate a GPO, send an automated email, or go to a user-defined preset).

Ancillary Data Processor **Option E**

This function provides full VANC/HANC ancillary data de-embedding and embedding for 3G/HD/SD-SDI streams. Direct access to DID and SDID locations allows extraction or insertion of user data such as camera PTZ, SCTE 104, closed-captioning read/insert, GPI/GPO via ANC, or other specialized user payloads. Data can be extracted and inserted within the unit (Bridge mode), or inserted and/or extracted to and from the unit via serial or IP interfaces connecting to external devices/systems. A rear I/O module with a dedicated IP port can be used with the ancillary data processor function for data insertion or extraction via IP.

Video Output Crosspoint

Used in common as a routing source for both **Path 1/Path 2** is a four-output video matrix crosspoint that allows independently applying the unit processed video output or reclocked input to any of the four discrete coaxial outputs (**SDI OUT 1** thru **SDI OUT 4**). For an SD output, a CVBS coaxial output is available as a processed video output.

Audio Processor Description

Note: Path 1 and Path 2 have individual independent digital audio embed and de-embed banks for each of the processing path's 16-channels of embedded audio. The device's 16 channels of AES embed/de-embed can be allocated individually to any or either path's embed or de-embed nodes. Similarly, four-channel analog audio can be individually allocated across any or either path's embed or de-embed or de-embed nodes.

The audio processor operates as an internal audio router. This function chooses from the following inputs:

- 16 channels of embedded audio from the SDI video input (default 1-to-1 routing to SDI output)
- Up to 16 channels (8 pairs) of discrete AES input¹
- Up to 4 channels of balanced analog audio input

(See Figure 1-3.) The audio processing subsection is built around the device's two internal 16-channel audio buses (Path 1 and Path 2). Each 16-channel bus receives inputs from an input routing crosspoint that routes de-embedded, and discrete AES and analog audio inputs, over the 16-channel bus. Correspondingly, at the output end of the 16-channel bus is an output routing crosspoint that in turn distributes the 16-channel bus signals to embedded, and discrete AES and analog audio outputs.

An Input Audio Status display shows the presence and peak level of each input audio channel received by the device. In addition to SDI embedded audio channel sources, analog and coaxial AES inputs are available as input audio choices. For AES audio inputs, payload is identified (PCM or data such as Dolby[®] Digital or E). Each AES input pair has independent sample rate converters to align each input pair with video timing to accommodate cases where AES audio is not synchronous with input video (SRC automatically bypassed for non-PCM payloads). As such, the audio subsection provides a full crosspoint between all supported audio inputs and output types. The audio output crosspoint for each path's embedded output allows embedded channel selection from the respective path's own channels, or channels from the alternate processing path.

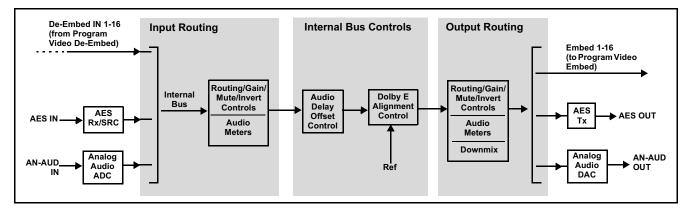


Figure 1-3 Basic Audio Processing Block Diagram

1. Discrete audio I/O channel count is dependent on model.

Option (Option +CQS). Clean and Quiet Switching allows SDI input selection to be changed from one source to another while ducking audio during controlled input video switching transitions to provide silence between input switches. The cross-fade is queued for the next available RP168 switch line following the switch command.

- **Note:** Clean audio switching is assured only for intentional, controlled switches via user control. Clean audio switching cannot be assured for failover switches.
 - Clean switching requires that both SDI signals (switch from and switch to) be stable and present.
 - Clean audio switching function is designed for PCM audio. This function does not assure clean decoded audio when switching from/to Dolby or other non-PCM audio.

Audio Down Mix Function

(See Figure 1-4.) The Audio Down Mixer function provides for the selection of any five embedded channels serving as Left (L), Right (R), Center (C), Left Surround (Ls), and Right Surround (Rs) individual signals to be multiplexed into stereo pair Down Mix Left (DM-L) and Down Mix Right (DM-R). The resulting stereo pair DM-L and DM-R can in turn be routed to any embedded audio pair as desired (or de-embedded to an AES or analog audio output).

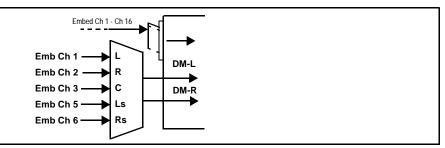


Figure 1-4 Audio Down Mix Functional Block Diagram with Example Sources

Flex Buses

For both input and output nodes before and after the internal buses, flex buses provide flexible-structure mixer in which any of 16 summing nodes (**Flex Mix Bus A** thru **Flex Mix Bus P**) can receive any device audio input, thereby allowing several customizable mixing schemes. Similarly, any of the 16 internal bus signals can be applied to an output flex bus mixer. The output flex bus allows cross-sourcing from both **Path 1** and **Path 2** embedded internal Audio Bus sources to the Path 1 and Path 2 discrete output audio crosspoints.

1

Text-To-Speech **Option E**

Cobalt Digital **+TTS** is a complete 21CVAA digital text-to-speech generation / audio insertion solution for embedded and discrete audio systems.

+TTS interfaces with industry standard Windows Share folder systems to receive non-proprietary text, XML, or similar plain text files, and converts and inserts realistic human-voice audio into user-configured audio channels (typically an SAP channel pair intended for this playout). **+TTS** allows for prioritization based on the organization's discretion (for example, severe weather alerts out-prioritizing school closings). Alert tones are inserted over the main program channels to alert the visually impaired that emergency content is to occur on the SAP channel. Alerts can be played a configurable number of times, and alerts with higher priority can interrupt current lists for breaking news. Once the interrupt message is broadcast, **+TTS** automatically reverts to normal audio programming. Refer to +TTS Manual Supplement OPT-TTS-MS for detailed information and installation/setup instructions.

Audio Events Detect Function **Option Detect**

Option +QC provides a Audio Detect Events user interface and an Event Triggers user interface for checking user-selected channels to detect audio silence conditions. The Event Triggers user interface in turn allows instructing the device as to the action to take upon an event (such as go to a changed signal routing, activate a GPO, send an automated email, or go to a user-defined preset).

Control and Data Input/Output Interfaces

GPI Interface

Two independent ground-closure sensing GPI inputs (**GPI 1** and **GPI 2**; each sharing common ground connection as chassis potential) are available. Associated with each GPI user control is a selection of one of 32 user-defined unit presets in which GPI activation invokes a unit control preset. Because the GPI closure invokes a user-defined preset, the resulting setup is highly flexible and totally user-defined. Invoking a user preset to effect a change involves setup communication limited **only** to the items being changed; the unit remains on-line during the setup, and the called preset is rapidly applied.

GPI triggering can be user selected to consider the activity on discrete GPI ports, or combinations of logic states considering both GPI inputs, as well as be set for level or edge triggering. This flexibility allows multistage, progressive actions to be invoked if desired. Indication is provided showing whenever a GPI input has been invoked.

GPO Interface

Two independent phototransistor non-referenced (floating) contact pairs (**GPO 1/1** and **GPO 2/2**) are available. A GPO can be invoked by setting a GPO to be enabled when a preset is in turn applied (i.e., when a preset is invoked (either manually or via event-based loading), the GPO is correspondingly also activated.

Serial (COMM) Ports

The BBG-1002-UDX-FS is equipped with two, 3-wire serial ports (**COM 1** - **Serial Port 1**, **COM 2** - **Serial Port 2**). The ports provide for SMPTE 2020 de-embedding to an output port, and provide RS-485 LTC I/O (when licensed with option +LTC). Either port can be configured as RS-232 Tx/Rx or RS-4585 non-duplexed Tx or Rx.

+SCTE104 Insertion Option

Note: Option +SCTE104 is available only for Path1.

Option +SCTE104 provides generation and insertion of SCTE 104 messages into baseband SDI. Message send can be triggered from automation GPI or other event action modes. The option can also execute actions based on SCTE 104 messages received, as well as send triggered SCTE 104 packets to other downstream systems.

The user interface is based on common SCTE 104 operations: Splice Start Normal, Splice Start Intermediate, Splice End Normal, Splice End Intermediate, and Splice Cancel (splice_request_data variants), offering full control of splice start, end, and cancel as well as pre-roll and break duration offsets. (A Manual Supplement is planned for this option. Please check product web page.)

Alarm Function

The unit can be set to monitor input video/audio for input errors such as input LOS, frozen or black frame, loss of reference, closed captioning ancillary data loss, and/or per-channel audio absences. These alarms can be propagated as a general error or warning message, and can be downloaded as basic .txt logs or via a Syslog function.

User setup tables configure the alarm severity escalation as well as trigger holdoff/release and other thresholds as applicable.

User Control Interface

BBG-1002-UDX-FS uses an HTML5 internal web server for control/ monitoring communication, which allows control via a web interface with no special or unique application on the client device. Connection to the device to the network media connection is via a standard 10/100/1000 RJ-45 Ethernet connection. The device can also be controlled using DashBoard[™] remote control, where it appears as a frame connection.

Technical Specifications

Table 1-1 lists the technical specifications for the BBG-1002-UDX-FS Standalone Dual-Channel - Path 1 UDX / Path 2 Frame Sync with Audio Embed/De-Embed unit.

Table 1-1Technical Specifications

Item	Characteristic
Part number, nomenclature	BBG-1002-UDX-FS 3G/HD/SD-SDI Standalone Dual-Channel - Path 1 UDX / Path 2 Frame Sync with Audio Embed/De-Embed, available in the following rear-panel I/O configurations:
	 BBG-1002-UDX-FS-B (4) 3G/HD/SD-SDI Input BNCs, (4) 3G/HD/SD-SDI Output BNCs, (1) 3G/HD/SDI Output BNC (with relay bypass failover), (1) GPIO/COMM RJ-45 connector, Gigabit Ethernet, Looping Reference and Redundant DC Power Inputs (includes one BBG-1000-PS Power Supply)
	 BBG-1002-UDX-FS-C-DIN (4) 3G/HD/SD-SDI Inputs, (2) Balanced Analog Audio Inputs, (6) AES Inputs, (4) 3G/HD/SDI Outputs w/(1) relay protect, (4) AES Outputs, GPIO/COMM (RJ-45 connector). (All coaxial connectors DIN 1.0/2.3), Gigabit Ethernet, Looping Reference and Redundant DC Power Inputs (includes one BBG-1000-PS Power Supply)
	 BBG-1002-UDX-FS-C-HDBNC (4) 3G/HD/SD-SDI Inputs, (2) Balanced Analog Audio Inputs, (6) AES Inputs, (4) 3G/HD/SDI Outputs w/(1) relay protect, (4) AES Outputs, GPIO/COMM (RJ-45 connector). (All coaxial connectors HD-BNC), Gigabit Ethernet, Looping Reference and Redundant DC Power Inputs (includes one BBG-1000-PS Power Supply)
	- BBG-1002-UDX-FS-D-DIN (4) 3G/HD/SD-SDI Inputs, (4) Balanced Analog Audio Inputs, (4) AES Inputs, (4) 3G/HD/SDI Outputs, (4) AES Outputs, (4) Balanced Analog Audio Outputs, (1) CVBS Input, (1) CVBS Output. (All coaxial connectors DIN 1.0/2.3), Gigabit Ethernet, Looping Reference and Redundant DC Power Inputs (includes one BBG-1000-PS Power Supply)
	- BBG-1002-UDX-FS-D-HDBNC (4) 3G/HD/SD-SDI Inputs, (4) Balanced Analog Audio Inputs, (4) AES Inputs, (4) 3G/HD/SDI Outputs, (4) AES Outputs, (4) Balanced Analog Audio Outputs, (1) CVBS Input, (1) CVBS Output. (All coaxial connectors HD-BNC), Gigabit Ethernet, Looping Reference and Redundant DC Power Inputs (includes one BBG-1000-PS Power Supply)
Power consumption	18 Watts. Power provided by included AC adapter; 100-240 VAC, 50/60 Hz. Second DC power connection allows power redundancy using second (optional) AC adapter.
Installation Density	Up to 3 units per 1RU space

Item	Characteristic
Environmental: Operating temperature: Relative humidity (operating or storage):	32° – 104° F (0° – 40° C) < 95%, non-condensing
Dimensions (WxHxD):	5.7 x 1.4 x 14.7 in (14.5 x 3.5 x 37.3 cm) Dimensions include connector projections.
Weight:	6 lb (2.8 kg)
Ethernet communication	10/100/1000 Mbps Ethernet with Auto-MDIX via HTML5 web interface
Front-Panel Controls and Indicators	Backlit LCD display and menu navigation keys. Display and controls provide unit status display and full control as an alternate to web GUI control.
Serial Digital Video Input	Number of Inputs: Up to (4), with manual select or failover to alternate input Data Rates Supported: SMPTE 424M, 292M, SMPTE 259M-C Impedance: 75 Ω terminating Return Loss:
	> 15 dB up to 1.485 GHz > 10 dB up to 2.970 GHz
Analog Video Input	Number of Inputs: One SD analog CVBS Impedance: 75 Ω
AES Audio Inputs	Standard: SMPTE 276M Number of Inputs: Up to 16 unbalanced; AES-3id Impedance: 75 Ω
Analog Audio Inputs	Number of Inputs: Up to four balanced using 3-wire removable Phoenix connectors; 0 dBFS => +24 dBu
Input Select/Auto-Changeover Failover (option +QC)	Failover to alternate input on loss of target input. Failover invoked upon LOS and/or (with option +QC) user configurable parametric criteria such as black/frozen frame or audio silence. - Black frame trigger configurable for black intensity threshold and
	 persistence time. Frozen frame trigger configurable for frozen percentage difference and persistence time.

Table 1-1	Technical Specifications — continued
	recimical Specifications — continued

Item	Characteristic
Post-Processor Serial Digital Video Outputs	Number of Outputs: Four 3G/HD/SD-SDI BNC Impedance: 75 Ω Return Loss:
	 > 15 dB at 5 MHz – 270 MHz Signal Level: 800 mV ± 10% DC Offset: 0 V ± 50 mV Jitter (3G/HD/SD):
	< 0.3/0.2/0.2 UI Minimum Latency (scaler and frame sync disabled): SD: 127 pixels; 9.4 us 720p: 330 pixels; 4.45 us 1080i: 271 pixels; 3.65 us 1080p: 361 pixels; 2.43 us
Analog Video Output	Number of Outputs: One SD analog CVBS Impedance: 75 Ω
Embedded Audio Output	16-ch embedded. User crosspoint allows routing of any embedded channel to any embedded channel output. Multi-frequency tone generator for each audio output. Master delay control; range of -33 msec to +3000 msec.
AES Audio Outputs	Standard: SMPTE 276M Number of Outputs: Up to 16 unbalanced; AES-3id Impedance: 75 Ω

Table 1-1	Technical Specifications — continued

Item	Characteristic
Analog Audio Outputs	Number of Outputs:
	Up to four balanced using 3-wire removable Phoenix connectors; 0 dBFS => +24 dBu
Frame Reference Input	Looping 2-BNC connection. SMPTE 170M/318M "Black Burst", SMPTE 274M/296M "Tri-Level"
	Return Loss: >35 dB up to 5.75 MHz
GPIO	(2) GPI; (2) GPO; opto-isolated
	GPO Specifications:
	Max I: 120 mA
	Max V: 30 V
	Max P: 120 mW
	GPI Specifications:
	GPI LO @ Vin < 1.5 V
	GPI HI @ Vin > 2.3 V
	Max Vin: 9 V
Redundant (or spare) AC power supply (optional)	BBG-1000-PS

 Table 1-1
 Technical Specifications — continued

Warranty and Service Information

Cobalt Digital Inc. Limited Warranty

This product is warranted to be free from defects in material and workmanship for a period of five (5) years from the date of shipment to the original purchaser, except that 4000, 5000, 6000, 8000 series power supplies, and Dolby[®] modules (where applicable) are warranted to be free from defects in material and workmanship for a period of one (1) year.

Cobalt Digital Inc.'s ("Cobalt") sole obligation under this warranty shall be limited to, at its option, (i) the repair or (ii) replacement of the product, and the determination of whether a defect is covered under this limited warranty shall be made at the sole discretion of Cobalt.

This limited warranty applies only to the original end-purchaser of the product, and is not assignable or transferrable therefrom. This warranty is limited to defects in material and workmanship, and shall not apply to acts of God, accidents, or negligence on behalf of the purchaser, and shall be voided upon the misuse, abuse, alteration, or modification of the product. Only Cobalt authorized factory representatives are authorized to make repairs to the product, and any unauthorized attempt to repair this product shall immediately void the warranty. Please contact Cobalt Technical Support for more information.

To facilitate the resolution of warranty related issues, Cobalt recommends registering the product by completing and returning a product registration form. In the event of a warrantable defect, the purchaser shall notify Cobalt with a description of the problem, and Cobalt shall provide the purchaser with a Return Material Authorization ("RMA"). For return, defective products should be double boxed, and sufficiently protected, in the original packaging, or equivalent, and shipped to the Cobalt Factory Service Center, postage prepaid and insured for the purchase price. The purchaser should include the RMA number, description of the problem encountered, date purchased, name of dealer purchased from, and serial number with the shipment.

Cobalt Digital Inc. Factory Service Center

2506 Galen Drive	Office: (217) 344-1243
Champaign, IL 61821 USA	Fax: (217) 344-1245
www.cobaltdigital.com	Email: info@cobaltdigital.com

THIS LIMITED WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON COBALT'S PART. ANY SOFTWARE PROVIDED WITH, OR FOR USE WITH, THE PRODUCT IS PROVIDED "AS IS." THE BUYER OF THE PRODUCT ACKNOWLEDGES THAT NO OTHER REPRESENTATIONS WERE MADE OR RELIED UPON WITH RESPECT TO THE QUALITY AND FUNCTION OF THE GOODS HEREIN SOLD. COBALT PRODUCTS ARE NOT AUTHORIZED FOR USE IN LIFE SUPPORT APPLICATIONS.

COBALT'S LIABILITY, WHETHER IN CONTRACT, TORT, WARRANTY, OR OTHERWISE, IS LIMITED TO THE REPAIR OR REPLACEMENT, AT ITS OPTION, OF ANY DEFECTIVE PRODUCT, AND SHALL IN NO EVENT INCLUDE SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS), EVEN IF IT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Contact Cobalt Digital Inc.

Feel free to contact our thorough and professional support representatives for any of the following:

- Name and address of your local dealer
- Product information and pricing
- Technical support
- Upcoming trade show information

Phone:	(217) 344-1243
Fax:	(217) 344-1245
Web:	www.cobaltdigital.com
General Information:	info@cobaltdigital.com
Technical Support:	support@cobaltdigital.com

Chapter 2

Installation

Overview

This chapter contains the following information:

- Installing the BBG-1002-UDX-FS (p. 2-1)
- Rear Panel Connections (p. 2-2)
- GPIO, Serial (COMM), and Analog Audio Connections (p. 2-5)

Installing the BBG-1002-UDX-FS

- Note: Where BBG-1002-UDX-FS is to be installed on a mounting plate (or regular table or desk surface) without optional frame Mounting Tray BBG-1000-TRAY, affix four adhesive-backed rubber feet (supplied) to the bottom of BBG-1002-UDX-FS in locations marked with stamped "x". If feet are not affixed, chassis bottom cooling vents will be obscured.
 - Where BBG-1002-UDX-FS is to be installed **with** optional frame Mounting Tray BBG-1000-TRAY, **do not** affix adhesive-backed feet.

Installing Using BBG-1000-TRAY Optional Mounting Tray

BBG-1000-TRAY allows up to three BBG-1002-UDX-FS to be mounted and securely attached to a 1 RU tray that fits into a standard EIA 19" rack mounting location. Install BBG-1002-UDX-FS unit into tray as described and shown here.

- 1. If installing BBG-1002-UDX-FS using optional frame Mounting Tray BBG-1000-TRAY, install BBG-1002-UDX-FS in tray as shown in Figure 2-1.
- 2. Connect the input and output cables as shown in Figure 2-3.

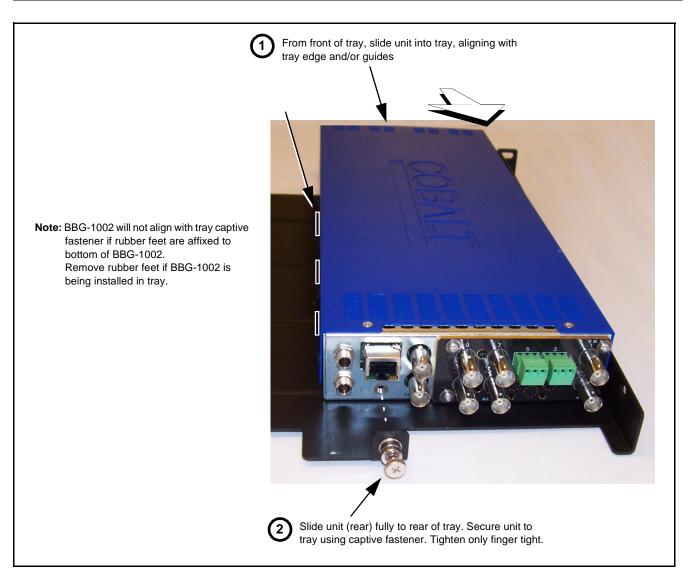


Figure 2-1 Mounting BBG-1002-UDX-FS Using Frame Mounting Tray

BBG-1002-UDX-FS Unit Dimensions

Figure 2-2 shows the BBG-1002-UDX-FS physical dimensions and mounting details for cases where BBG-1002-UDX-FS will be installed in a location not using the optional **BBG-1000-TRAY** mounting tray.

Rear Panel Connections

Perform rear panel cable connections as shown in Figure 2-3.

- **Note:** The BBG-1002-UDX-FS BNC inputs are internally 75-ohm terminated. It is not necessary to terminate unused BNC video inputs or outputs.
 - External frame sync reference signal (if used) must be terminated if a looping (daisy-chain) connection is not used. Unterminated reference connection may result in unstable reference operation.

Installation

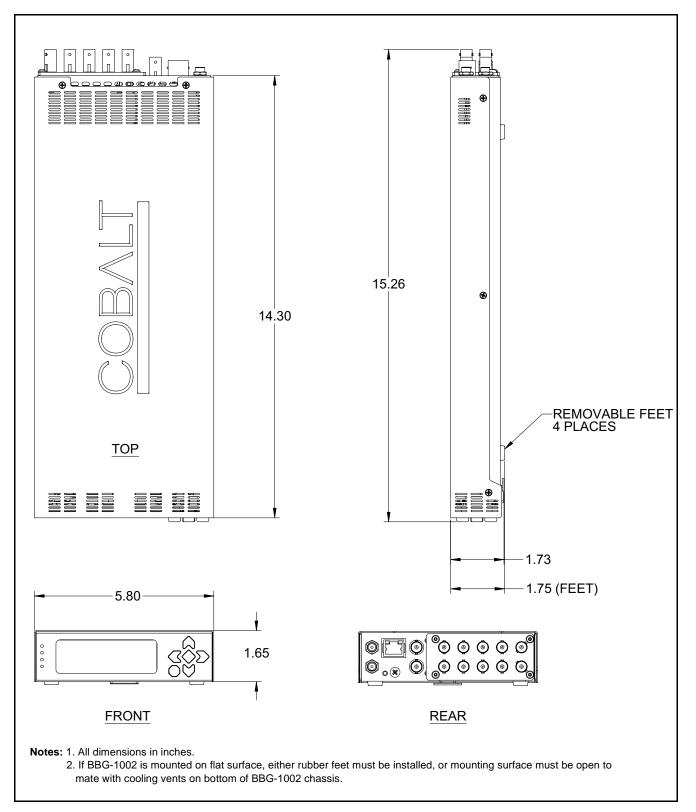


Figure 2-2 BBG-1002-UDX-FS Dimensional Details

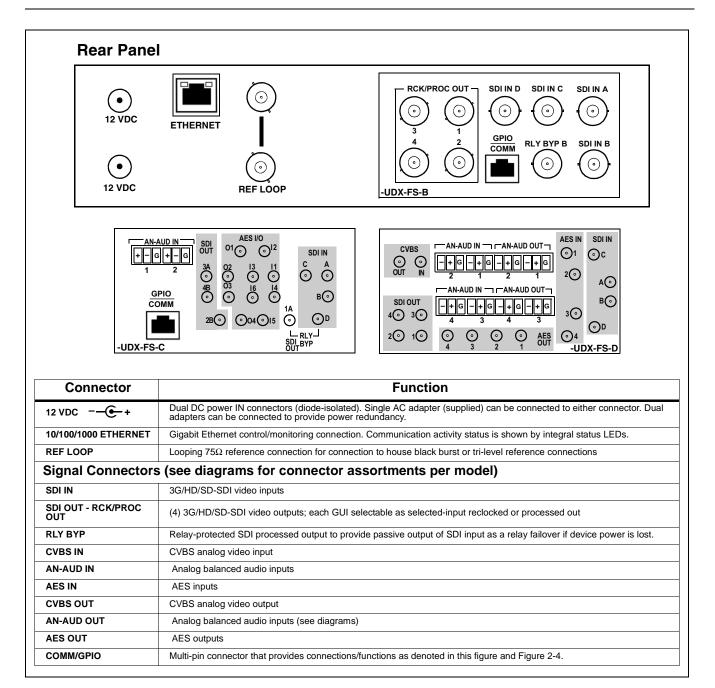


Figure 2-3 BBG-1002-UDX-FS Rear Panel Connectors

GPIO, Serial (COMM), and Analog Audio Connections

Figure 2-4 shows connections to the device multi-pin terminal block connectors. These connectors are used for serial comm, GPIO, and balanced analog audio connections.

Note: It is preferable to wire connections to plugs oriented as shown in Figure 2-4 rather than assessing orientation on rear module connectors. Note that the orientation of rear module 3-wire audio connectors is not necessarily consistent within a rear module, or between different rear modules. If wiring is first connected to plug oriented as shown here, the electrical orientation will be correct regardless of rear module connector orientation.

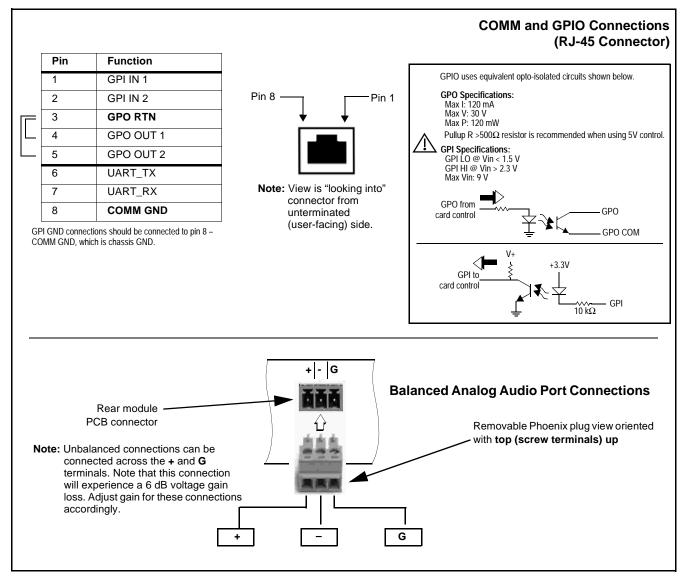


Figure 2-4 COMM, GPIO, and Analog Audio Connector Pinouts

This page intentionally blank

Chapter 3

Operating Instructions

Overview

If you are already familiar with using DashBoard or a Cobalt Remote Control Panel to control Cobalt cards, please skip to BBG-1002-UDX-FS Function Menu List and Descriptions (p. 3-10).

This chapter contains the following information:

- BBG-1002-UDX-FS Front Panel Display and Menu-Accessed Control (p. 3-1)
- Connecting BBG-1002-UDX-FS To Your Network (p. 3-3)
- Control and Display Descriptions (p. 3-4)
- Checking BBG-1002-UDX-FS Device Information (p. 3-8)
- Ancillary Data Line Number Locations and Ranges (p. 3-9)
- BBG-1002-UDX-FS Function Menu List and Descriptions (p. 3-10)
- Uploading Firmware Using Web Interface and GUI (p. 3-74)
- Troubleshooting (p. 3-75)

BBG-1002-UDX-FS Front Panel Display and Menu-Accessed Control

Figure 3-1 shows and describes the BBG-1002-UDX-FS front panel displays and menu-accessed user interface controls. Initial network setup is performed using these controls.

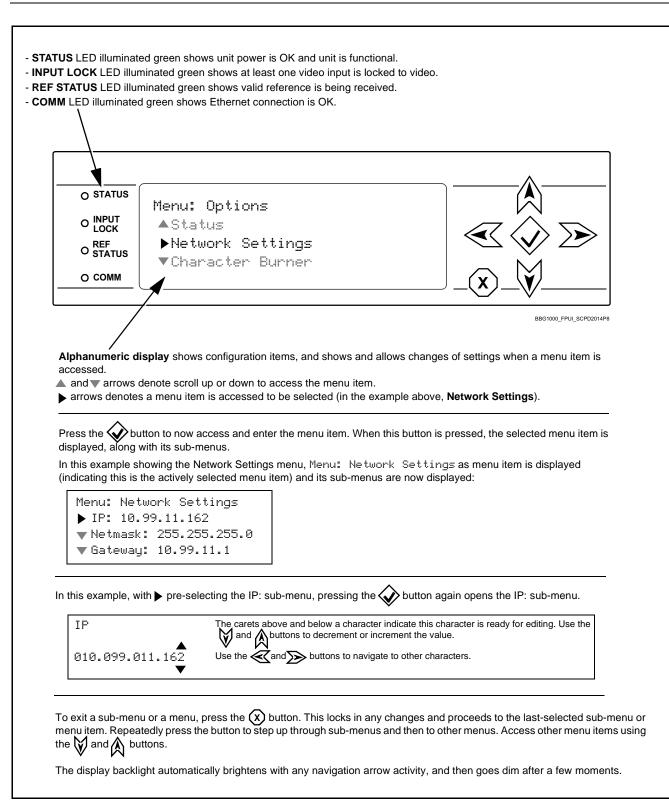


Figure 3-1 BBG-1002-UDX-FS Front Panel Display and Menu Controls

Connecting BBG-1002-UDX-FS To Your Network

BBG-1002-UDX-FS ships with network protocol set to DHCP and populates its address with an addressed allocated by your DHCP server. If your network does not have a DHCP server, the BBG-1002-UDX-FS address field will be blank, and a static address must then be assigned. All initial network settings are performed using the Front Panel Display menu-accessed control (as described on the previous page). Refer to this page for instructions of using the front-panel menu navigation.

Access the Network Settings menu and configure network settings as follows:

onnecting B	BG-1002 To Network	
Power-up BE When Proc	G-1002 and connect Etherne luct: BBG-1002 is d	et cable connection to media. Wait for BBG-1002 to complete booting. displayed, device is ready for configuration.
server).	commended to now change t	Settings menu. Current network settings are displayed (as configured by host DHC the settings to use a static IP address of your choice. The following steps describe usi
In Networ	k Settings > Mode,	e, change setting to Mode: Static.
Configure the	e following fields as desired a	and appropriate for your network connection (examples shown below).
Gatew	sk: 255.255.255.0 ay: 10.99.16.1 Static	
. Press X t Note: Curre . At this point, address and	BBG-1002 can now be acces I check connectivity.	can now be checked from the front panel by accessing this at any point.
. Press X t Note: Curre . At this point, address and	nt IP address of BBG-1002 ca BBG-1002 can now be acces	can now be checked from the front panel by accessing this at any point.
Press X t Note: Curre At this point, address and b browser po	nt IP address of BBG-1002 ca BBG-1002 can now be access I check connectivity.	can now be checked from the front panel by accessing this at any point. essed with a web browser pointing to the configured address. Browse to the configured displays BBG-1002
Press X t Note: Curre At this point, address and b browser po	nt IP address of BBG-1002 ca BBG-1002 can now be access I check connectivity.	can now be checked from the front panel by accessing this at any point. essed with a web browser pointing to the configured address. Browse to the configured displays BBG-1002
. Press (\mathbf{X}) t Note: Curre . At this point, address and eb browser point $\in \rightarrow \mathbb{C}$	nt IP address of BBG-1002 ca BBG-1002 can now be access I check connectivity.	can now be checked from the front panel by accessing this at any point. essed with a web browser pointing to the configured address. Browse to the configured displays BBG-1002 FS Connected
• Press (\mathbf{X}) t Note: Curre • At this point, address and eb browser point $\epsilon \rightarrow c$	nt IP address of BBG-1002 ca BBG-1002 can now be access I check connectivity. inting to configured address of x + 0 Not sectors 10.99.16.105 BBG-1002-UDX-F	can now be checked from the front panel by accessing this at any point. essed with a web browser pointing to the configured address. Browse to the configured displays BBG-1002 FS Connected
• Press (\mathbf{X}) t Note: Curre • At this point, address and eb browser point $(\mathbf{E} \rightarrow \mathbf{C})$ $(\mathbf{E} \rightarrow \mathbf{C})$ $(\mathbf{E}$	nt IP address of BBG-1002 ca BBG-1002 can now be access I check connectivity. inting to configured address of X + 0 Not sectors 10.99.16.105 BBG-1002-UDX-F Product Info No Input	can now be checked from the front panel by accessing this at any point. essed with a web browser pointing to the configured address. Browse to the configured displays BBG-1002 FS Connected Input Video Output Video Scaler Framesync Input Audio Status Input Audio
• Press \bigotimes t Note: Curre • At this point, address and • b browser point • \leftrightarrow c (COBAL	nt IP address of BBG-1002 ca BBG-1002 can now be access I check connectivity. initing to configured address of x + 0 Not sector 10.99 16 105 BBG-1002-UDX-F Product Info	can now be checked from the front panel by accessing this at any point. essed with a web browser pointing to the configured address. Browse to the configured displays BBG-1002 FS Connected Input Video Output Video Scaler Framesync Input Audio Status Input Audio Timecode Video Proc Closed Captioning AFD Ancillary Data Processing Path 1
Press x t Note: Curre At this point, address and browser po ← → C COBAL Status Input Video Output	nt IP address of BBG-1002 ca BBG-1002 can now be access I check connectivity. inting to configured address of X + 0 Not sectors 10.99.16.105 BBG-1002-UDX-F Product Info No Input	can now be checked from the front panel by accessing this at any point. essed with a web browser pointing to the configured address. Browse to the configured displays BBG-1002 FS Connected Input Video Output Video Scaler Framesync Input Audio Status Input Audio Timecode Video Proc Closed Captioning AFD Ancillary Data Processing Path 1 GPO Setup Presets Event Setup Admin User Log Alarms

Finding a BBG-1002-UDX-FS Device in DashBoard

(See Figure 3-2) If BBG-1002-UDX-FS is configured with an address within a network also available via DashBoard, a BBG-1002-UDX-FS device appears as a frame entity in the DashBoard Basic Tree View.

Note: BBG-1002-UDX-FS DashBoard remote control is also available by opening the device in DashBoard similar to opening an openGear[®] card.

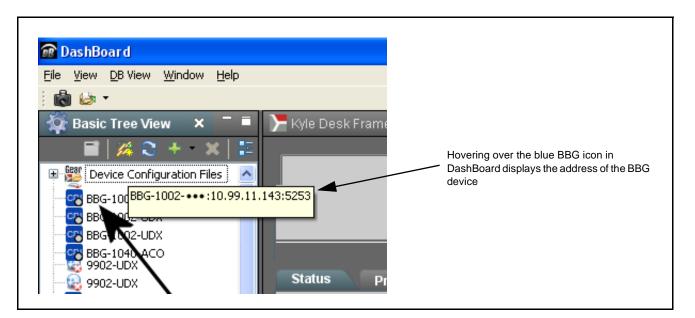


Figure 3-2 Finding BBG-1002-UDX-FS Using DashBoard

Control and Display Descriptions

This section describes the user interface controls, indicators, and displays for using the BBG-1002-UDX-FS. The BBG-1002-UDX-FS functions can be accessed and controlled using any of the user interfaces described here.

The format in which the BBG-1002-UDX-FS functional controls, indicators, and displays appear and are used varies depending on the user interface being used. Regardless of the user interface being used, access to the BBG-1002-UDX-FS functions (and the controls, indicators, and displays related to a particular function) follows a general arrangement of Function Menus under which related controls can be accessed (as described in Function Menu/Parameter Overview below).

Note: When a setting is changed, settings displayed on DashBoard[™] (or a Remote Control Panel) are the settings as effected by the device itself and reported back to the remote control; the value displayed at any time is the actual value as set on the device.

Function Menu/Parameter Overview

The functions and related parameters available on the BBG-1002-UDX-FS are organized into function **menus**, which consist of parameter groups as shown below.

Figure 3-3 shows how the BBG-1002-UDX-FS and its menus are organized, and also provides an overview of how navigation is performed between devices, function menus, and parameters.

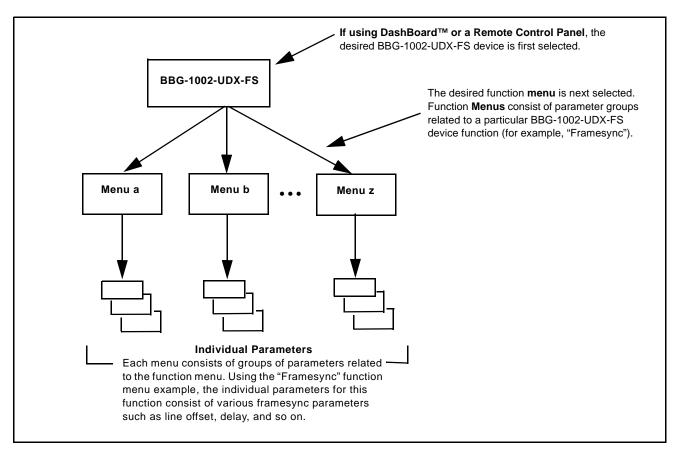


Figure 3-3 Function Menu/Parameter Overview

Web User Interface

(See Figure 3-4.) The device function menu is organized using main menu navigation tabs which appear on the left side of any pane regardless of the currently displayed pane. When a menu tab is selected, each parametric control or selection list item associated with the function is displayed. Scalar (numeric) parametric values can then be adjusted as desired using the GUI slider controls. Items in a list can then be selected using GUI drop-down lists.

→ C () OBALT	BBG-1002-UDX-FS			☆ 0
			Connected	Settings
Status	Product Info	Input Video Output	Video Scaler Framesync Input Audio Status Input Audio Routing/Controls Output Audio Routing/Controls	
out Video	No Input	Timecode Video Pro	oc Closed Optioning AFD Ancillary Data Processing Path 1 Ancillary Data Processing Path 2 COM Routing	
tput leo	525i 59.94	GPO Setup Presets Path 1 Path 2	Event Setup Admin User Log Alarms	
I Input A	No Input	Framesync Enable	Framesync Enabled	~
Input B	1080i 59.94. OK Time 0:03:52. 0 Errors			
Input C	No Input	Lock Mode	Reference 1 else Lock to Input	~
Input D	No Input	Lock To Input Path	Input Path 1	~
S Input	Unlocked	Output Rate	Match Input Video	~
1	Open	Initial Startup Format	525159.94	~
2	Open	Output Mode	Input Video	~
	Unlocked (Ref 1)	On Loss of Video	Test Pattern	~
	11.90 V	Test Pattern	Tartan	×
tage		Flat Field Color	Black	~

Figure 3-4 Typical Web UI Display and Controls

Display Theme

(See Figure 3-5.) The BBG-1002-UDX-FS user interface theme selection offers light and dark themes suited for various users and environments.

→ C ① Not	× + t secure 192.168.1.105	<u> </u>		
	BG-1002-UDX-FS		Connected	Settings
Status Prod	luct Info	Input Video Output Video Scal Timecode Video Proc Closed C GPO Setup Presets Event Setup	aptioning AFD Ancillary Data Processing Path 1 Ancillary Data Processing	it Audio Routing/Controls Path 2 COM Routing
Setting		x Jb	With Settings open, Theme is selected to d of available themes. Default Dark is best s low-light environments. Light is the theme manual and is useful for normal ambient lig	uited for shown in this
	ark Light	Cerulean	environments such as offices.	
Lit	smo Flatly Lumen inty Pulse uplex Sketchy	Journal 2 Lux Sandstone Slate		
Sc	pplex Sketchy plar Spacelab ited Yeti	Superhero		
Systen	n			

Figure 3-5 Web UI Display Themes

Checking BBG-1002-UDX-FS Device Information

The operating status and software version the BBG-1002-UDX-FS device can be checked by clicking the **Status** main menu tab. Figure 3-6 shows and describes the BBG-1002-UDX-FS device information status display.

Note: Proper operating status is denoted by green icons for the status indicators shown in Figure 3-6. Yellow or red icons respectively indicate an alert or failure condition. Refer to Troubleshooting (p. 3-75) for corrective action.

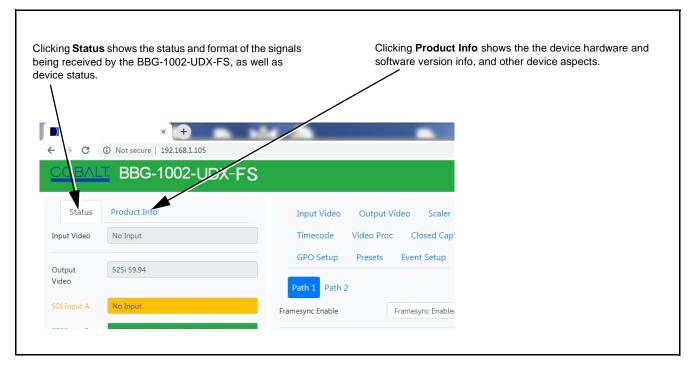


Figure 3-6 BBG-1002-UDX-FS Device Info/Status Utility

Ancillary Data Line Number Locations and Ranges

Table 3-1 lists typical default output video VANC line number locations for various ancillary data items that may be passed or handled by the device.

	Default Line No. / Range			
ltem	SD	HD		
AFD	12 (Note 2)	9 (Note 2)		
ATC_VITC	13 (Note 2)	9/8 (Note 2)		
ATC_LTC	_	10 (Note 2)		
Dolby [®] Metadata	13 (Note 2)	13 (Note 2)		
SDI VITC Waveform	14/16 (Note 2)	—		
Closed Captioning	21 (locked)	10 (Note 2)		

Table 3-1 Typical Ancillary Data Line Number Locations/Ranges

1. The device does not check for conflicts on a given line number. Make certain the selected line is available and carrying no other data.

2. While range indicated by drop-down list on GUI may allow a particular range of choices, the actual range is automatically clamped (limited) to certain ranges to prevent inadvertent conflict with active picture area depending on video format. Limiting ranges for various output formats are as follows:

Format	Line No. Limiting	Format	Line No. Limiting	Format	Line No. Limiting
525i	12-19	720p	9-25	1080p	9-41
625i	9-22	1080i	9-20		

Because line number allocation is not standardized for all ancillary items, consideration should be given to all items when performing set-ups. Figure 3-7 shows an example of improper and corrected VANC allocation within an HD-SDI stream.

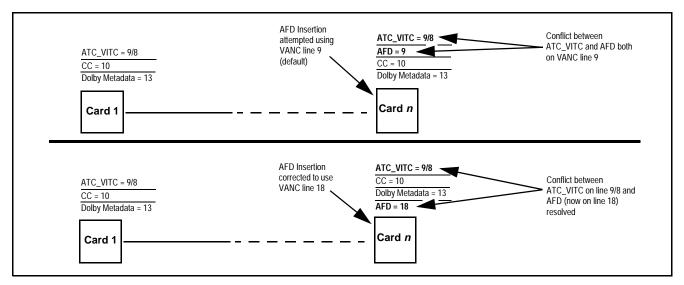


Figure 3-7 Example VANC Line Number Allocation Example

BBG-1002-UDX-FS Function Menu List and Descriptions

Table 3-2 individually lists and describes each BBG-1002-UDX-FS function menu and its related list selections, controls, and parameters. Where helpful, examples showing usage of a function are also provided.

- Note: Option ⊡ For any DashBoard tabs on device not appearing in this manual, this indicates the function is an option and covered in a separate Manual Supplement. Please refer to device web page Product Downloads for pdf Manual Supplements covering these options.
- Note: All numeric (scalar) parameters displayed can be changed using the slider controls, i arrows, or by numeric keypad entry in the corresponding numeric field.
 - User interface depictions here may show DashBoard UI. Web UI is similar.

On the web GUI itself and in Table 3-2, the function menu items are organized using main menu tabs as shown below.

Output Video Framesync Some functions use sub-tabs to help maintain clarity and organization. In these instances, Table 3-2 shows the ordinate tab along with its sub-tabs. Highlighted sub-tabs indicate that controls described are found by selecting Framesync this sub-tab (in this example, the **Path 1** sub-tab on the **Framesync** page). Note that selection of controls from one processing path to another is selected using this sub-tab which appears on many card function tabs.

The table below provides a quick-reference to the page numbers where each function menu item can be found.

Function Menu Item	Page	Function Menu Item	Page
Input Video Controls	3-11	Reticules	3-43
Output Video Mode Controls	3-12	Wings Insertion	3-46
Scaler	3-14	AFD Processor Controls	3-47
Framesync	3-18	Moving Box Insertion	3-53
Input Audio Status	3-21	Ancillary Data Proc Controls	3-55
Input Audio Routing/Controls	3-22	COMM Ports Setup Controls	3-58
Video Quality Events	3-27	Presets	3-60
Audio Detect Events Setup Controls	3-28	GPO Setup Controls	3-62
Closed Captioning	3-29	Event Setup Controls	3-63
Video Proc/Color Correction	3-30	Admin	3-67
Output Audio Routing/Controls	3-33	User Log	3-73
Timecode	3-38	Alarms Setup Controls	3-69

Table 3-2 BBG-1002-UDX-FS Function Menu List

lnj	put Video			video in	nanual or failc puts and displ d SDI video.			
• Input Video	Source/Status				out video source t im video inputs.	to be applied to	o the Path	1 and
Path 1 Input Source Path 1 Input Video Path 2 Input Source	SDI A SDI A SDI B SDI C SDI D Path 1 Program Path 2 Program CVBS Failover A to B Failover B to A 720p 59.94, OK Tim SDI B	► 0:06:15, 0 Errors	3	cor • Inp pro Th witi jun pro two • Car fra "up con mu • Unl jun pro two • Car fra "up con mu • Unp pro • (Dp pro • (Dp • (Dp • (Dp • (Dp • (Dp) • (Dp)	I inputs selected i respondingly equi ut select also allo cessing path out s allows "serial" o hout requiring ext pering can, in ad gram video outpu o streams. e should be taker h is not applied a mesync Lock to Ir istream" path mu throl (for example st be set for Path ess upstream locl jultaneously-usec ng this unit's Frar	pped with inte ws internal colout to the oppo or cascaded pre ernal jumperin dition to other it streams with n to make certa s an input for t put else Free st be selected if Path 1 casc 1 as lock sour ked to same re l inputs should	nded input nnection from solutions of the process occessing c g on the re- functions, a delay of ain an outp he same p Run is sele using Lock sades to Pa- ce).	ports. om one ssing path input. onnections var panel. Serial provide identical fset between the ut from a video ath. Also, if ected, the initial c to Input Path ath 2, this control
Path 2 Input Video	1080i 59.94, OK Tin	ne 0:06:44, 0 Error	e	(p.	3-18).	-		thru SDI D and
				SDI A Status	1080i_5994, OK Time	e 2:05:51, 0 Errors	CVBS	Status show
				SDI B Status	1080p_5994, OK Tim	e 0:29:54, 0 Errors		format for all puts. If signal is
				SDI C Status	Input Format Disable	d by User		sent or is Unlocked is
				SDI D Status	Unlocked		display	ved. (These
				CVBS Status	525i_5994		also pr	indications are opagated to the nfo pane.)
Input SDI Ra			h Ir ilter	as been rejen nput SDI Ras	Disabled by Use ted from being p ter Size / Frame f	assed by card Rate Filtering).	(as describ	bed below in
	s have all raster si	ç					0	
Allowed Raster S	izes 525i	625i	720p	1080i	1080psf	1080p		
	5251							
Allowed Frame Ra		24	25	29.97	30	50	59.94	60
In the example	below, only 720p	and 29,97 are 0	check	ed. filtering a	llowed input to on	lv be 720n 29	97 ("720n	half-rate")
							(o p	
Allowed Raster Si	0201		720p	1080i	1080psf	1080p		
Allowed Frame Ra	ntes 23.98	24	25	29.97	30	50	59.94	60
				29.97			59.94	60
Note: Rates sh	nown in selector ar	re frame rates a	nd no	t field rates.				

Table 3-2 BBG-1002-0DX-FS Function Menu List — continue	able 3-2	BBG-1002-UDX-FS Function Menu List — continu
---	----------	--

Output Video Output Routing Analog Video	Allows selection of each of the four video output coaxial connectors as processed SDI out or reclocked SDI out. Also provides CVBS parameter controls and test pattern output controls for CVBS output.
• ST352 VPID Insertion/Pass-Thru Select / Colorimetry Mark Select	ST 352 VPID Insertion selects from default Regenerate mode and special Pass-Through mode (see below for important usage notes).
ST352 VPID Insertion Path 1 Regenerate	 Regenerate makes certain ST352 is marked for whatever the device is passing, or if the payload is being modified by the device. (An example of where ST352 would have to be modified would be if the device Framesync is user-set to change the frame rate from 59.94 to
ST352 VPID Colorimetry Path 1 BT.709	 60.) Pass-Through will extract and preserve the ST352 information from input SDI, and re-insert it on the output regardless of any changes the device has locally done to identifying characteristics carried in the ST352 metadata.
	In all normal usages, it is recommended to leave this control set to default Regenerate setting. This ensures that downstream devices will "see" ST352 that represents the payload being provided by the device. Pass-Through is only used in highly specialized cases where special ST352 data must be preserved (even if the data may not match the payload).
	 ST 352 VPID OETF selects from SDR, HLG, PQ, or unspecified marking. ST 352 VPID Colorimetry selects from BT.709 or BT.2020 colorimetry
	Note: This tab has identical independent controls for Path 1 and 2. Therefore, only the Path 1 controls are shown here.
Output Video Crosspoint	For each SDI output port supported by the device, provides a crosspoint for routing Path 1 and Path 2 program processed video or selected-input reclocked to an SDI output. Also selects Path 1 or Path 2 as the source to be used for the program video (CVPR) output
SDI OUT 1 Path 1 Program Path 1 Program Path 2 Program SDI Input A Reclock SDI Input B Reclock	to be used for the analog video (CVBS) output. In this example: - SDI OUT 1 set to use Path 1 Program video out - SDI OUT 2 set to use Path 2 Program video out - SDI OUT 3 set to output SDI Input A reclocked copy - SDI OUT 4 set to output SDI Input B reclocked copy
SDI Input C Reclock SDI Input D Reclock	Note: Outputs set to Input Reclocked will pass input SDI regardless of Input SDI Raster Size / Frame Rate Filtering. Input filtering applies only to program video paths.
SDI OUT 2 Path 2 Program	
SDI OUT 3 SDI Input A Reclock	
SDI OUT 4 SDI Input B Reclock	

BBG-1002-UDX-FS Function Menu List — continued

Table 3-2

Output Video Output Routing Analog Video	Provides CVBS output parameter controls and test pattern output controls
CVBS Output Source Select CVBS Out Path 1 Program Path 1 Program Path 2 Program	Selects the processing path to be sourced for the CVBS output.
• CVBS Oversampling and Color Controls Oversampling Enable Color Enable	 Oversampling enables or disables video DAC oversampling. Oversampling can improve rendering of motion for down-conversions to the CVBS SD analog output. Color enables or disables chroma content in the CVBS output.
CVBS Test Pattern Generator Control Test Pattern Disable	Enables manual insertion (replacement) of CVBS output video to instead output 75% color bars.
DAC Custom/Cal Offset Controls DAC Gain Calibration -7.500 Cb Calibration -6.00 Calibration to EEPROM Save	Gain and Cb calibration controls allow custom offsets from factory calibration values. Calibration to EEPROM stores custom offsets. Note: Factory default settings are recommended for typical use.

Scaler	Provides up/down/cross-converter, aspect ratio controls, and user H/V controls.
Note: Scaler function is available only for Path 1	1.
• Scaler Enable Control Scaler Enabled V Bypassed Enabled	 Enables or disables Scaler function. Note: When scaler is disabled, all ancillary data is passed from input output intact. If the scaler is enabled, ancillary data such as timecode and closed captioning must be set for re-insertion as desired. See Timecode (p. 3-38) and Closed Captioning (p. 3-2 for more information about insertion into scaled output video.
Input/Output Video Status Input Video 1080i_5994 Output Video 525i_5994	Displays signal format/status sent to scaler and output format/status. If invalid or no signal is present, No Input is displayed.
• Output Format Selector Output Format Match Input Match Input SD 720p - 50/59.94/60 720p - 25/29.97/30 720p film - 23.98/24 1080i - 50/59.94/60 1080p - 25/29.97/30 1080p film - 23.98/24 1080psf - 25/29.97/30 1080psf film - 23.98/24 1080p - 3G A - 50/59.94/60	Provides conversions to formats as shown.
Noise Reduction/Detail Enhancement Controls Noise Reduction Level Off Off Off Off Low Med High	Provides individual Noise Reduction and Detail Enhancement controls optimizing scaled output where source is not optimum for scaled form

Scaler	(continued)
• 3:2 Alignment Optimization Selector 3:2 Pulldown Alignment Free Run Free Run Input ATC_LTC Input ATC_VITC Reference VITC Input LTC Audio GPI 1: 6Hz Input GPI 2: 6Hz Input	Provides selection to optimize 3:2 pulldown conversion where timecode or other selections shown are to be relied upon to indicate frame transitions. In the example below, A-frame is aligned using 6Hz pulse imported via GPI.
Alignment Offset Selector Alignment Offset (Frames) 0 1 2 3	Based on alignment selection selected above, offsets A-frame by amount selected.
• Low-Latency PSF to Interlaced Control Low Latency PSF to I (Scaling Disabled) Disabled Enabled (Use Both Fields) Enabled (Use Top Field)	 Allows PsF to Interlaced conversions bypassing Scaler ARC and Pan controls to enhance processing latency performance over that available in normal mode. Disabled: This is "normal" setting that locks out the low-latency processing function. Normal scaler processing latency (along with full ARC and pan control) is available with this setting. Enabled (Use Both Fields): This setting provides a highest-quality low-latency setting, and can be expected to provide an approximate latency of 12 msec for North American frame rates. Enabled (Use Top Field): This setting provides the lowest available latency with a slight reduction of motion smoothness due to alignment not waiting for both fields. This setting can be expected to provide an approximate latency of 6 msec for North American frame rates. Note: When either low latency mode is enabled, image ARC scaling and/ or panning is locked out.

 Table 3-2
 BBG-1002-UDX-FS Function Menu List — continued

Scaler	(continued)
Standard Quick Set Aspect Ratio Conversion Selectors	Selects between the standard preset Aspect Ratio Conversions (ARC) shown below or scaler follow AFD.
	Note: • The Scaler follow AFD control also appears on the AFD tab and is mutually ganged with the selection performed on either tab. Refer to AFD Processor Controls (p. 3-47) for more information.
	 This function is intended for aspect ratio adjustment of a particular signal without AFD considerations.
	 If ARC is being used on a case-by-case basis for a particular signal, it is easier to use the Scaler ARC tools described here.
	 If AFD is to be used to set and apply a standard AFD code label for ARC, use Follow AFD Settings. Do not perform ARC here; instead, perform ARC as described in the AFD function description per AFD Processor Controls (p. 3-47).
Scaler follow AFD Disabled Unity 1.0HV Pillar Box	x 0.75H Center Cut 1.33H Letter Box 0.75V Vertical Center Cut 1.33V
Quick Set Apply App	
User-defined Aspect Ratio Controls	Aspect Ratio Horizontal and Aspect Ratio Vertical controls adjust horizontal and vertical zoom percentage. Settings less than (<) 100% provide zoom-out; settings greater than (>) 100% provide zoom-in. (50% to 150% range in 0.1% steps; null = 100.0)
Aspect Ratio Horizontal 0 50.0 100.0	Buttons allow standard ARC presets to be applied to output video. For any setting, using the Horizontal or Vertical controls allow user custom settings.
Aspect Ratio Vertical , , , , , , , , , , , , , , , , , , ,	100.0 Pressing any of the preset buttons restores the ARC to the selected setting and overrides any previous custom settings.

Table 3-2	BBG-1002-UDX-FS Function Menu List — continued
-----------	--

Scaler	(continued)
• H Pan and V Pan Controls	H Pan control shifts horizontal center of image left (negative settings) or right (positive settings)
H Pan -74.0 0 74.0 V Pan -74.0 0 74.0 -74.0 0 74.0	(-74% to 74% range in 0.1% steps; null = 0.0) $-74 \qquad \oplus \qquad $
	V Pan control shifts vertical center of image down (negative settings) or up (positive settings)
	(-74% to 74% range in 0.1% steps; null = 0.0) -74 0 74 74 74
Downscale Filtering Control	Adjusts the aggressiveness of sharpening or filtering applied to output video. Optimum setting results in overall perception of increased sharpness, while avoiding pattern noise artifacts. (Range is 0.50 thru 1.50 in 0.01 steps; null = 1.00)



Framesync Path 1 Path 2	Provides video frame sync/delay offset control and output control/loss of program video failover selection controls.						
	controls for both Path 1 and Path 2 using the Path 1 / Path 2 sub-tabs. wn here. Set controls for other path using the respective sub-tab.						
Framesync Enable/Disable Control Framesync Enable Framesync Enabled Framesync Bypassed Framesync Enabled	Provides master enable/disable of all device framesync functions/ controls.						
• Lock Mode Select	 Selects Frame Sync functions from the choices shown to the left and described below. Lock to Reference: Output video is locked to external reference received on the device REF LOOP input. Note: If valid reference is not received, the Card state: O Reference Invalid indication appears in the Card Info status portion of DashBoard™, indicating invalid frame sync reference error. Lock to Input: Uses the program video input video signal as the reference standard. Note: If Lock to Input is used for framesync, any timing instability on the input video will result in corresponding instability on the output video is locked to the device's internal clock. Output video is not locked to external reference. For cases where minimum latency is desired (no framesync), Mode should be set to Lock to Input with Framesync set to Enabled. If Disabled is selected when using dual paths, severe video and audio corruption can occur. 						
• Output Rate Select Output Rate Match Input Video Match Input Video 23.98/29.97/59.94 24/30/60	 Allows frame rate to be outputted same as input video, or converted to from the choices shown to the left and described below. Auto – output video frame rate tracks with input video. 23.98/29.97/59.94 – forces standard North American frame rates. Can be used to convert 24/30/60 Hz camera frame rates to corresponding 23.98/29.97/59.94 standard North American frame rates. 24/30/60 – forces 24/30/60 frame rates. Can be used to convert 23.98/29.97/59.94 Hz frame rates to corresponding 24/30/60 Hz 						

Table 3-2	BBG-1002-UDX-FS Function Menu List — continued


Framesync Path 1 Path 2	(continued)
● Initial Startup Format Select Initial Startup Format	Selects a frame sync format/rate to be invoked (from the choices show to the left) in the time preceding stable lock to external reference. Set this control to that of the intended external reference to help ensure smoothest frame sync locking. This control also sets the device test pattern format where the device initial output at power-up is the interna pattern instead of program video.
Program Video Output Mode Select Output Mode Input Video Flat Field Freeze Test Pattern Snow	 Provides a convenient location to select between program video output and other technical outputs from the choices shown to the left and described below. Input Video – device outputs input program video (or loss of sign choices described below). Flat Field – device outputs black flat field. Freeze – device outputs last frame having valid SAV and EAV codes. Test Pattern – device outputs standard technical test pattern (pattern is selected using the Pattern drop-down described below). Snow – device outputs snow multi-color pattern.
• Loss of Input Signal Selection On Loss of Video Disable Outputs V Disable Outputs Flat Field Freeze Test Pattern Snow	 In the event of program input video Loss of Signal (LOS), determines action to be taken as follows: Disable Outputs: Disable program video SDI outputs. Flat Field – go to flat field on program video output. Freeze – go to last frame having valid SAV and EAV codes on program video output. Test Pattern – go to standard technical test pattern on program video output (pattern is selected using the Pattern drop-down described below). Snow – output snow multi-color pattern.
• Test Pattern Select Test Pattern 75% Bars 75% Bars 100% Bars SMPTE Bars Tartan Pluge Ramp H Sweep Pulse and Bar Multiburst Gray 5 Step Gray 10 Step Checkfield	Provides a choice of standard technical patterns (shown to the left) whe Test Pattern is invoked (either by LOS failover or directly by selecting Test Pattern on the Program Video Output Mode Select control).

Framesync Path 1 Path 2	(continued)
• Flat Field Color Select Flat Field Color Black Black 50% Gray White Red Blue Yellow Green	Provides a choice of flat field colors when Flat Field is invoked (eithe LOS failover or directly by selecting Flat Field on the Program Video Output Mode Select control).
Output Video Reference Offset Controls Vertical (Lines) -1124 Horizontal (us)	 With framesync enabled, provides the following controls for offsetting output video from the reference: Vertical (Lines) – sets vertical delay (in number of lines of output video) between the output video and the frame sync reference. (Positive values provide delay; negative values provide advance) (Range is -1124 thru 1124 lines; null = 0 lines.) Horizontal (μs) – sets horizontal delay (in μs of output video) between the output video and the frame sync reference.
	 delay; negative values provide advance) (Range is -64 thru 64 μsec; null = 0.000 μsec.) Note: Offset advance is accomplished by hold-off of the reference-directed release of the frame, thereby effectively advancing the program video relative to the reference.
• Frame Delay Control Frame Delay	When Framesync is enabled, specifies the smallest amount of latence delay (frames held in buffer) allowed by the frame sync. The frame sy will not output a frame unless the specified number of frames are captured in the buffer. The operational latency of the frame sync i always between the specified minimum latency and minimum latency plus one frame (not one field).
	Note: Due to device memory limits, the maximum available Minimum Latency Frames is related to the output video format selected. When using this control, be sure to check the Report Delay display to make certain desired amount of frames are delayed.
• Video Delay Display	Displays the current input-to-output video delay (in msec units) as we in terms of Frames/fractional frame (in number of lines).
Video Delay 34.13 ms Framesync: 34.13 ms / 1 fram	es 12 lines Status display shows total input-to-output video delay, along with any framesync delay.
Framesync Lock Status Display Lock Status Framesync Locked to Reference	Displays the current framesync status and reference source.
Note: Audio timing offset from video is performe Input Audio Routing/Controls (p. 3-22) for	d using the delay controls on the Input Audio Routing/Controls tab. Refer

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued


Inpur Path 1	t Audio Status	Displays signal status and payload for embedded a discrete audio received by the device.	and
Path		endent controls/status displays for both Path 1 and Path 2 using the Path 1 controls are shown here. Access controls and status for othe	r path
• Absent: Ir • Present - • Dolby E: I • Dolby Dig Note: • E • / F	ndicates embedded channel or AES pa PCM: Indicates AES pair or embedded indicates embedded channel or AES pa jital: Indicates embedded channel or A Dolby status displays occur only for vality AES Dolby-encoded inputs that are rour basses SRC. However, AES inputs to of these paths disable SRC if Dolby-encoder Chese paths disable SRC if Dolby-encoder Ch	ES pair contains Dolby [®] Digital encoded data. d Dolby [®] signals meeting SMPTE 337M standard. ted directly to device are directed via a special path that automatically ther destinations (e.g., AES embedding) are first applied through SR ded data is detected. To avoid a possible "Dolby noise burst" if an inp y, it is recommended to set the AES SRC control for the pair to SCR C	y by- C. ut or
	Status	Peak	
Emb 1-2	Status Dolby Digital	Peak Data	
Emb 1-2 Emb 3-4			
	Dolby Digital	Data	
Emb 3-4	Dolby Digital Present - PCM	Data -80 dBFS/-80 dBFS	
Emb 3-4 Emb 5-6	Dolby Digital Present - PCM Present - PCM	Data -80 dBFS/-80 dBFS -80 dBFS/-80 dBFS	
Emb 3-4 Emb 5-6 Emb 7-8	Dolby Digital Present - PCM Present - PCM Present - PCM	Data -80 dBFS/-80 dBFS -80 dBFS/-80 dBFS -20 dBFS/-20 dBFS	
Emb 3-4 Emb 5-6 Emb 7-8 Emb 9-10	Dolby Digital Present - PCM Present - PCM Present - PCM Present - PCM	Data -80 dBFS/-80 dBFS -80 dBFS/-80 dBFS -20 dBFS/-20 dBFS 0 dBFS/-20 dBFS	
Emb 3-4 Emb 5-6 Emb 7-8 Emb 9-10 Emb 11-12	Dolby Digital Present - PCM	Data -80 dBFS/-80 dBFS -80 dBFS/-80 dBFS -20 dBFS/-20 dBFS 0 dBFS/-20 dBFS -14 dBFS/-10 dBFS	
Emb 3-4 Emb 5-6 Emb 7-8 Emb 9-10 Emb 11-12 Emb 13-14	Dolby Digital Present - PCM	Data -80 dBFS/-80 dBFS -80 dBFS/-20 dBFS -20 dBFS/-20 dBFS 0 dBFS/-20 dBFS -14 dBFS/-10 dBFS -9 dBFS/-5 dBFS	
Emb 3-4 Emb 5-6 Emb 7-8 Emb 9-10 Emb 11-12 Emb 13-14 Emb 15-16	Dolby Digital Present - PCM	Data -80 dBFS/-80 dBFS -80 dBFS/-80 dBFS -20 dBFS/-20 dBFS 0 dBFS/-20 dBFS -14 dBFS/-10 dBFS -9 dBFS/-5 dBFS -3 dBFS/0 dBFS	
Emb 3-4 Emb 5-6 Emb 7-8 Emb 9-10 Emb 11-12 Emb 13-14 Emb 15-16	Dolby Digital Present - PCM Dresent - PCM Extract Status Dolby E, Line 449 Absent	Data -80 dBFS/-80 dBFS -80 dBFS/-80 dBFS -20 dBFS/-20 dBFS 0 dBFS/-20 dBFS -14 dBFS/-10 dBFS -9 dBFS/-5 dBFS -3 dBFS/0 dBFS Peak SRC	
Emb 3.4 Emb 5.6 Emb 7.8 Emb 9.10 Emb 11.12 Emb 13.14 Emb 15.16 AES 1.2 • • AES 15.16	Dolby Digital Present - PCM Dresent - PCM	Data -80 dBFS/-80 dBFS -80 dBFS/-80 dBFS -20 dBFS/-20 dBFS 0 dBFS/-20 dBFS -14 dBFS/-10 dBFS -9 dBFS/-5 dBFS -3 dBFS/0 dBFS Data SRC On	



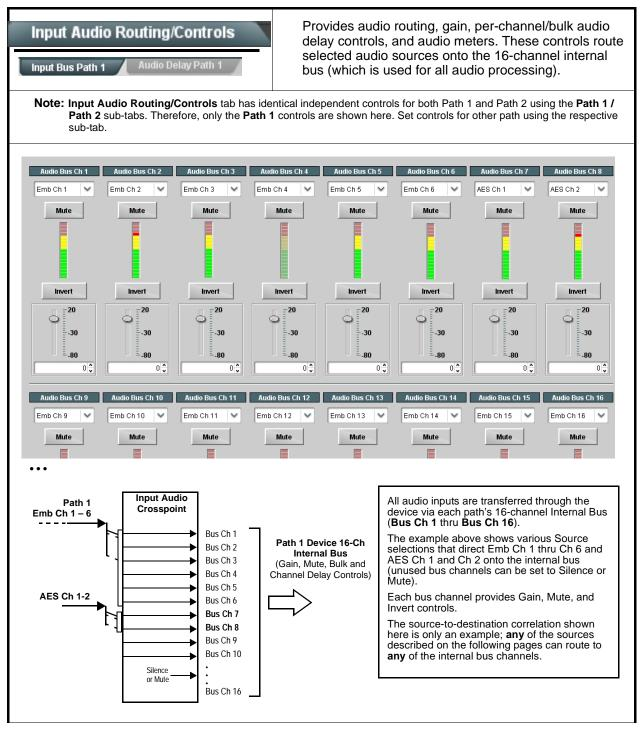

Input Audio Routing/Controls Input Bus Path 1 Audio Delay Path 1	(continued)
, i i i i i i i i i i i i i i i i i i i	hedded Ch 1 thru Ch 16 to bus channels Audio Bus Ch 1 thru Ch 16. identical to the controls described here for Bus Ch 1 . Therefore, only the
Audio Bus Ch 1 Emb Ch 1 Imb Ch 1 Imb Ch 1 Imp Ch 1 <tr< td=""><td> Using the Source drop-down list, selects the audio input source to be routed to the bus channel from the following choices: Embedded input channel 1 thru 16 (Emb Ch 1 thru Emb Ch 16) AES input channel 1 thru 16 (AES Ch 1 thru AES Ch 16) Analog input channel 1 thru 4 (Analog Ch 1 thru Analog Ch 4) Input Flex Bus summed mix output nodes A thru P (see Input Flex N (p. 3-25) Note: • AES pair and analog channel count are dependent on model r panel. Embedded channel sources are only the embedded channels associated with the respective path. Provides Mute and phase Invert channel controls, as well as peak lemeter for each output channel. (Meter shows level as affected by Lev control.) Gain controls allow relative gain (in dB) control for the corresponding destination Embedded Audio Group channel. (-80 to +20 dB range in 1.0 dB steps; unity = 0 dB) Note: Although the device can pass non-PCM data such as Dolby[®] E AC-3, setting the gain control to any setting other than default 0 corrupt Dolby data.</td></tr<>	 Using the Source drop-down list, selects the audio input source to be routed to the bus channel from the following choices: Embedded input channel 1 thru 16 (Emb Ch 1 thru Emb Ch 16) AES input channel 1 thru 16 (AES Ch 1 thru AES Ch 16) Analog input channel 1 thru 4 (Analog Ch 1 thru Analog Ch 4) Input Flex Bus summed mix output nodes A thru P (see Input Flex N (p. 3-25) Note: • AES pair and analog channel count are dependent on model r panel. Embedded channel sources are only the embedded channels associated with the respective path. Provides Mute and phase Invert channel controls, as well as peak lemeter for each output channel. (Meter shows level as affected by Lev control.) Gain controls allow relative gain (in dB) control for the corresponding destination Embedded Audio Group channel. (-80 to +20 dB range in 1.0 dB steps; unity = 0 dB) Note: Although the device can pass non-PCM data such as Dolby [®] E AC-3, setting the gain control to any setting other than default 0 corrupt Dolby data.
Input Audio Routing/Controls	Audio Delay – Provides bulk (all four groups/master) and individu audio bus channel delay offset controls and delay parametric displays.
• Bulk (Master) Audio/Video Delay Control Audio Bulk Delay (msec)	Bulk Delay control adds bulk (all four groups) audio delay from any vid delay (net audio delay offset setting adds delay in addition to any dela included by other actions). This control is useful for correcting lip sync problems when video and audio paths in the chain experience differin overall delays. (-33 to +3000 msec range in 0.01-msec steps; null = 0 msec). Image: Delay control adds bulk (all four groups) audio delay from any video and audio paths in the chain experience differin overall delays. (-33 to +3000 msec range in 0.01-msec steps; null = 0 msec). Image: Delay control adds bulk delay (> 500 msec) can result momentary full-scale noise burst on output processed aud This burst can damage monitors or other equipment if not considered. Gain on output should be reduced if performing large adjustments to delay.

Table 3-2	BBG-1002-UDX-FS Function Menu List — d	continued
-----------	--	-----------

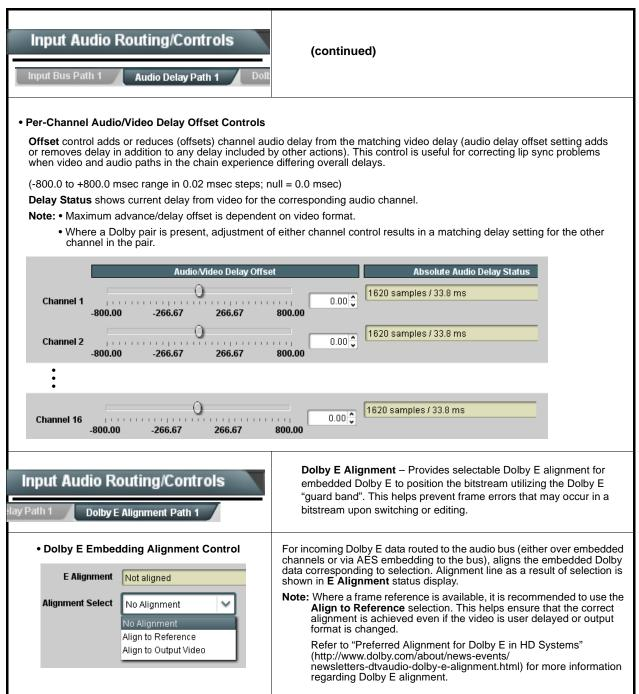

Input Flex Mix - Provides a 16-channel mixer in which each of the Input Audio Routing/Controls inputs can be mixed onto up to 16 independent output summing nodes. Each input channel has independent gain and mute controls. Flex Mix Path 1 In this example four, 4-input mono mixers are provided by selecting Source Flex Bus Flex Mixer Bus A for the Flex Mix 1 thru Flex Mix 4 inputs, and Flex Mixer Bus B Embed Ch 1 Flex Mix A ~ \sim for the next four inputs, and so on as shown. Embed Ch 2 \sim Flex Mix A ~ Flex Mix 2 EmbCh 1 - Ch 16 - -Flex Mix A ~ Embed Ch 3 ~ -Flex Mix 3 AES Ch 1 - Ch 16 Embed Ch 4 ~ Flex Mix A ~ Anlg Ch 1- Ch 4 Flex Mix Flex Mix 1 Emb Ch 1 Embed Ch 5 Flex Mix B \sim \sim Elex Mix 5 Flex Mix 2 Emb Ch 2 Mix Flex Mix 3 Emb Ch 3 \sim Embed Ch 6 \sim Flex Mix B Flex Mix 4 Flex Mix 6 Emb Ch 4 Flex Mix 5 Embed Ch 11 Flex Mix B ~ Emb Ch 5 Flex Flex Mix 6 Emb Ch 6 lex Mix B Flex Mix 7 To Audio Bus Input Routing Emb Ch 11 Embed Ch 12 Flex Mix B ~ \sim Flex Mix 8 Emb Ch 12-Embed Ch 13 Flex Mix C V \sim Flex Mix 9 Emb Ch 13 Flex Mix 10 Flex Mix C Emb Ch 14 ~ Embed Ch 14 Flex Mix C Flex Mix 11 Flex Mix 10 Emb Ch 15. Flex Mix 12 Emb Ch 16 Embed Ch 15 Flex Mix C ~ Flex Mix 11 Flex Mix 13 Anla Ch 1 -Flex Mix 14 Flex Mix D Anlg Ch 2 Embed Ch 16 🛛 🗸 🗸 Flex Mix C ~ Flex Mix 12 Flex Mix 15 Anlg Ch 3 Flex Mix 16 Anla Ch 4 ~ ~ Analog Input 1 Flex Mix D ix 13 Flex N Analog Input 2 🛛 💙 Flex Mix D ~ Flex Mix 14 Analog Input 3 🛛 💙 Flex Mix D \sim Elex Mix 15 Flex Mix 16 Analog Input 4 ~ Flex Mix D In this example three, 2-input mono mixers are provided by selecting Source Flex Bus Flex Mixer Bus A for the Flex Mix 1 and Flex Mix 2 inputs, and Flex Mixer Bus B Embed Ch 1 Flex Mix A ~ for the next two inputs, and so on as shown. Flex Embed Ch 2 V Flex Mix A ~ EmbCh 1 - Ch 16 = AES Ch 1 V Flex Mix B V Flex Mix 3 AES Ch 1 - Ch 16 AES Ch 2 ~ Flex Mix B ~ Anlg Ch 1- Ch 4 Flex Mix 4 Flex Mix C ~ Analog Input 1 🛛 💙 Flex M Flex Mix 1 Flex Mix Emb Ch 1 A Flex Mix 2 Emb Ch 2 Analog Input 2 🛛 🗸 Flex Mix C ~ Flex Mix 6 Flex Mix 3 Flex Mix B AES Ch 1 Silence Flex Mix D ~ Flex Mix 7 Flex Mix 4 AES Ch 2 : To Audio Bus Input Routing Flex Mix 5 Flex Mix C Anlg Ch 1 Silence Flex Mix D ~ ~ Flex Mix 6 Flex Mix 16 Anlg Ch 2

e 3-2 BBG-1002-UDX-FS Function Menu Lis	t — continued
Input Audio Routing/Controls Path 1 Flex Mix Path 1	(continued)
Therefore, only the Flex Mix 1 controls are	x Mix 16 have controls identical to that described here for Flex Mix 1. shown here. should be considered and appropriately set. Unused input channels should
• Flex Mix Input Channel Source/Bus Assignment Flex Mix Input 1 Flex Bus Flex Bus A Source Emb Ch 1	Using the Source drop-down list, selects the audio input source to be directed to the corresponding bus channel from the choices listed below. • Silence • Embed Ch 1 thru Embed Ch 16 • AES Ch 1 thru AES Ch 16 • Analog Ch 1 thru Analog Ch 4 The Flex Bus drop-down selects the bus (A thru P) to which the input is assigned to. Note: See the examples on the previous page showing various types of mixers using multiple flex buses.
• Gain / Mute Control	Provides relative gain (in dB) control and a channel Mute checkbox. (-80 to +20 dB range in 0.1 dB steps; unity = 0.0 dB)
Input Audio Routing/Controls	Clean and Quiet Switching (option +CQS only) – Allows SDI input selection to be changed from one source to another while ducking audio during controlled input video switching transitions to provide silence between input switches.
 be assured for failover switches. Clean switching requires that both SDI sign format and rate. Clean audio switching function is designed switching from/to Dolby or other non-PCM a 	tentional, controlled switches via user control. Clean audio switching cannot als (switch from and switch to) be stable and present, and of the same SDI for PCM audio. This function does not assure clean decoded audio when audio. CQS sub-tabs. Path 1 CQS sub-tab is left-most CQS sub-tab; path 2 is
Switching Enabled check box enables Clean and Duration sets the attack and decay ramp intervals	
Clean and Quiet Switching Enabled Ramp Time Duration (ms)	2500 5000
BBG-100	2-UDX-FS PRODUCT MANUAL BBG-1002-UDX-FS-OM (\

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

	Option ⊡ D have controls identica e shown here. Set contro	 (Option +QC only) Sets quality check screening and thresholds for video quality event alerts. When a quality events occur, the event(s) can be used by the Events Setup function to invoke input routing or other changes. al to the controls described here for Input A sub-tab. Therefore, only the ols for other inputs using the respective sub-tab. Displays event status (based on criteria set below) for signal condition to be considered OK (green), or signal condition considered to be a quality alert event (red) due the condition exceeding the criteria threshold(s) set below. 						
Event Status No Int Event Status Video Event Status Froze								
Position and Width Co	· · · · · · · · · · · · · · · · · · ·	Position and Width controls set the area of concern to be screened by the Quality Event function. X and Y Position controls set the origin point for the area of concern Origin (0,0) y = 100% X and Y Width controls set the size for the area of concern x and y @ 20% x and y @ 80%						
Threshold and Event T Noise Immunity Event Type Frozen Engagement Holdoff (minutes) Frozen Engagement Holdoff (minutes) Frozen Disengagement Holdoff (minutes) Black Engagement Holdoff (minutes) Black Engagement Holdoff (minutes)	Fype Controls	 Sets the thresholds for black, frozen, and/or no video event type to be considered. Also provides holdoff controls for event trigger engagement and disengagement. Noise Immunity sets the relative noise levels that are rejected in the course of black event assessment (Low, Medium, or High). Event Type selects the defect events (black, frozen, or no input) to be screened. Engagement and Disengagement Holdoff controls set the time (in msec) where, when time is exceeded, an event is to be considered a valid alert event, and when event time is has ceased, an alert event is cleared. Disengagement Holdoff sets the time (in msec) where, when event time is has ceased, an alert event is cleared. 						
Black Disengagement Holdoff (ms)	3000							

Table 3-2	BBG-1002-UDX-FS Function Menu List — continued

Audio Detect Events Option 📧							(Option +QC only) Sets audio level screening and thresholds for audio silence/presence event alerts on embedded and/or AES discrete audio in. When an audio events occur, the event(s) can be used by the Events Setup function to invoke input routing or other changes.						
h fr O L E	Any combination of embedded and AES input channels can be selected to be screened for silence or presence. In the example here, Audio Detect Event 1 is set to trigger if audio on any of channels Emb Ch 1 thru Ch 6 fall below the selected threshold for an interval exceeding the selected threshold. Status indicators for each channel show silence (S) / presence (P) status based on the configured thresholds. Up to eight independent audio silence/presence events can be set to be screened (with descending priority of consideration from Event 1 down to Event 8). This status here can be propagated to the Presets > Event Triggers sub-tab controls to issue a GPO, preset engage, or other command when audio silence events are detected.										nreshold us based tion from e a GPO,		
		Emb 1 C	ih 1	Emb 1 Ch	2	Emb 1 Ch 3	Emb 1 Ch 4	Emb 1 Ch 5	Emb 1 Ch 6	Emb 1 Ch 7	Emb 1 Ch	8 •••	AES Chan 16
	Status: S=Silent P=Present	S		P		P	P			P	P		S
	Audio Detect Event 1	Silence	~	Silence	~	Don't Care 🗸	Don't Care 🗸	Don't Care 🗸	Don't Care 💙	Don't Care 🗸	Don't Care	~	Don't Care 🗸
	Audio Detect Event 2	Presence	~	Presence	~	Don't Care 🗸	Don't Care 🗸	Don't Care 🗸	Don't Care 💙	Don't Care 🗸 🗸	Don't Care	\sim	Don't Care 🗸
		:										_	
	Audio Detect Event 8	Don't Care	~	Don't Care	~	Don't Care 🖌 🗸	Don't Care 🗸 🗸	Don't Care 🖌 🗸	Don't Care 🖌 🗸	Don't Care 🖌 🗸	Don't Care	~	Don't Care 🗸 🗸
ΙΓ	Audio Failover Threshold (dBFS)	-	60 🗘										
	Trigger Holdoff (minutes)		0 🗘										
	Trigger Holdoff (ms)	50	00 🗘										
	Trigger Release (minutes)		0 🗘										
ļĻ	Trigger Release (ms)		0 🗘										
,	 Audio Failover Threshold sets the dBFS level at which channel content is considered to be silent, and correspondingly also a transition back to an untriggered condition with resumption of audio for the selected embedded channels. If the selected channels maintain levels above the selected Audio Failover Threshold, no triggering is invoked. Trigger Holdoff sets the period of time in which selected channel silence must occur before an Audio Silence Event trigger goes true. Release Holdoff control sets the time in which the trigger is revoked upon an event false condition. Note: • Default threshold and holdoff settings shown here are recommended for typical use. 												
		-		y be lab	elec	as Don't (Care, DC, or	r DSBL (disa	abled). All no	otations me	an ignori	ng the	channel
	 "Don't Care" setting may be labeled as Don't Care, DC, or DSBL (disabled). All notations mean ignoring the channel from event triggering. Selections other than Don't Care work as an AND function. Where multiple selections are set, a true (trigger) condition is not propagated unless all selected channels experience the configured criteria. (In the example shown above, both channels Emb Ch 1 and Emb Ch 2 need to experience a Silence event for a trigger to be propagated.) 												

le 3-2 BBG-1002-UDX-FS Function Menu List — continued				
	Closed Capt		Provides support for closed captioning setup. Also provides controls for setting closed captioning absence and presence detection thresholds.	
Note	sub-tabs. Therefore • SMPTE embedde	ore, only the Path 1 contr	ependent controls for both Path 1 and Path 2 using the Path 1 / Path 2 rols are shown here. Set controls for other path using the respective sub-tab. essing are correlated only to the path selected. CC data cannot be her.	
	osed Captioning Inp nput Status CDP Pack	et on Line 16	 Displays incoming Closed Captioning status as follows: If closed captioning is present, a message similar to the example shown is displayed. If no closed captioning is present in the video signal, Not Present or Disabled is displayed. 	
-	The closed captioning	function assesses cdp	Rejected Due To message can appear due to the items described below. _identifier, cdp_frame_rate, ccdata_present, and caption_service_active the determinations listed below. Refer to CEA-708-B for more information.	
	Message	Description		
	Unsupported Frame Rate	supported by the card		
	Data Not Present		closed captioning source external to the card that no data is present.	
	No Data ID	Packet from closed ca 0x9669 as the first wo	ptioning source external to the card is not properly identified with rd of the header (unidentified packet).	
• Cic		g function does not supp move/Regenerate	if present) is still processed and passed by the device as normal. ort PAL closed captioning standards. Allows removal of closed captioning packets and regeneration of packets. This is useful where closed captioning must be moved to a different line than that received on.	
Pa Reg Clos	Incoming Packet Removal Disabled If Regenerate Closed Captioning is enabled incoming packets will always be removed. Regenerate Closed Captioning Regenerate Source Select Program Input Analog Video Input HD Output Line		 Regenerate Source Select allows sourcing packet CC from incoming SDI program input video, or from line 21 analog CC via the device CVE input. Note: Although the output line drop-down will allow any choice within the 9 thru 41 range, the actual range is automatically clamped (limited to) certain ranges to prevent inadvertent conflict with active picture area depending on video format. See Ancillary Data Line Number Locations and Ranges (p. 3-9) for more information. The device does not check for conflicts on a given line number Make certain selected line is available and carrying no other data. 	
	Presence/Absence Check Controls Presence Event Delay (sec)		Displays CC presence and/or absence event status. This status can be propagated to the Presets > Event Triggers tab controls to issue a device GPO or other command when CC presence/absence events are detected. Controls for both presence and absence provide for a holdoff time (in	
Presence Event Status Active Absence Event Delay (sec) Absence Event Status Inactive		0	seconds) where, when time is exceeded, an event is to be considered a valid alert event. Note: These controls are present only in conjunction with option +QC.	

Video Proc	Provides the following Video Proc and Color Correct parametric controls.
Note: Video Proc tab has identical inde Therefore, only the Path 1 control	pendent controls for both Path 1 and Path 2 using the Path 1 / Path 2 sub-tabs. s are shown here. Set controls for other path using the respective sub-tab.
• Video Proc	Video Proc (Enable/Disable) provides master on/off control of all V Proc functions.
Video Proc Enabled	 When set to Disable, Video Proc is bypassed. When set to Enable, currently displayed parameter settings take end of the set of the s
Reset to Unity Reset to Unity Confirm	Reset to Unity provides unity reset control of all Video Proc function When Confirm is clicked, a Confirm? pop-up appears, requesting confirmation.
	 Click Yes to proceed with the unity reset. Click No to reject unity reset.
• Luma Gain	Adjusts gain percentage applied to Luma (Y channel).
Luma Gain 0.0	(0% to 200% range in 0.1% steps; unity = 100%)
• Luma Lift	Adjusts lift applied to Luma (Y-channel).
Luma Lift 100.0	(-100% to 100% range in 0.1% steps; null = 0.0%)
• Color Gain	Adjusts gain percentage (saturation) applied to Chroma (C-channel).
Color Gain	(0% to 200% range in 0.1% steps; unity = 100%)
Color Phase	Adjusts phase angle applied to Chroma.
Color Phase -360.0	(-360° to 360° range in 0.1° steps; null = 0°)
Gang Luma/Color Gain Gang Luma/Color Gain On	When set to On , changing either the Luma Gain or Color Gain con increases or decreases both the Luma and Color gain levels by equ amounts.

oc Path 1	Video Proc Color Correction 1	Option E (Option +COLOR only) Provides color corrector functions the individual RGB channels for the program video path.	
• Color (Corrector	Color Corrector (On/Off) provides master on/off control of all Color Corrector functions.	
Color	Corrector On	When set to Off , all processing is bypassed.	
		• When set to On , currently displayed parameters settings take effect.	
• Reset	to Unity	Reset to Unity provides unity reset control of all Color Corrector functions.	
Reset	to Unity Confirm	When Confirm is clicked, a Confirm? pop-up appears, requesting confirmation.	
		• Click Yes to proceed with the unity reset.	
		Click No to reject unity reset.	
• Luma (Gain R-G-B controls	Separate red, green, and blue channels controls for Luma Gain, Black Gain, and Gamma curve adjustment.	
Green	Luma Gain	Gain controls provide gain adjustment from 0.0 to 200.0% range in 0. steps (unity = 100.0) Gamma controls apply gamma curve adjustment in 0.125 to 8.000 rar in thousandths steps (unity = 1.000)	
Blue	-100.0 0.0 100.0	Each of the three control groups (Luma, Black, and Gamma have a Gang Column button which allows settings to be proportionally chang across a control group by changing any of the group's controls.	
Red	-100.0 0.0 100.0		
• Black	Gain R-G-B controls		
Green	Black Gain 0.0 0.0 0 0.0 0 0 0 0 0 0 0 0 0 0 0 0		
Blue	-100.0 0.0 100.0		
Red	-100.0 0.0 100.0		
• Gamm	a Factor R-G-B controls		
	Gamma		
Green	0.125 3.125 5.000 8.000		
Blue	0.125 3.125 5.000 8.000 €		
Red	1.000 🗘		

Video Proc Proc Path 1 Color Correction 1	(continued)		
• Black Hard Clip Black Hard Clip	Applies black hard clip (limiting) at specified percentage. (-6.8% to 50.0%; null = -6.8%)		
White Hard Clip White Hard Clip 50.0	Applies white hard clip (limiting) at specified percentage. (50.0% to 109.1%; null = 109.1%)		
White Soft Clip White Soft Clip 50.0	Applies white soft clip (limiting) at specified percentage. (50.0% to 109.1%; null = 109.1%)		
Chroma Saturation Clip Chroma Saturation Clip 50.0	Applies chroma saturation clip (limiting) chroma saturation at specified percentage. (50.0% to 160.0%; null = 160.0%)		

ble 3-2 BBG-1002-UDX-FS Function Menu List — continued			
Output Audio Routing/Controls Embedded Output Path 1 Downmixer Path 1	Provides an audio crosspoint allowing the audio source selection for each embedded audio output channel. Also provides Gain, Phase Invert, and Muting controls and peak level meters for each output channel.		
 sub-tabs. Therefore, only the Path 1 contr Embedded Ch 2 thru Embedded Ch 16 I described here for Embedded Ch 1. Ther Although either path can embed from, and 	ent controls for both Embedded Path 1 and Path 2 using the Path 1 / Path 2 rols are shown here. Set controls for other path using the respective sub-tab. have controls identical to the Source , Gain , Mute , and Invert controls refore, only the Embedded Ch 1 controls are shown here. d de-embed to, discrete audio interfaces (and embed/de-embed to and from ences between paths should be considered to avoid unexpected A/V delay		
Group Enable/Disable Controls Group 1 Group 2 Group 3 Group 4 Enabled Enabled Enabled Enabled	 Allows enable/disable of embedded audio groups 1 thru 4 on program video output to accommodate some legacy downstream systems that may not support all four embedded audio groups. Note: Changing the setting of this control will result in a noise burst in all groups. This control should not be manipulated when carrying on-air content. 		
• Embedded Output Channel Source Emb Out Ch 1 Audio Bus Ch 1 Path 1	 Using the drop-down list, selects the audio input source to be embedded in the corresponding embedded output channel from the following choices: Audio Bus Ch 1 thru Ch 16 (Path1 or 2) Built-in Tone generators Tone n (-20 dBFS level tone generators with n being frequencies of 100, 200, 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) Flex Bus A thru P mixer sum node outputs Option ⊇ Audio LTC (Path1 or 2) Downmixer L (Path1 or 2) Option ⊇ Embedded Data L and R (Path 1 or 2) (SMPTE 337 non-PCM data embedding with option +ANC) 		
• Channel Mute/Phase Invert/Gain Controls and Peak Level Display	 Provides Mute and phase Invert channel controls, as well as peak level meter for each output channel. (Meter shows level as affected by Level control.) Gain controls allow relative gain (in dB) control for the corresponding destination Embedded Audio Group channel. (-80 to +20 dB range in 1.0 dB steps; unity = 0 dB) Note: Although the BBG-1002-UDX-FS can pass non-PCM data such as Dolby⁶⁰ E or AC-3, setting the gain control to any setting other than default 0 will corrupt Dolby data. 		

able 3-2 BBG-1002-UDX-FS Function Menu List — continued				
Output Audio Ro ut Path 1 Downmixer P		Provides audio down-mix audio routing selections that multiplexes any five audio channel sources into a stereo pair.		
Path 1 contro • Downmix L/R	ls are shown here. Set conti	pendent controls for both Embedded Path 1 and Path 2. Therefore, only the rols for other path using the respective sub-tab. vailable only within a respective path (e.g., Path 1 downmixed channels can		
Downmixer Source	Controls	Left Channel Input thru Right Surround Channel Input select the five audio bus source channels to be used for the downmix.		
Left Channel Input	Audio Bus Ch 1 Path 1	Downmix channels Downmixer L and Downmixer R are available as sources for embedded, AES, or analog audio outputs using the Channel		
Right Channel Input	Audio Bus Ch 2 Path 1	Source controls described above.		
Center Channel Input	Audio Bus Ch 3 Path 1 🛛 💙			
Left Surround Channel Input	Audio Bus Ch 5 Path 1 🛛 💙			
Right Surround Channel Input	Audio Bus Ch 6 Path 1 🛛 🗸			
• Center Mix Ratio Conter Mix R	Ratio	 Adjusts the attenuation ratio of center-channel content from 5-channel source that is re-applied as Lt and Rt content to the DM-L and DM-R stereo mix. 0 dB setting applies no ratiometric reduction. Center channel content is restored as in-phase center-channel content with no attenuation, making center-channel content more predominate in the overall mix. Maximum attenuation setting (-80 dB) applies a -80 dB ratiometric 		
		reduction of center-channel content. Center-channel content is restored as in-phase center-channel content at a -80 dB ratio relative to overall level, making center-channel content less predominate in the overall mix.		
		(20 dB to -80 dB range in 0 dB steps; default = 0 dB)		
		Note: Default setting is recommended to maintain center-channel predominance in downmix representative to that of the original source 5-channel mix.		
Surround Mix Ratio Surround Mi		Adjusts the attenuation ratio of surround-channel content from 5-channel source that is re-applied as Lo and Ro content to the DM-L and DM-R stereo mix.		
		 0 dB setting applies no ratiometric reduction. Surround-channel content is restored with no attenuation, making Lo and Ro content more predominate in the overall mix. 		
-80 -30	20	 Maximum attenuation setting (-80 dB) applies a -80 dB ratiometric reduction of surround-channel content. Surround-channel content is restored at a -80 dB ratio relative to overall level, making surround-channel content less predominate in the overall mix. 		
		(20 dB to -80 dB range in 0 dB steps; default = 0 dB)		
		Note: Default setting is recommended to maintain surround-channel predominance in downmix representative to that of the original source 5-channel mix.		


Output Audio Routing/Controls	Output Flex Mix – Provides a 16-channel mixer in which each of the inputs can be mixed onto up to 16 independent output summing nodes. The input sources include audio bus channels from the two embedded audio paths. Each input channel has independent gain and mute controls.					
In this example, audio bus channels 1 thru 8 from each outputs can then be outputted on any of the device aud Path 2 embedded internal Audio Bus sources to the Pa	lio outputs. The o	utput flex l	ous allows cross-s	ourcing fro		
1 Flex Mix 1 1 Flex Mix 2 Flex Bus A		Flex Mix 1	Source Audio Bus Ch 1 Path 1	~	Flex Bus Flex Bus A	~
		Flex Mix 2	Audio Bus Ch 1 Path 2	~	Flex Bus A	~
2 Flex Mix 3 Flex Mix 4 Flex Bus B		Flex Mix 3	Audio Bus Ch 2 Path 1	~	Flex Bus B	~
Out	Path 1 / Path 2 tput Audio	Flex Mix 4	Audio Bus Ch 2 Path 2	~	Flex Bus B	~
Flex Bus P	osspoints	Flex Mix 5	Audio Bus Ch 3 Path 1	~	Flex Bus C	~
8 Flex Mix 15		• Flex Mix 15	Audio Bus Ch 8 Path 1	~	Flex Bus P	~
Path 1 Path 2		Flex Mix 16	Audio Bus Ch 8 Path 2	~	Flex Bus P	~
Note: For each Flex Mix input channel, its source sl be set to the Silence selection.	Note: For each Flex Mix input channel, its source should be considered and appropriately set. Unused input channels shou be set to the Silence selection.			hould		
Flex Bus Input Channel Source/Bus Assignment			down list, selects t nding bus channel			
Flex Mix Input 1	 Silence Audio Bus Ch 1 thru Ch 16 (Path1 or 2) 					
Flex Bus A	 Tones (100 Hz thru 16 kHz) Downmix L or Downmix R (Path1 or 2) 					
Source Audio Bus Ch 1 Path 1	The Flex Bus assigned to.	drop-dowi	n selects the bus (A thru P)	to which the ir	nput is
• Gain / Mute Control	Provides relati	ve gain (in	dB) control and a	a channel l	Mute checkbo	x.
Mute 30 80	(-80 to +20 dB	range in ().1 dB steps; unity	r = 0.0 dB))	



Output Audio Routing/Controls	Provides an audio crosspoint allowing the audio source selection for each AES audio output channel. Also provides Gain, Phase Invert, and Muting controls and peak level meters for each output channel.
Ch 1. Therefore, only the AES Out Ch 1 of	ion should be considered and appropriately set. Unused destination
• AES Output Channel Source AES Out Ch 1 Audio Bus Ch 1 Path 1	 Using the drop-down list, selects the audio input source to be embedded in the corresponding embedded output channel from the following choices: Audio Bus Ch 1 thru Ch 16 (Path 1 or 2) Built-in Tone generators Tone n (-20 dBFS level tone generators with n being frequencies of 100, 200, 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) Flex Bus A thru P mixer sum node outputs Option I Audio LTC (Path1 or 2) Downmixer L (Path1 or 2) Downmixer R (Path1 or 2) Option E Embedded Data L and R (Path 1 or 2) (SMPTE 337 non-PCM data embedding with option +ANC)
Channel Mute/Phase Invert/Gain Controls and Peak Level Display	Provides Mute and phase Invert channel controls, as well as peak level meter for each output channel. (Meter shows level as affected by Level control.)
Mute Mute Mute Mute Mute Mute 1000	 Gain controls allow relative gain (in dB) control for the corresponding destination AES output channel. (-80 to +20 dB range in 1.0 dB steps; unity = 0 dB) Note: Although the BBG-1002 can pass non-PCM data such as Dolby[®] E or AC-3, setting the gain control to any setting other than default 0 will corrupt Dolby data.

Output Audio Routing/Controls Analog Audio Out Downmixer	Provides an audio crosspoint allowing the audio source selection for each analog audio output channel. Also provides Gain, Phase Invert, and Muting controls and peak level meters for each output channel.
• Analog Output Channel Source	 Using the drop-down list, selects the audio input source to be embedded in the corresponding embedded output channel from the following choices: Audio Bus Ch 1 thru Ch 16 (Path 1 or 2) Built-in Tone generators Tone n (-20 dBFS level tone generators with n being frequencies of 100, 200, 300, 400, 500, 600, 700, 800, 900, 1k, 2k, 4k, 6k, 8k, 12k, and 16k) Flex Bus A thru P mixer sum node outputs Option Audio LTC (Path 1 or 2) Downmixer L (Path 1 or 2)
• Channel Mute/Phase Invert/Gain Controls and Peak Level Display	Provides Mute and phase Invert channel controls, as well as peak level meter for each output channel. (Meter shows level as affected by Level control.) Gain controls allow relative gain (in dB) control for each corresponding destination analog audio out channel. (-80 to +20 dB range in 1.0 dB steps; unity = 0 dB)



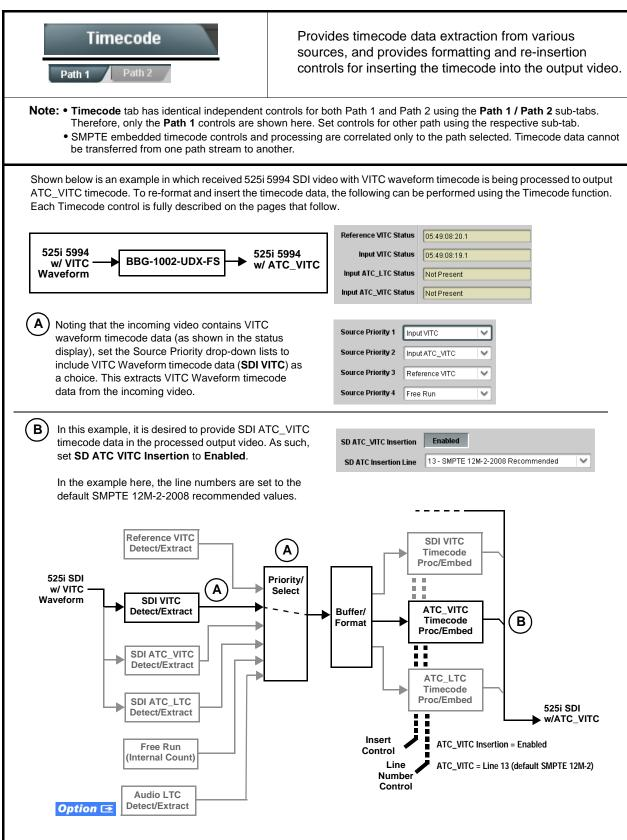

Timecode Path 1	(continued)
Option E Audio LTC controls described belo allows audio LTC from an audio channel to be used as the output video.	ow only appear on devices with +LTC licensed optional feature. This feature s a timecode source, with conversion to a selected SMPTE 12M format on
Timecode Source Status Displays Reference VITC Status Input VITC Status Input ATC_LTC Status Input ATC_VITC Status Input ATC_VI	 Displays the current status and contents of the four supported external timecode formats shown to the left. If a format is receiving timecode data, the current content (timecode running count and line number) is displayed. If a format is not receiving timecode data, Not Present is displayed.
• LTC Input Control LTC Input COM 1 (RS485) COM 1 (RS485) COM 2 (RS485) Embed Ch 1 • Analog Input 8	 Selects source to be used by device to receive LTC as listed below. RS-485 over COM1 or COM 2 Audio LTC over Emb Ch 1 thru Ch 16 Audio LTC over AES Ch 1 thru Ch 16 Audio LTC over Analog audio Ch 1 thru Ch 4 Note: Audio LTC Source must be appropriately set for device to receive and process received LTC. If COM 1 or COM 2 is used for LTC receive, the port function must be set for LTC. See COMM Ports Setup Controls (p. 3-58) for more information. Device audio inputs will not center inputs with DC offset. If input has DC offset, the source may need to be capacitively coupled to remove the offset. LTC embedded channel selections are only channels associated with the selected path.
• Mute LTC Control Mute LTC Audio on input loss Enabled	 Allows LTC audio or RS-485 output to mute upon loss of selected timecode inputs. When set to Enabled and input timecode is lost: RS-485 LTC output goes to frozen state. Audio LTC output mutes. When set to Disabled and input timecode is lost: RS-485 LTC output keeps counting, with count value being free-run count. Audio LTC output is not muted, with count value being free-run count. Note: If muting upon loss of a particular input format is desired, set all Source Priority 1 thru 4 to that particular input format. If this is not done, the device failover timecode selection may substitute another format choice for the format not being received.
Incoming ATC Packet Removal Control Incoming ATC Packet Removal Disabled	Enables or disables removal of existing input video ATC timecode packets from the output. This allows removal of undesired existing timecodes from the output, resulting in a "clean slate" where only desired timecodes are then re-inserted into the output. (For example, if both SDI ATC_VITC and ATC_LTC are present on the input video, and only ATC_LTC is desired, using the Removal control will remove both timecodes from the output. The ATC_LTC timecode by itself can then be re-inserted on the output using the other controls discussed here.) Note: Set this control to Enabled if Free-Run timecode is to be used. If incoming packets are not removed, output embedded SMPTE timecode may alternate between free-run and embedded SMPTE timecode values.


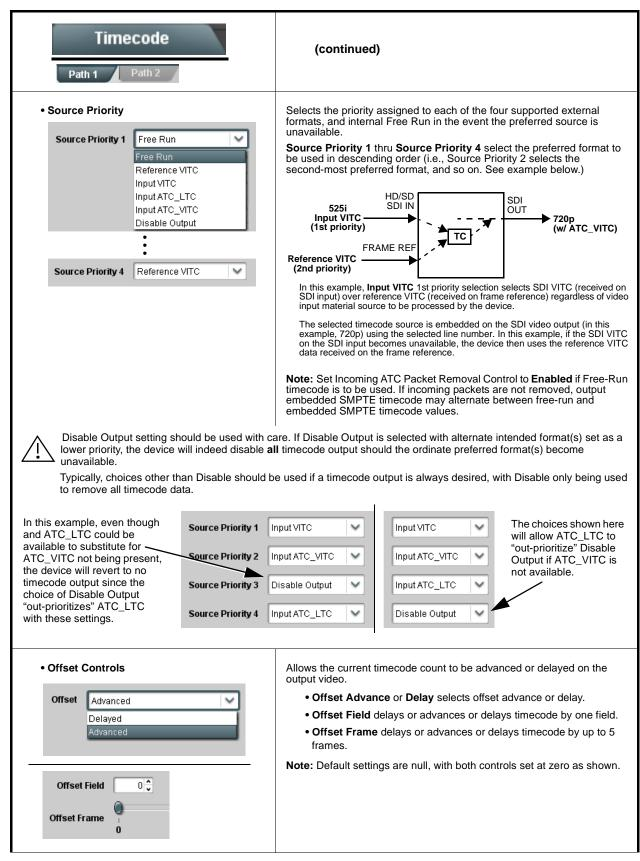


Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

Timecode Path 1 Path 2	(continued)		
Output Status Display	Displays the current content and source being used for the timecode data as follows:		
Output Status 00:04:46:06.1 (Source: SDI VITC)	Output Status 00:04:46:06.1 (Source: SDI VITC)		
	 Output status OK (in this example, SDI VITC timecode received and outputted). 		
	Output Status Insertion Disabled		
	 Timecode Insertion button set to Disabled; output insertion disabled. Note: If timecode is not available from Source Priority selections performed, timecode on output reverts to Free Run (internal count) mode. Because the 1's digit of the display Frames counter goes from 0 to 29, the fractional digit (along with the 1's digit) indicates frame count as follows: 0.0 0.1 Frame 0 0.1 Frame 1 1.0 Frame 3 29.1 Frame 59 		
Audio LTC Output Option	Audio LTC output is routed to desired embedded, AES, or analog audio outputs using the Output Audio Routing/Controls (p. 3-33). Whatever timecode is displayed on the Output Status is converted to audio LTC and available as an LTC audio output.		
range is automatically clamped (limited) to depending on video format. See Ancillary	controls described below will allow a particular range of choices, the actual certain ranges to prevent inadvertent conflict with active picture area Data Line Number Locations and Ranges (p. 3-9) for more information.		
 The device does not check for conflicts on no other data. 	a given line number. Make certain the selected line is available and carrying		
SD VITC Waveform Insertion Controls SD VITC Waveform Output 1 Line Number SD VITC Waveform Output 2 Line Number SD VITC Waveform Insertion Enabled	 For SD output, enables or disables SD VITC waveform timecode insertion into the output video, and selects the VITC1 and VITC2 line numbers (6 thru 22) where the VITC waveform is inserted. Note: If only one output line is to be used, set both controls for the same line number. SD VITC Waveform Insertion control only affects VITC waveforms inserted (or copied to a new line number) by this function. An existing VITC waveform on an unscaled SD SDI stream is not affected by this control and is passed on an SDI output. 		
SD ATC Insertion Control SD ATC_VITC Insertion Enabled SD ATC Insertion Line 13 - SMPTE 12M-2-2008 Recommended	For SD output, enables or disables SD ATC_VITC timecode insertion into the output video, and selects the line number for ATC_VITC.		

Timecode Path 1 Path 2	(continued)
HD ATC_LTC Insertion Control HD ATC_LTC Insertion Enabled HD ATC_LTC Insertion Line 10 - SMPTE 12M-2-2008 Recommended	For HD output, enables or disables ATC_LTC timecode insertion into the output video, and selects the line number for ATC_LTC timecode data.
HD ATC_VITC Insertion Control HD ATC_VITC Insertion HD ATC_VITC Insertion Line Field 1 9 - SMPTE 12M-2-2008 Recommended HD ATC_VITC Insertion Line Field 2 8 (571) - SMPTE 12M-2-2008 Recommended	For HD output, enables or disables ATC_VITC timecode insertion into the output video, and selects the line number for ATC_VITC1 and ATC_VITC2.
ATC_VITC Legacy Support Control ATC VITC Legacy Support Disabled	 When enabled, accommodates equipment requiring ATC_VITC packet in both fields as a "field 1" packet (non-toggling). Note: Non-toggling VITC1 and VITC2 packets do not conform to SMPTE 12M-2-2008 preferences. As such, ATC_VITC Legacy Support should be enabled only if required by downstream equipment.
Free Run Timecode Controls Free Run Hours Free Run Minutes O Free Run Seconds O Apply Free Run Values Confirm	 Allows an initial (starting) count to be applied to output video timecode when Free Run insertion is enabled. Note: • Initialization can only be applied when device is outputting Free Run timecode (as shown by Output Status displaying "Free Run"). • If failover to Free Run occurs due to loss of external timecode(s), the Free Run count assumes its initial count from the last valid externally supplied count.

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

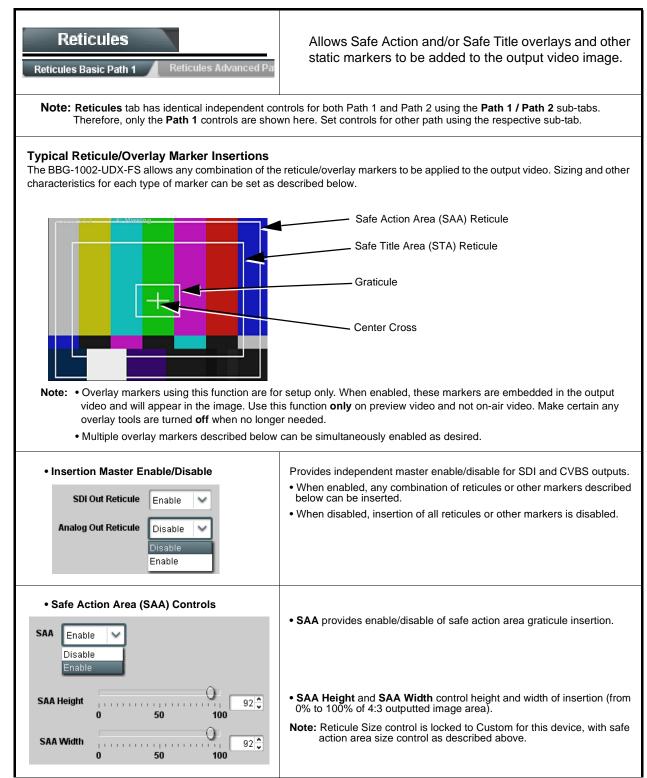

Reticules Reticules Basic Path 1 Reticules Advanced Pat	(continued)
• Safe Title Area (STA) Controls STA Enable Disable Enable Enable	• STA provides enable/disable of safe title area graticule insertion.
STA Height 92 0 50 STA Width 92 0 50 0 50	• STA Height and STA Width control height and width of insertion (from 0% to 100% of 4:3 outputted image area).
Overlay Color Controls Overlay Color Inverse Color Opacity Opacity Thickness 1 6 12	 Overlay Color selects from white, various gray fills, or black colors. Inverse Color selects inversion (negative) of current selection. Opacity sets the opacity of the overlay for both white/black and inverse color modes. Thickness sets the line thickness (in pixels).
	— White overlay color — Black overlay color
Reticules ath 1 Reticules Advanced Path 1	Provides insertion and sizing controls for custom graticules and other markers. Also provides NTSC legacy 4:3 master reticule sizing.
Note: Color attributes of markers described below	vare set using the master Overlay Color Controls described above.
Graticule Controls Graticule Enable	Graticule provides enable/disable of user graticule insertion.
Graticule Height 20 0 50 100 Graticule Width 0 50 100 0 50 100	• Graticule Height and Width control height and width of insertion (from 0% to 100% of 4:3 outputted image area).

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

Reticules ath 1 Reticules Advanced Path 1	(continued)
Center Cross Controls Center Cross Enable	Center Cross provides enable/disable of center cross insertion.
Cross Height 0 50 100 Cross Width 0 50 100 0 50 100 0 50 100	 Cross Height and Width control height of vertical line and width of horizontal line (from 0% to 100% of 4:3 outputted image area).
Horizontal Line Controls Horizontal Line Enable	Horizontal Line provides enable/disable of horizontal line insertion.
Hor Line Size 0 40 0	• Horizontal Line Size controls the width of the horizontal line (from 0% to 100% of 4:3 outputted image area).
Hor Line Pos 50 50	• Horizontal Line Pos controls the vertical positioning of the horizontal line (from 0% to 100% of 4:3 outputted image area).
Vertical Line Controls Vertical Line Enable Ver Line Size 0 50 100 Ver Line Pos 0 50 100	 Vertical Line provides enable/disable of vertical line insertion. Vertical Line Size controls the height of the vertical line (from 0% to 100% of 4:3 outputted image area). Vertical Line Pos controls the horizontal positioning of the line (from 0% to 100% of 4:3 outputted image area).
NTSC Legacy Reticule Fixed Control NTSC Legacy Enable Disable Enable	When set to enable, provides fixed-size safe action area 4:3 reticule suited for CRT-based displays.

Wings Path 1 Path 2	Provides wings insertion/width controls and displays insertion status.
	controls for both Path 1 and Path 2 using the Path 1 / Path 2 sub-tabs. Therefor are. Set controls for other path using the respective sub-tab.
Wings Source Control	Selects the SDI input video port to serve as the wings source.
Wings Source SDIA	Note: • SDI inputs selected must be present on rear panel (varies by model).
SDI A SDI B SDI C SDI D	 Other wings input choices sourced from Path 1 and Path 2 program video outputs also are available using this drop-down. These selections are not typically used for norm use. A white paper describing these use cases may be developed in the future that explains the use of special loopir alternate-path inputs. In brief, these alternate inputs are usef for providing two identical video paths with a delay offset provided by the second processing path.
Wings Insertion Enable Control	Enables or disables wings insertion into the output video.
Wings Enable Enabled	Note: For conditions where wings is not intended to be inserted, make certain this control is set to Disabled.
Wings Width Mode Control	Selects wings width control from the choices shown to the left and described below.
Wings Adjustment Manual Manual Follow Scaler	 Manual: Wings L/R width is set using Wings Width manual contro (see below). Follow Scaler: Wings width automatically tracks with Scaler asperatio control settings (as configured by Scaler).
	Note: Path 2 can only use Manual setting since Path 2 is not scaler-equipped.
Wings Width Control	Allows symmetrical L/R wings insertion width, from none to widths extending into active image area if desired.
Wings Width (pixels)	(0 to 300 pixel range; null = 0)
• Wings Status Displays	Displays wings timing status as described below.
	Note: • Wings timing is a function of the wings frame sync card/ device. Ideal wings timing is within 0 to 200 samples ear of output video timing. Wings timing cannot be controlled on host device wings inserter.
	 Error in wings timing will result in loss of wings (however, program video image will not be corrupted).
Wings OK Wings Status Insertion OK, Wings Offset 0	lines early, 25 samples early Wings insertion within target 0-200 samples early
Wings Timing Error Wings Status Insertion Error Adjust Wings	Timing, Wings Offset 0 lines early, 99 samples late Wings insertion late
Wings Iming Error Wings Status Insertion Error Adjust Wings	Timing, Wings Offset 0 lines early, 984 samples early Wings insertion too early
	tch Output Format, Wings Offset 259 lines early, 1685 samples late

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued


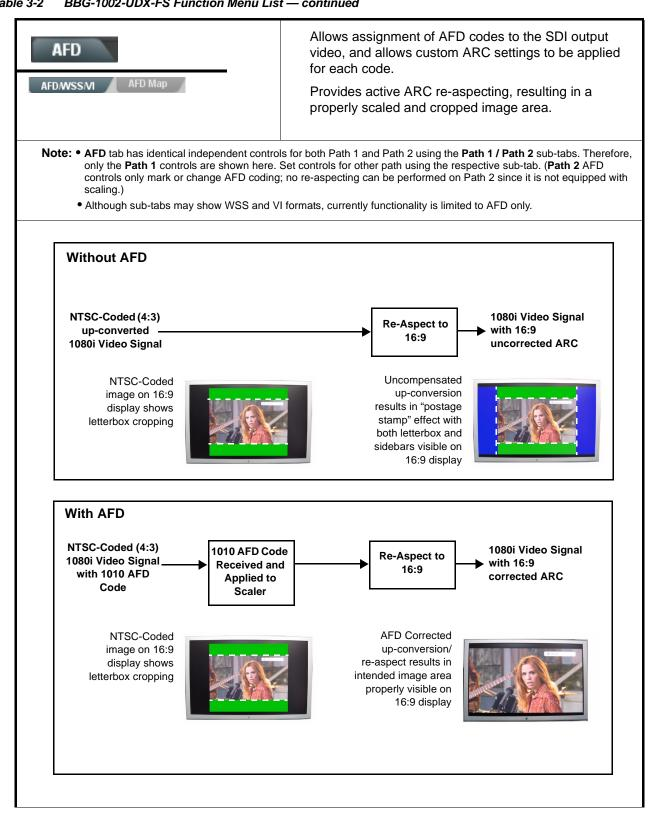


Table 3-2 BBG-1002-UDX-FS Function Menu List — continued



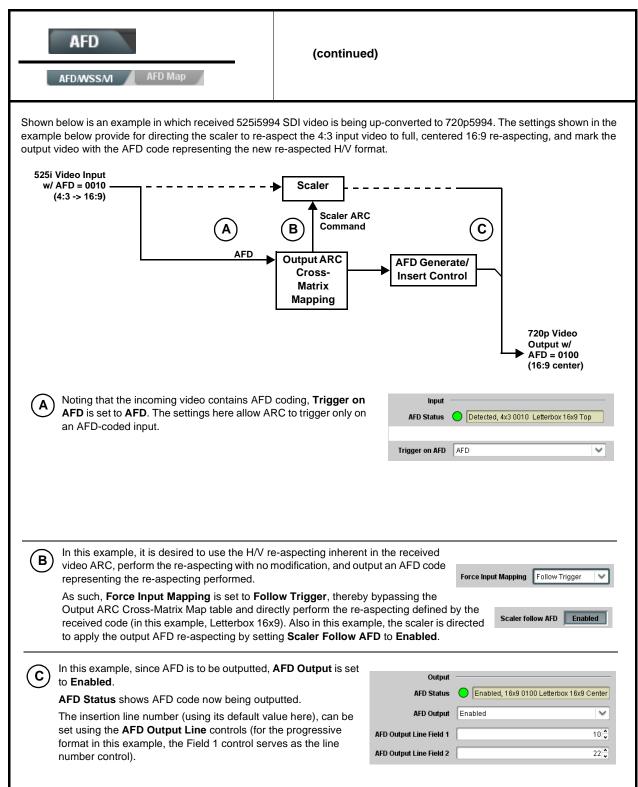

AFD AFD/WSS/VI	AFD Map	AFD/WSS/VI sub-tab provides prioritized and gated input monitoring for AFD.
Input Format S	tatus Displays	Displays the current status and contents of AFD formatting.
Input		 If a format is received, the current formatting code and description is displayed (as shown in the example).
AFD Status 🔵 Detec	ted, 16x9 0010 Letterbox 16x9 Top	• If a format is not receiving data, Not Present is displayed.
Scaler AFD Ena Scaler follow AFD		Enables scaler to apply ARC settings provided by ARC controls in this function. • Enabled sets the output aspect ratio to track with AFD settings
Scaler Tollow AFD	Enabled	performed in this tab, overriding any other scaler manual ARC control settings.
		 Disabled allows ARC coding processing performed in this tab, but does not apply ARC settings in scaler.
		Note: • This control also appears on the Scaler tab and is mutually ganged with the selection performed on either tab.
		 Scaler follows AFD functions only when a valid AFD output format is being generated and enabled. The scaler only observes AFD code commands, with the controls on this tab set to generate an AFD-coded output.
• Input Mapping		When received ARC code is received, applies H/V coding as follows:
Force Input Mapping	Follow Trigger	 Follow Trigger – Uses the ARC coding inherent in the received triggering ARC.
	Follow Trigger	• 4x3 ARC Codes – For received triggering formats coded as 4x3, applies the H/V coding selected in this drop-down.
	Ix3 0010 Letterbox 16x9 Top Ix3 0011 Letterbox 14x9 Top	 16x9 ARC Codes – For received triggering formats coded as 16x9, applies the H/V coding selected in this drop-down.
	6x9 1110 Protect 14x9 6x9 1111 Protect 4x3	Note: Settings performed here can be applied directly to the output video, or the settings applied here can be custom modified if desired for any of the 11 4x3 codes and any of the 11 16x9 codes available here using the AFD Map sub-tab.

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

AFD AFD/WSS/VI AFD Map	(continued)
Input Triggering Controls Trigger on AFD Off	Individual ARC format input controls allow accepting or rejecting received ARC formats as follows: • Trigger on AFD: • Off rejects AFD-coded triggering. • On allows trigger on AFD.
Output Status/Enable Controls Output AFD Status Enabled, 16x9 0100 Letterbox 16x9 Center AFD Output Enabled	 Individual ARC format input controls allow accepting or rejecting received ARC formats as follows: AFD Output: Disable turns off AFD format on output. Displays the current output status, coding, and H/V ratio for AFD formats. If a format is active and enabled (as set with the Output Enable controls), the code and H/V description is displayed. If a format is not outputting data, Disabled is displayed. Note: The code displayed shows the outputted code. If the code is modified by user settings performed in the AFD Map sub-tab, these changes are shown here. Refer to AFD Map sub-tab for more information. As shown in the example, settings that result in invalid mapping across format translations will display Disabled. In these cases, no output is inserted for the format.
AFD Output Line Control AFD Output Line Field 1 AFD Output Line Field 2 22	 Allows selecting the line location of the AFD data within the video signal Ancillary Data space. Note: • The device does not check for conflicts on a given line number. Make certain the selected line is available and carrying no other data. • For progressive formats, the Field 1 control serves as the line number control.


Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

	AF	D			(co	ntinued)			
	AFD/M	vss <i>i</i> vi	AFD Map							
Th	e table be	elow lists val	id translatic		FD/WSS/VI Trai en WSS, VI, and S			es for both 4	1x3 and 10	6x9-coded frames.
			Input					Outp	out	
	AFD	WSS ETSI 625	WSS ETSI 525	VI	Description	AFD	WSS ETSI 625	WSS ETSI 525	VI	Description
	0010	4			4x3 Letterbox 16x9 Top	0010	4	0	1 (NTSC) 2 (PAL)	4x3 Letterbox 16x9 Top
	0011	2			4x3 Letterbox 14x9 Top	0011	2	0	1 (NTSC) 2 (PAL)	4x3 Letterbox 14x9 Top
	0100	5	2		4x3 Letterbox 16x9 Center	0100	5	2	1 (NTSC) 2 (PAL)	4x3 Letterbox 16x9 Center
	0101, 0110, 0111				Undefined					
-	1000	0	0	0 1 (NTSC) 2 (PAL)	4x3 Coded Frame	1000	0	0	1 (NTSC) 2 (PAL)	4x3 Coded Frame
Coded	1001				4x3 Center	1001	0	0	1 (NTSC) 2 (PAL)	4x3 Center
4:3	1010	3			4x3 16x9 Center	1010	3	2	1 (NTSC) 2 (PAL)	4x3 16x9 Center
	1011	1			4x3 14x9 Center	1011	1	0	1 (NTSC) 2 (PAL)	4x3 14x9 Center
	1100			3, 4, 7	Reserved	1100		0	1 (NTSC) 2 (PAL)	Reserved
	1101	6			4x3 Protect 14x9	1101	6	0	1 (NTSC) 2 (PAL)	4x3 Protect 14x9
	1110				4x3 Letterbox 16x9; Protect 14x9 Center	1110		2	1 (NTSC) 2 (PAL)	4x3 Letterbox 16x9; Protect 14x9 Center
	1111				4x3 Letterbox 16x9; Protect 4x3 Center	1111		2	1 (NTSC) 2 (PAL)	4x3 Letterbox 16x9; Protect 4x3 Center
	0010				16x9 Letterbox 16x9 Top	0010		1	5 (NTSC) 6 (PAL)	16x9 Letterbox 16x9 Top
	0011				16x9 Letterbox 14x9 Top	0011		1	5 (NTSC) 6 (PAL)	16x9 Letterbox 14x9 Top
	0100				16x9 Letterbox 16x9 Center	0100		1	5 (NTSC) 6 (PAL)	16x9 Letterbox 16x9 Center
	0101, 0110, 0111				Undefined					
oded	1000	7	1	0 5 (NTSC) 6 (PAL)	16x9 Coded Frame	1000	7	11	5 (NTSC) 6 (PAL)	16x9 Coded Frame
16:9 Coded	1001				16x9 4x3 Center	1001		1	5 (NTSC) 6 (PAL)	16x9 4x3 Center
	1010				16x9 Center Protect 16x9	1010	7	1	5 (NTSC) 6 (PAL)	16x9 Center Protect 16x9
	1100				Reserved	1100		1	5 (NTSC) 6 (PAL)	Reserved
	1101				16x9 4x3 Protect 14x9	1101		1	5 (NTSC) 6 (PAL)	16x9 4x3 Protect 14x
	1110				16x9 Protect 14x9	1110		1	5 (NTSC) 6 (PAL)	16x9 Protect 14x9
	1111				16x9 Protect 4x3	1111		1	5 (NTSC) 6 (PAL)	16x9 Protect 4x3

		frame	es to compa	anion 16x9 i	lirectionally re-aspecting from rames, and allows customizing	
AFD/WSS/VI AFI	D Map	ratio	settings for	the AFD co	des supported by the device.	
Input:4x3	3 V Zoom(60-200)	H Zoom(60-200)	Pan	Tilt	Output AFD Code	_
4x3 Letterbox 16x9 Top 0010		100.0	0.0	12.5		
4x3 Letterbox 14x9 Top 0011	116.7 🗘	100.0	0.0	7.1	16x9 0011 Letterbox 14x9 Top	
÷						
4x3 Letterbox 16x9 Protect 4x3 1111	133.3	100.0	0.0	0.0	16x9 1111 Protect 4x3	
Input:16x9						
	V Zoom(60-200)	H Zoom(60-200)	Pan	Tilt	Output AFD Code	
16x9 Letterbox 16x9 Top 0010		100.0	0.0 🗘	-12.5	4x3 0010 Letterbox 16x9 Top	
16x9 Letterbox 14x9 Top 0011	75.0 🗘	100.0 🗸	0.0 🗘	-7.1	4x3 0011 Letterbox 14x9 Top	1
•						
16x9 Protect 4x3 1111	100.0 🗘	133.0 🗘		0.0	•	
By default, each row is set for 4x3 frames get re-aspected t	k3 and 16x9 code or its companion to a companion 1	ed input frames allo re-aspected output	, along with	ARC (as we	4x3 1111 Letterbox 16x9 Protect 4x3 II as pan/tilt) for various coded O code for the companion outp larly 16x9 frames get re-aspec	fra
By default, each row is set for 4x3 frames get re-aspected t companion 4x3 re-aspecting	k3 and 16x9 code or its companion to a companion 1 and AFD code). settings provide t	ed input frames allo re-aspected output 6x9 re-aspecting a the scaling and tilt f	ow custom / , along with nd AFD coo	ARC (as we n output AF de, and simi	II as pan/tilt) for various coded D code for the companion outp	frai out (
By default, each row is set for 4x3 frames get re-aspected t companion 4x3 re-aspecting In this example, default s	k3 and 16x9 code or its companion to a companion 1 and AFD code). settings provide t	ed input frames allo re-aspected output 6x9 re-aspecting a the scaling and tilt f	ow custom / , along with nd AFD coo	ARC (as we n output AF de, and simi	II as pan/tilt) for various coded D code for the companion outp larly 16x9 frames get re-aspec	frai out (
By default, each row is set for 4x3 frames get re-aspected t companion 4x3 re-aspecting In this example, default s companion 4x3 0010 Le	k3 and 16x9 code or its companion to a companion 1 and AFD code). settings provide t	ed input frames allo re-aspected output 6x9 re-aspecting a the scaling and tilt f	ow custom / , along with nd AFD coo	ARC (as we n output AF de, and simi	II as pan/tilt) for various coded D code for the companion outp larly 16x9 frames get re-aspec	frai out (
By default, each row is set for 4x3 frames get re-aspected t companion 4x3 re-aspecting In this example, default s companion 4x3 0010 Le	k3 and 16x9 code or its companion 1 o a companion 1 and AFD code). settings provide t tterbox 16x9 Top	ed input frames allo re-aspected output 6x9 re-aspecting a the scaling and tilt f o frame.	w custom / , along with nd AFD coo	ARC (as we n output AF de, and simi	II as pan/tilt) for various coded O code for the companion outp larly 16x9 frames get re-aspec x9-coded 0010 frame to its	frai out (
By default, each row is set for 4x3 frames get re-aspected t companion 4x3 re-aspecting In this example, default companion 4x3 0010 Le	K3 and 16x9 code or its companion 1 o a companion 1 and AFD code). settings provide t tterbox 16x9 Top	ed input frames allo re-aspected output 6x9 re-aspecting a the scaling and tilt f o frame. H Zoom(60-200)	ew custom A , along with nd AFD coo factors to co Pan	ARC (as we n output AF de, and simi onvert a 16.	II as pan/tilt) for various coded O code for the companion outp larly 16x9 frames get re-aspec x9-coded 0010 frame to its Output AFD Code	fran out (ted

 Table 3-2
 BBG-1002-UDX-FS Function Menu List — continued

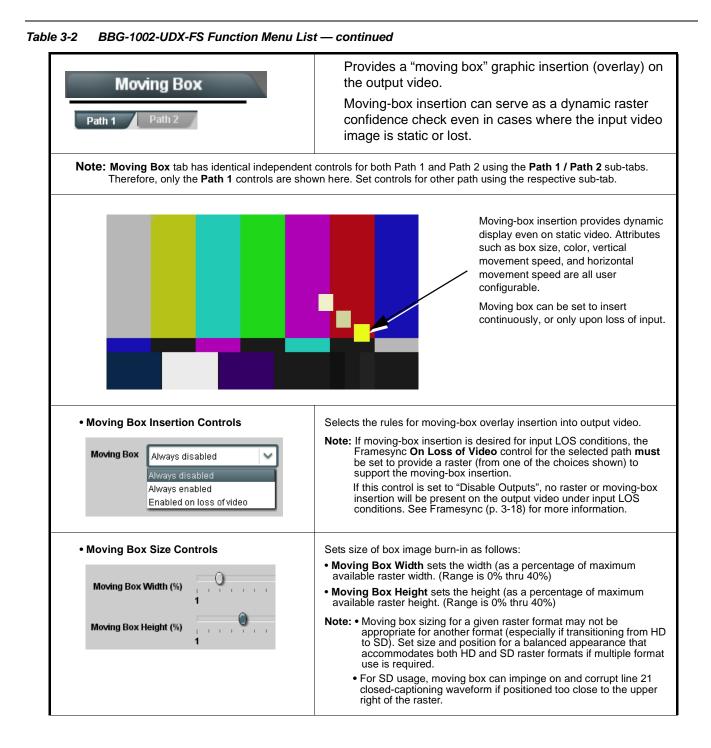

Moving Box Path 1 Path 2	(continued)
Moving Box Speed Controls Moving Box Horizontal Speed Normal Normal Fast	 Sets speed of motion for moving box image burn-in as follows: Moving Box Horizontal Speed sets the X-axis speed from choices shown. Moving Box Vertical Speed sets the Y-axis speed from choices shown.
Moving Box Vertical Speed Normal Normal Normal	Provides independent controls for setting the color and opacity of the
Moving Box Opacity (%)	 Color drop-down sets box color from multiple choices shown. Opacity controls sets box opacity from 0% (least opacity) to 100% (full opacity).
Moving Box Color White Yellow Cyan Green Magenta Red Blue Black	

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

Table 3-2	BBG-1002-UDX-FS Function Menu List — continued

processing: serial data (COM 1) interface where Mode is special insertions in HANC • Bridge extracts ANC from the deserialized input video and re-inserts in the output video, thereby allowing full control of specialized ANC packets serial data (COM 1) interface where Mode is special insertions in HANC	Ancillary Data Process ADP Routing IP Port Setup Option 🔁	sing	de-embed video strea within the	ding and embede am. Data can be device (Bridge m to and from exter	C/HANC ancillary data ding to and from program extracted and inserted node), or inserted and/or nal interfaces via serial or II
program video SDI stream. Mode controls select the type of ANC processing: - Pridge extracts ANC from the descrilated input video and re-inserts in the output video, thereby allowing full control of specialized ANC packets in the output video. And re-inserts in the output video. And re-inse	Path 2. Only the Path 1 con • Bridge mode ANC extract/ir	ntrols are showi	n here. Set control:	s for other path using	the other tab.
processing:	s ,	ors (ADPs) prov	ide for insertion, ex	traction, or bridging a	ncillary data to and from the card
ADP Proc 8 Disabled Disabled Disabled Disabled In the example above, ADP Proc 1 is set to extract ATC timecode at DID60 _h / SDID 60 _h . Depending on the interface used to carry the extraction (COM or IP), status is displayed as shown below. Extracting 15.0 Kbit/s, dropped 0.0 Kbit When set to extract to COM interface, displays rate and dropped data (if any)	Bridge extracts ANC from the deserialized input video and re-inserts in the output video, thereby allowing full control of specialized ANC packets Insert and Extract modes respectively allow insertion to the output stream or extraction from the input stream between external interfaces Mode Interface Insert and Extract Mode Active and Sending Packets	serial data (COM set to insertion or Note: COM1 is au only; all other ADF import/export inse DID and SD desired pact the correspon Processor	1) interface where Mod extraction vailable for ADP Proc 1 Ps use IP only for exter ertion/extraction. ID controls select the ket to be handled by onding ANC Data	e is nal Line Number controls the VANC location of p insertion/extraction	special insertions in HANC or the C-channel, as well as removal of incoming packet select acket
IP), status is displayed as shown below. Extracting 15.0 Kbit/s, dropped 0.0 Kbit When set to extract to COM interface, displays rate and dropped data (if any)	ADP Proc 8 Disabled V IP V				
	IP), status is displayed as shown below. Extracting 15.0 Kbit/s, dropped 0.0 Kbit Whe	n set to extract to C	COM interface, displays	s rate and dropped data (if any)


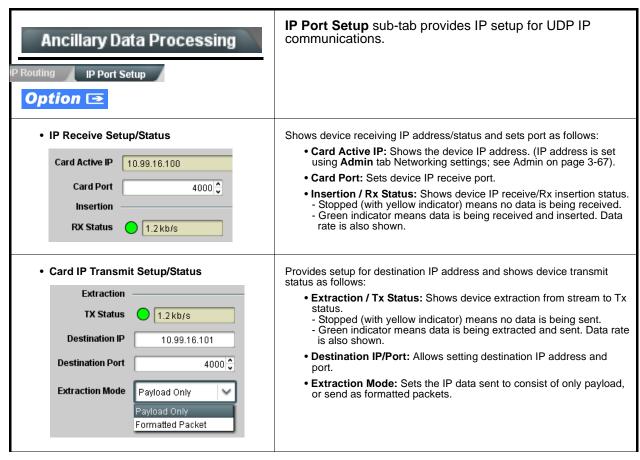


Table 3-2 BBG-1002-UDX-FS Function Menu List — continued



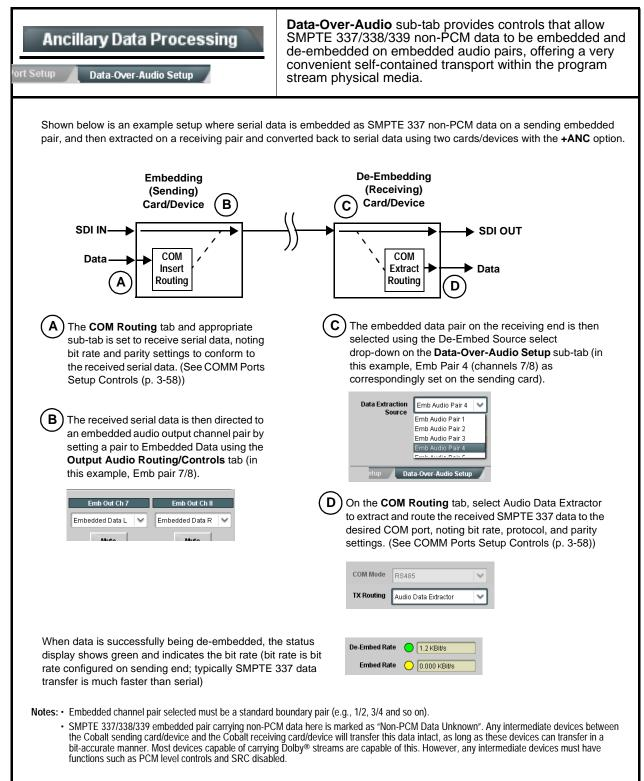

3-2 BBG-1002-UDX-FS Function Menu Lis	t — continued
COM Routing	Provides controls for setting up the two COMM (seria ports for LTC or ANC functions, and setting comm protocol for each port.
Note: • COM 1 and COM 2 sub-tabs provide inde are described here.	pendent controls for COM1 and COM2. Therefore, only the COM 1 controls
	led setup of serial communications. Control settings must be carefully espond to both sending and receiving systems. Incorrectly set controls m
	rfaces and must be set for ANC Data Extractor for port(s) is to be used he M Routing in COMM Ports Setup Controls (p. 3-58).
• COM Mode (Protocol)	Selects serial comm protocol for the respective port as RS-232 or RS-485.
COM 1 Mode RS232 RS232 RS485	Note: Protocol choices should consider the payload to be carried Typically, LTC is sent or received using only RS-485 serial protocol.
COM Port Tx Routing Function TX Routing LTC Encoder LTC Encoder Anc Data Extractor Audio Data Extractor	Selects port function for the respective port as LTC Encoder input output, or ANC Data Extractor / Audio (SMPTE 337) non-PCM in or output.
Rx/Tx Status Display RX Status No data received TX Status 15.0 Kbit/s	Shows either no data received/sent, or where transfer is present show data rate (in kbit/sec).
Insertion Mode Control Insertion Mode Insert Any Data Received Insert Any Data Received Fixed Length Packet Break-Defined Packet Insertion Fixed Packet Size 64	 Where data is being inserted (received), sets the insertion as follows: Insert Any Data Received: Insert all received data with no rega for packet size. Fixed Length Packet: Sets receive to wait and accumulate <i>n</i>-number of packet bytes (as set using Insertion Fixed Packet Size control) before inserting data. Break-Defined Packet: Device receiver looks for character-defined break from source being received to define breaks.
Insertion Flow Control	Allows communication between device receive and sending source to regulate data receive as follows: • No Flow Control: Data is received without buffering or checking
Insertion Flow Control No Flow	 See if data is being received faster than it can be inserted. XON / XOFF: The device UART Tx will tell the sending source whether it can or cannot accept data at current bit rate. Hold Break: Device, if close to not being able to accept new data tells the sending source to hold, and releases this hold when the device is again able to accept new data.

Та

Table 3-2 BBG-1002-UDX-FS Function Menu List — continu
--

COM Routing COM 1 Setup COM 2 Setup	(continued)
• Insertion Sync Byte Control Insertion Sync Byte Disabled Disabled Field Number at SOF Ack on Insertion	 Allows use of a sync byte from receiver back to sending source to synchronize communication between device receive and sending source as follows: Disabled: No special synchronization. Field Number at SOF: The device sends a single byte telling sending source when start of field 1 or field 2 is occurring. Ack on Insertion: Device sends a single byte back to sending source when data has been inserted.
Extraction Mode Control Extraction Mode Payload Only Payload Only Full Anc Data Packet	 Where data is being extracted from input video, sets the data to be sent as follows: Payload Only: Sends payload only (for example, for closed captioning this would be only the ASCII character string representing the CC content). Full Anc Data Packet: Sends the entire packet, including payload, DID, SDID, and any handling or marking characters.
• Extraction Flow Control Extraction Flow Control No Flow Control No Flow Control XON/XOFF Hold Break	 Allows communication between device transmit and receiving destinations to regulate data receive as follows: No Flow Control: Data is transmitted without buffering or checking to see if data is being transmitted faster than it can be received. XON / XOFF: The device UART Rx will acknowledge from the receiving system whether it can or cannot accept data at current bit rate. Hold Break: Device, if receiving notification from the receiving system that it is close to not being able to accept new data, tells the device to hold. Device releases this hold when the receiving system removes the break command, indicating destination is now ready again to accept new data.
Bit Rate/ Parity Gen Control Bit Rate 115200 Parity Disabled Disabled Odd Even	 For both Rx and Tx, sets UART for bit rate and parity as follows: Bit Rate: Sets Tx/Rx bit rate from 1 of 5 speeds ranging from 9600 to 230400 Baud. Parity: Sets Device Rx to expect odd or even parity from incoming data, and sets device Tx to generate a parity bit to satisfy selected parity. Where parity is set, incoming data not conforming to parity selection is rejected.



Presets

Preset Enter/Save/Delete

Preset Name: New Preset Name

Protected

Save

Presets Controls

Save/Delete

New/Updated

Save Preset

Protected state -

changes locked out

Allows user control settings to be saved in a Preset and then loaded (recalled) as desired, and provides a one-button restore of factory default settings.

Preset Layer Select

Allows selecting a functional layer (or "area of concern") that the preset is concerned with. Limiting presets to a layer or area of concern allows for highly specific presets, and masks changing card settings in areas outside of the layer or area of concern.

Default All setting will "look" at all card settings and save all settings to the defined preset with no masking.

	All	In Audio Routing	Input Video	Video Proc	Framesync
Layers					
	Ali	In Audio Routing	Input Video	Video Proc	Framesync
		In Audio Routing	Input Video	Video Proc	Framesync

Protect

IRD Rov122

Save

Ready (open) state -

changes can be applied

Selecting a layer (in the example, "In Audio Routing") will set the preset to **only** "look at" and "touch" audio routing settings and save these settings under the preset. When the preset is loaded (recalled), the card will only "touch" the audio routing layer.

Example: Since EAS audio routing can be considered independent of video proc settings, if normal audio routing was set up with a particular

video proc setting in effect, and at a later time EAS audio routing is desired to be saved and invoked as a preset, selecting In Audio Routing here tells the preset save and load to not concern itself with video proc settings. In this manner, any video proc settings in effect when the EAS preset is invoked will not affect any video proc settings that might be currently in effect.

Locks and unlocks editing of presets to prevent accidental overwrite as follows:

- Protect (ready): This state awaits Protected and allows preset Save/ Delete button to save or delete current device settings to the selected preset. Use this setting when writing or editing a preset.
- Protected: Toggle to this setting to lock down all presets from being inadvertently re-saved or deleted. Use this setting when all presets are as intended.
- Create New Preset: Field for entering user-defined name for the preset being saved (in this example, "IRD Rcv122").
- Save: Saves the current device settings under the preset name defined above.

Table 3-2	BBG-1002-UDX-FS Function Menu List — continued

Presets		(continued)
Preset Save/Load Content	ontrols	
Load/Delete Existing Preset		• Select Preset: drop-down allows a preset saved above to be selected to be loaded or deleted (in this example, custom preset "IRD Rcv122").
Select Preset: Load Selected Preset	IRD Rcv122	 Load Selected Preset button allows loading (engaging) the selected preset. When this button is pressed, the changes called out in the preset are immediately applied.
Update Selected Preset	Confirm	Note: Controls below that modify or delete presets are grayed-out (inactive) when Save/Delete button is in Protected mode. To use these controls, make certain Protected is not enabled.
Rename Selected Preset	Confirm	• Update - Rename - Delete Selected Preset buttons allow selected preset to be updated (take in current custom settings), be renamed, or be deleted. A Confirm prompt appears in all cases.
Delete Selected Preset Delete All Presets	Confirm	• Delete All Presets button allows a delete of all stored presets. (This is useful if all presets are to be replaced by a new Presets .bin file.)
Load Factory Defaults	Confirm	 Load Factory Defaults button allows loading (recalling) the factory default preset. When this button is pressed, the changes called out in the preset are immediately applied.
Download Presets	StoredPresets.bin Save	Note: Load Factory Defaults functions with no masking. The Preset Layer Select controls have no effect on this control and will reset all layers to factory default.
		• Download Presets saving the preset files to a folder on the connected computer.
Upload Options		Upload Options checkboxes function as follows:
Delete All Presets on Upload		• Delete All Presets on Upload clears all stored presets, and then replaces or adds any presets as defined in the uploaded Presets .bin file. (This is useful to establish a "clean slate" and
Delete Duplicate Presets on Upload		 remove any presets that may no longer be desired.) Delete Duplicate Presets on Upload clears stored presets
Load Saved Settings on Preset Upload		bearing the same name as currently stored presets. (This avoids dual iterations of same preset name (plain and duplicate using "*" marking), and avoids possibility of "stale" presets no longer desired from appearing as a choice.)
		 Load Saved Settings on Preset Upload makes certain any local card settings card state is retained following a preset upload. When checked, a preset within the upload is invoked only when specifically selected and invoked.
		Note: Any combination of checkboxes can be checked or unchecked (enabled or disabled) as desired.



3

Presets	(continued)
Download (save) card presets to a network computer by clicking Download Presets – Save at the bottom of the Presets page. Download Presets StoredPresets.bin Sav	Upload (open) card presets from a network computer by clicking Upload at the bottom of DashBoard.
Browse to a desired save location (in this example, My Documents/Cobalt Presets). The file can then be renamed if desired (RCVR21 Presets in this example) before committing the save.	Browse to the location where the file was saved where the file was saved where the file was saved or uploaded separately. Image: Select the desired file and click Open to load the file to the card. Image: Select the file to the card. Image: Select the desired file and click Open to load the file to the card. Image: Select the desired file and click Open to load the file to the card. Image: Select the desired file and click Open to load the file to the card. Image: Select the desired file to the card. Image: Select t
GPO Setup	Provides controls for setting up the two GPO's power-up states as well as forced manual or event action triggered.
Note: This tab has identical independent controls	for GPO 1 and 2. Therefore, only the GPO 1 controls are described here.
GPO1 Current State Closed GPO1 Power-on State Open Open Closed	 Current State indicates GPO status regardless of any pre-setup. Power-on State allows the power-up GPO state to be set (initialized) upon power-up
GPO1 Control Mode Follow Event Actions Follow Event Actions Force Open Force Closed	 Control Mode allows GPO manual asserted open or closed states, or hands over control to Event Action triggering.

Table 3-2 BBG-1002-UDX-FS Function Menu List — continued

Event Trig	ent Set	t up Email Alert	s		to be auto signal sta	omatically tus. Action	engage Is can b	d upon va be "canne	ng a defined a arious receive d" control to a user pre	ed
	rocessing . oading bu Because ev	changes if r utton is set to vent based p	not properly us o Disabled . preset loading	sed. If I can a	and can result in event based pres	sets are not to ges by invok	o be useo ng prese	d, make cer ts, loading	tain the Event B	ased
	nested within a called preset (event-based loading settings performed here cannot be saved to presets, although the settings are persistent across power cycles).						ugh the			
	each scre	ened criteria			a, and in turn prove set as "Don't Ca					
• The Event-	Based Lo	ading butto	n serves as a	maste	er enable/disable	for the function	on.			
					anned" (hard-code Alerts (p. 3-66) fo				ers or routing ch	anges),
to 32 separa	ate events cted on th	can be defin e Alarms pa	ned. In addition	n to ev	reen for any or se vents screened for tup Controls (p. 3-	and triggere	d here, ea	ach Event c	an be set to trigg	jer from
screening is action taken	• Event 1 thru Event 32 are arranged with Event 1 having the highest priority, descending down to Event 32. Where multiple event screening is enabled, lower-priority events are serviced first, with the highest-priority event being the final event serviced and last action taken as well as last item logged in the Event History (see below). This helps ensure that a lower-priority event does not mask detection of higher-priority event(s).					and last				
• The Status	indicator a	and message	e shows the a	ctivati	on status of each	Event. Greer	indicato	r means eve	ent is currently e	ngaged.
		0			e present only whe					00
column appe					o procont only this				okampio, video	Quality
		·	,							
		E								
		Event Defi Each event Care, all de	can be unique	ely set ons wil	t up for any of the o Il need to be true i	condition type n order for th	s in these e Event t	e columns. l o be consic	Jnless set to Dor lered active	ı't
			\backslash							
										_
	Status	Acquired Video I	format GF	Ы	Video Quality	Audio Events	ANC Da	ta User Sta	tes Event Action:	
Event 1 Last	t Active Event	Don't Care	✓ Don't Ca	re 🗸	Input A Event Engaged 🛛 🗸	Don't Care	Don't Care	V Don't Care	💙 🛛 go to B	~
Event 2 🔴 Con	dition Not Met	Don't Care	V Don't Ca	ire 🗸 (Input A Event Disengaged 🛛 🗸	Don't Care	Don't Care	🗸 🖌 Don't Care	🗸 🗸 normal path A	\sim
•										
•										_
Event 32 🔵 Con	ndition Not Met	Don't Care	✓ Dont Ca	ire 🖌	Don't Care 🗸 🗸	Don't Care	Don't Care	V Don't Care	V no-cc-msg	~
is not j	propagate	d unless all	specified crite	eria are	ND function. When e true. To indepen t row. Examples c	dently screer	for multi	ple criteria,	rows should be	
Event History		Time	Event Number		Event Action		Listen		any trianarad	
	19:22:39 0		2		O 1 Close		roups of		any triggered ecent events	
	19:22:39 0		4		O 2 Close				Event 2 as the selected action c	of
	19:22:17 0		2		O 1 Close	GPO 1 Clo	se.			*1
	19:22:17 0	2/05/15	4	GP	O 2 Close	Pressing th updates th		Event Refi	esh button	
Card Time	19:25:43 02	1/05/15								
	Force Eve	ent Refresh								
-										

BBG-1002-UDX-FS Function Menu List — continued Table 3-2

Event Setup	Alerts	(continued)		
In the example here for Event 1, status can be used here (Video C Action selector, go-to action of " use an alternate input source). Conversely, to go back to the or Disengaged" and in turn invoke	Quality set to "Input A I go to B" can be invok riginal source, an ever	Event Engaged" indicating (ed (which in this example nt could be set up with Vio	g black or frozen video dete e is a user preset that chan deo Quality here looking for	cted). Using the Event ges device routing to r "Input A Event
"normal path A"). Video Quality Events Event Status Frozen video det				
	Video Quality	Audio Events	ANC Data	Event Action:
Event Type Black or Frozen 🗸	Input A Event Engaged	Don't Care		y go to B
burned D	Input A Event Disengaged			normal path A
Input A Input B		Dontoare	Dunt Care	- Inormar patit A
independently detected and acted different actions can be taken as In this example, frozen video cal event. Both Events 1 and 3 have	s selected). Is a preset using an in e corresponding go-to	put video routing change, actions to resume norma	while loss of closed caption al operation when the even	ning invokes a GPO
		Andia Drawta	ANC Data	Example 8 editors
	Video Quality	Audio Events	ANC Data	Event Action:
Event 1 Last Active Event	Input A Event Engaged	♥ Dont Care ♥	Don't Care	go to B
Event 1 Cast Active Event Event 2 Condition Not Met	Input A Event Engaged	Don't Care	Dont Care Dont Care	go to B
Event 1 Cast Active Event Event 2 Condition Not Met	Input A Event Engaged Input A Event Disengaged Don't Care	♥ Dont Care ♥	Dont Care Dont Care	go to B normal path A GPO 1 Close
Event 1 Condition Not Met Event 2 Condition Not Met Event 3 Condition Not Met Event 4 Condition Not Met Event 4 Condition Not Met Note: • Screened conditions are triggering event in orde • If a desired user preset at the bottom of the pag • Loss of true conditions	Input A Event Engaged Input A Event Disengaged Don't Care Don't Care e triggered upon star r for event to be dete does not appear in t ge to update the list does not disengage	 Dont Care Dont Care Dont Care Dont Care Dont Care Dont Care In the drop-down. an event-based triggeri 	Dont Care Dont Care Closed Caption Absence Event Closed Caption Presence Event ased setup must be done own, press the DashBoar ng. A new set of true con	go to B normal path A GPO 1 Close GPO 1 Open in advance of the d Refresh button
Event 1 Condition Not Met Event 2 Condition Not Met Event 3 Condition Not Met Event 4 Condition Not Met Event 4 Condition Not Met Note: • Screened conditions are triggering event in orde • If a desired user preset at the bottom of the pag • Loss of true conditions defined and then occur • Time required to engag	Input A Event Engaged Input A Event Disengaged Don't Care Don't Care e triggered upon star r for event to be dete does not appear in t ge to update the list does not disengage to transition from on e an event-based trig	 Dont Care In the drop-down. an event-based trigger to an event-based trigger to gger depends upon com 	Dont Care Dont Care Closed Caption Absence Event Closed Caption Presence Event esed setup must be done own, press the DashBoar ng. A new set of true con p another.	go to B normal path A GPO 1 Close GPO 1 Open in advance of the d Refresh button ditions must be et. (For example,
Event 1 Condition Not Met Event 2 Condition Not Met Event 3 Condition Not Met Event 4 Condition Not Met Event 4 Condition Not Met Event 4 Condition Not Met Striggering event in orde If a desired user preset at the bottom of the pag Loss of true conditions defined and then occur Time required to engag a preset that invokes a change.) Make certain all definab Event 1 thru Event 32 r particular event occurs.	Input A Event Engaged Input A Event Disengaged Dont Care Dont Care Dont Care does not appear in t does not appear in t does not disengage to transition from on e an event-based trig video change will tal ble event conditions t ows. This makes cer . For example, if the ke certain both of the	Dont Care Dont Care Cont Care Dont Care Dont Care Cont Care Cont Care Dont Care Cont Care Cont Care Dont Care Cont C	Dont Care Dont Care Closed Caption Absence Event Closed Caption Presence Event used setup must be done pown, press the DashBoar ng. A new set of true con p another. nplexity of the called pres n a preset involving only	go to B normal path A GPO 1 Close GPO 1 Open in advance of the d Refresh button ditions must be et. (For example, an audio routing fined in any of the go-to" action if a or as an alternate,
 Event 1 Condition Not Met Event 2 Condition Not Met Event 3 Condition Not Met Event 4 Condition Not Met Event 4 Condition Not Met If a desired user preset at the bottom of the page Loss of true conditions defined and then occur Time required to engag a preset that invokes a change.) Make certain all definab Event 1 thru Event 32 r particular event occurs. a 525i5994 stream, mai two of the Event 1 thru Event Actions defined user or over should be used such the 	Input A Event Engaged Input A Event Disengaged Dont Care Dont Care Dont Care triggered upon star of event to be deter does not appear in t does not disengage to transition from on e an event-based trig video change will tal oble event conditions t ows. This makes cer . For example, if the ke certain both of the Event 32 condition c sing user presets muride" of desired expe- iat only required aspon	Dont Care Dont Care Cont Care Dont Care Dont Care Cont Care Cont Care Dont Care Cont Cont Cont Care Cont Cont Cont Cont Cont Cont Cont Cont	Dont Care Dont Care Closed Caption Absence Event Closed Caption Presence Event ased setup must be done own, press the DashBoar ng. A new set of true con o another. aplexity of the called press n a preset involving only expected to "see" are def always have a defined "g ee" a 720p5994 stream o ed (with your desired go- prevent conditions that co ng presets, the Preset La	go to B normal path A GPO 1 Close GPO 1 Open in advance of the d Refresh button ditions must be et. (For example, an audio routing fined in any of the go-to" action if a or as an alternate, to presets) in any uld cause looping ayer selection
Event 1 Image: Last Active Event Event 2 Condition Not Met Event 3 Condition Not Met Event 4 Condition Not Met If a desired user preset at the bottom of the page Loss of true conditions defined and then occur • Loss of true conditions defined and then occur Time required to engag a preset that invokes a change.) • Make certain all definable Event 1 thru Event 32 r particular event occurs. a 525i5994 stream, mat two of the Event 1 thru • Event Actions defined u or the removal or "overn should be used such th • Where multiple event schigher priority than less	Input A Event Engaged Input A Event Disengaged Dont Care Dont Care Dont Care triggered upon star for event to be deter does not appear in t ge to update the list i does not disengage to transition from on e an event-based trig video change will tal ole event conditions t for example, if the ke certain both of the Event 32 condition c sing user presets mu ride" of desired expe at only required aspon creening is set up, th ser events (as shown oritization helps ensu	Dont Care Dont C	Dont Care Dont Care Closed Caption Absence Event Closed Caption Presence Event ased setup must be done own, press the DashBoar ng. A new set of true con o another. aplexity of the called press n a preset involving only expected to "see" are def always have a defined "g ee" a 720p5994 stream o ed (with your desired go- prevent conditions that co ng presets, the Preset La	go to B normal path A GPO 1 Close GPO 1 Open in advance of the d Refresh button ditions must be et. (For example, an audio routing fined in any of the go-to" action if a or as an alternate, to presets) in any uld cause looping ayer selection hould be set as ening trumps CC



E	Event Set	UP Email Alerts	1		continued)	
is first tr user sta true. In the e supplies respecti coincidi	riggered. A user sta ates, thereby allow example here, two i s automated alert a ive GPI 1 and GPI ing triggers, a chai	ate (which is lato ing a final action ndependent uni audio). Both con 2 on the device n of user state d	to be in to be in ts are un munica . Becau lefiners	til cleared by nvoked only w used for an EA ate their read use these two are used her	some other definable act hen subordinate user sta AS alert input (one box si y signal each using edge boxes are independent	or latch) whenever a defined condition on) can be sucessively used with other tes have been sequentially satisfied as upplies alert key video, and the other trigger GPO's which are fed to the and cannot be relied upon to provide ting key video and EAS audio routing cond for this example.
		AS Keyer Box > AS Audio Box >		GPI 1	G-1002-UDX-FS	
				Clear Use	State 1 or 2	
	GPI 1 GPI 2	Set User State	' 	Clear User	State 1 or 2	
≟vent Setup	GPI 2		۱ <u>۱</u> ۱	Clear User	State 1 or 2	
≘vent Setup Event 1	GPI 2	et User State 2	<u>}</u>		 	 ✓ GPI 1 (key) cue falling-edge sets user state 1
	GPI 2 Status	et User State 2	\$ <u>}</u> 	User States	Event Action:	GPI 1 (key) cue falling-edge sets user state 1 GPI 2 (audio) cue falling-edge sets user state 2
Event 1	GPI 2 Status Condition Met	GPI GPI GPI Open->Closed	<u>}</u> 	User States	Event Action:	GPI 2 (audio) cue falling-edge sets user state 2 User state 2 (which requires user state 1 being true
Event 1 Event 2	GPI 2 Status Condition Met Condition Met	et User State 2 '		User States Don't Care Jaer State 1 Set	Event Action: Set User State 1 Set User State 2	GPI 2 (audio) cue falling-edge sets user state 2
Event 2 Event 3	GPI 2 Status Condition Met Condition Met Condition Met	GPI GPI Open->Closed GPI 2 Open->Closed Don't Care		User States User State 1 Ser State 1 Set User State 2 Set User State 3 Set	Event Action:	 GPI 2 (audio) cue falling-edge sets user state 2 User state 2 (which requires user state 1 being true first) sets state 3, which then invokes a preset to loar settings to route EAS key and audio
Event 1 Event 2 Event 3 Event 4	GPI 2 Status Condition Met Condition Met Condition Met Last Active Event	GPI GPI 1 Open->Closed GPI 2 Open->Closed Dont Care Dont Care		User States Don't Care Jser State 1 Set Jser State 2 Set Jser State 3 Set Jser State 1 Cleared	Event Action: Set User State 1 Set User State 2 Set User State 3 Preset Load: EAS Key+Audio Preset Load: Revert to Normal	 GPI 2 (audio) cue falling-edge sets user state 2 User state 2 (which requires user state 1 being true first) sets state 3, which then invokes a preset to load settings to route EAS key and audio When either GPI 1 or GPI 2 has a rising-edge trigge (cease EAS), user states 1 or 2 are cleared, thereb
Event 1 Event 2 Event 3 Event 4 Event 5	GPI 2 Status Condition Met Condition Met Condition Met Last Active Event Condition Not Met	GPI GPI GPI 1 Open->Closed GPI 2 Open->Closed Dont Care Dont Care Dont Care		User States User State 1 Ser State 1 Set State 2 Set User State 3 Set	Event Action: Set User State 1 Set User State 2 Set User State 3 Preset Load: EAS Key+Audio Preset Load: Revert to Normal	 GPI 2 (audio) cue falling-edge sets user state 2 User state 2 (which requires user state 1 being true first) sets state 3, which then invokes a preset to loa settings to route EAS key and audio When either GPI 1 or GPI 2 has a rising-edge trigge (cease EAS), user states 1 or 2 are cleared, thereb

Table 3-2	BBG-1002-UDX-FS Function Menu List — continued

Reset Value (seconds)	Event Timer 1 Reset/Start of automated of	Provides three general-purpose timers that can be triggered to start, pause, reset, or stop upon event actions. The state of each timer, in turn, can also be used to invoke other actions. s 1 thru 3 (Timer 1 shown) can be set with count-down values. The Pause/ ontrol here are manual controls. The timers are typically used with uses to start and stop the timer(s), as shown below.
the logo, along with the logo, along with the logo between the logo betwee	GPI I 1 Open->Closed	• • •
Event S		Provides setup for automated Email alerts when an event has occurred.
shown in the exar Note: Network ho	mple below.	b-tab, an Email alert can be sent as a response. Set up email fields as
Last Event:	Frozen video detected	When fields are filled-in to specify recipient and sender, and email alert is selected for Event Action on Event Triggers
To:	joe.doe@xyzmedia.com	sub-tab page, recipeient receives an email alert upon event, with the triggering event shown (in this example, "frozen
From:	9902slot8frame1A21@xyzmedia.com	video detected").
SMTP User:	frame1A21	
SMTP Password:	•••••	
SMTP Server:	smtp.gmail.com	
SMTP Port:	25	~

Admin	Provides a global operating status and allows a log download for factory engineering support.
	Also provides controls for selecting and loading firmware upgrade files, and for setting the comm IP address.
Log Status and Download Controls	Log Status indicates overall internal operating status.
Log Status Card OK Download Log File 9902-UDX tar.gz Save	• Download Log File allows a operational log file to be saved to a host computer. This log file can be useful in case of an error or in the case of an operational error or condition. The file can be submitted to Cobalt engineering for further analysis.
Delete Log File Confirm	 Delete Log File deletes the currently displayed log file. A second confirmation dialog is displayed to back out of the delete if desired.
	 Thermal Shutdown enable/disable allows the built-in thermal failover to be defeated. (Thermal shutdown is enabled by default).
Thermal Shutdown Disable	CAUTION
	The BBG-1002-UDX-FS FPGA is designed for a normal-range operating temperature around 85° C core temperature. Operation in severe conditions exceeding this limit for non-sustained usage are within device operating safe parameters, and can be allowed by setting this control to Disable. However, the disable (override) setting should be avoided under normal conditions to ensure maximum device protection.
Card Check and Restore Utilities	Memory Test allows all cells of the card FPGA memory to be tested.
Memory Test FPGA Memory Test Test	This control should only be activated under direction of product support. Exercising the memory test is not part of normal device maintenance.
Memory Test Status Running Memory Test: 8.99% Memory Test Status Memory test completed successfully, please reboot the card	Restore from SD Card allows card rendered inoperable to be restored using an SD memory card fitted to the card internal SD slot.
Restore From SD Card Confirm Please contact support	Product support must be contacted prior to performing this operation. Use of any SD card not supplied by support can corrupt the device.
NTP Clock Setup	Allows device NTP clock IP source and localization. This is the clock/time
Clock Setup	device will use for logs and other recorded actions.
NTP IP (use 0.0.0 for pool NTP) 0.0.0.0	 NTP IP sets the IP address where NTP is to be obtained. Local Timezone sets the recorded time to the localized time.
	• NTP Status shows if time is synced with NTP or if an error exists.
Local Timezone (NTP Only) US-Central	
NTP Status Synchronized with NTP	

 Table 3-2
 BBG-1002-UDX-FS Function Menu List — continued

Table 3-2 E	BBG-1002-UDX-FS Function Menu List — continued
-------------	--

Admin	(continued)	
Firmware Upgrade Controls	multiple versions can be invoke an upgrade to a s	ols allow a selected firmware version (where uploaded to the device's internal memory) to elected version either instantly, or set to install t (thereby allowing device upgrade downtime to uled point in time).
	and GUI (p. 3-74) for detai ole firmware versions saved to the device without using	ils and instructions. I on the device. New upgrade firmware from our this page. Instructions for firmware downloading
 Access a firmware upgrade file from a network con bottom of DashBoard. 	nputer by clicking Upload a	at the Refresh Upload Reboot
 Browse to the location of the firmware upgrade file <i>Documents\v1.0.0019.bin</i>). Select the desired file and click Open to upload the 		Open
 Immediate firmware upload. The device default se Reboot After Upgrade checked allow a selected fir immediately uploaded as follows: 	mware version to be	Automatically Reboot After Upgrade 🔽 Firmware To Restore 🔽
 Click Firmware To Load and select the desired upg this example, "v1.0.0019"). Click Load Selected Firmware. The device now re firmware is loaded. 	, ,	v0.9.0010 v0.9.0018 v0.9.0019 v1.0.0000 v1.0.0001 (Currently installed)
• Deferred firmware upload. With Automatically Re unchecked, firmware upgrade loading is held off unt rebooted. This allows scheduling a firmware upgrad when it is convenient to experience to downtime (up 60 seconds).	il the device is manually e downtime event until	Automatically Reboot After Upgrade Firmware To Restore V0.9.0019 (Installs On Next Reboot) V1.0.0010 V1.0.0018
 Click Firmware To Load and select the desired up, this example, "v1.0.0019"). Note now how the displ Next Reboot". 		v1.0.0019 (Installs On Next Reboot) v1.0.0000 v1.0.0001 (Currently Installed)
2. Click Load Selected Firmware. The device holds the device is manually rebooted (by pressing the R		he upload, and performs the upload only when
 To cancel a deferred upload, press Cancel Pendin immediate upload/upgrade. 	g Upgrade. The device rev	verts to the default settings that allow an

Table 3-2	BBG-1002-UDX-FS Function Menu List — continued

Aları	ms	for and propag video, audio, a Conditions and DashBoard tre	ols for setting up con jate input program vio and ancillary data def d alarm status can be e-view frame alarms slog IP-based alarms	deo alarms for ect conditions. e propagated as , downloadable .txt
The Alarms tab has several sub-tabs which allow setting up detection and alarm severity/propagation for input program video alarms for video, audio, and ancillary data defect conditions (as described and shown below)				
Video Alarm Setur Video	p Audio Al Path 1 Audio	larm Setup Anci Path 2 Audi	llary Data Alarm Setup io Al	Logging ncillary Data
<u>/!</u>	generation occurs	ult example settings shown here 3000 msec after event detect. Idoff settings shown here are re ef, nuisance alarms may be get	commended for at least in	itial settings. If holdoff
		Frozen Video Detection	Setup	
Engagement	t Holdoff (minutes) Enga			engagement Holdoff (ms
Engagement SDI Input A	0 🔆		ement Holdoff (minutes) Dis 0 📿	engagement Holdoff (ms 3000
		agement Holdoff (ms) Disengage	ment Holdoff (minutes) Dis	
SDI Input A	0 🗧	agement Holdoff (ms) Disengage	ment Holdoff (minutes) Dis 0 🗘 0 🗘 0 🗘	3000
SDI Input A	0 <> <>	agement Holdoff (ms) Disengage 3000 💝 3000 Ç	ement Holdoff (minutes) Dis 0 0 0	3000 3000
SDI Input A SDI Input B SDI Input C SDI Input D		agement Holdoff (ms) Disengage 3000 3000 3000 3000 Black Video Detection	ment Holdoff (minutes) Dis 0 0 0 0 0 Setup	3000 3000 3000 3000
SDI Input A SDI Input B SDI Input C SDI Input D Engagement	0 0 0 0 0 t Holdoff (minutes) Enga	agement Holdoff (ms) Disengage 3000 3000 3000 3000 Black Video Detection agement Holdoff (ms) Disengage	ment Holdoff (minutes) Dis 0 0 0 0 Setup ment Holdoff (minutes) Dis	3000 3000 3000 3000 3000
SDI Input A SDI Input B SDI Input C SDI Input D Engagement SDI Input A	0 \$ 0 \$ 0 \$ 0 \$ t Holdoff (minutes) Enga	agement Holdoff (ms) Disengage 3000 3000 3000 3000 Black Video Detection agement Holdoff (ms) Disengage 3000	ment Holdoff (minutes) Dis 0 0 0 0 0 0 0 0 0 Setup ment Holdoff (minutes) Dis 0 0	3000 3000 3000 3000 3000 sengagement Holdoff (ms 3000
SDI Input A SDI Input B SDI Input C SDI Input D Engagement SDI Input A SDI Input B	0 \$ 0 \$ 0 \$ 0 \$ 1 Holdoff (minutes) Enga 0 \$ 0 \$ 0 \$ 0 \$ 0 \$ 0 \$ 0 \$ 0 \$	agement Holdoff (ms) Disengage 3000 3000 3000 3000 Black Video Detection agement Holdoff (ms) Disengage 3000	ment Holdoff (minutes) Dis 0 0 0 0 0 0 0 Setup ment Holdoff (minutes) Dis 0 0 0 0 0 0 0 0 0 0 0 0 0	3000 3000 3000 3000 3000 3000 3000
SDI Input A SDI Input B SDI Input C SDI Input D Engagement SDI Input A SDI Input B SDI Input C	0 \$ 0 \$ 0 \$ 0 \$ t Holdoff (minutes) Enga	agement Holdoff (ms) Disengage 3000 3000 3000 3000 Black Video Detection agement Holdoff (ms) Disengage 3000	ment Holdoff (minutes) Dis 0 0 0 0 0 0 Setup ment Holdoff (minutes) Dis 0 0 0 0 0 0 0 0 0 0 0 0	3000 3000 3000 sengagement Holdoff (ms 3000 3000 3000
SDI Input A SDI Input B SDI Input C SDI Input D Engagement SDI Input A SDI Input B	0 \$ 0 \$ 0 \$ 0 \$ 1 Holdoff (minutes) Enga 0 \$ 0 \$ 0 \$ 0 \$ 0 \$ 0 \$ 0 \$ 0 \$	agement Holdoff (ms) Disengage 3000 3000 3000 3000 Black Video Detection agement Holdoff (ms) Disengage 3000	ment Holdoff (minutes) Dis 0 0 0 0 0 0 0 Setup ment Holdoff (minutes) Dis 0 0 0 0 0 0 0 0 0 0 0 0 0	3000 3000 3000 3000 sengagement Holdoff (ms 3000 3000
SDI Input A SDI Input B SDI Input C SDI Input D Engagement SDI Input A SDI Input A SDI Input C SDI Input D	0 \$ 0 \$ 0 \$ 0 \$ t Holdoff (minutes) Enga	agement Holdoff (ms) Disengage 3000 3000 3000 3000 Black Video Detection agement Holdoff (ms) Disengage 3000	ment Holdoff (minutes) Dis 0 0 0 0 0 0 Setup ment Holdoff (minutes) Dis 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	3000 3000 3000 3000 3000 3000 3000 300
SDI Input A SDI Input B SDI Input C SDI Input D Engagement SDI Input A SDI Input B SDI Input C	0 \$ 0 \$ 0 \$ 0 \$ t Holdoff (minutes) Enga	agement Holdoff (ms) Disengage 3000 3000 3000 Black Video Detection agement Holdoff (ms) Disengage 3000	ment Holdoff (minutes) Dis 0 0 0 0 0 0 Setup ment Holdoff (minutes) Dis 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	3000 3000 3000 3000 3000 3000 3000 300

- Levels above the Failover Threshold are considered normal.
- Levels **below** the Failover Threshold (and exceeding the holdoff) are considered below normal.
- **Note:** Audio channels screened are from the device SDI that is selected for the program video/audio path (for example, if SDI A is selected as the input source on the **Input Video** tab, the 16 embedded channels comprising this video/audio input are screened).



0

0

0

5000

Ŷ

Factory default holdoff and threshold settings shown here are recommended for at least initial settings. If holdoff periods are too brief (or threshold set too high), nuisance alarms may be generated during transitions to and from programs and interstitials, as well as during certain content.


Trigger Holdoff (minutes)

Release Holdoff (minutes)

Trigger Holdoff (ms)

Release Holdoff (ms)



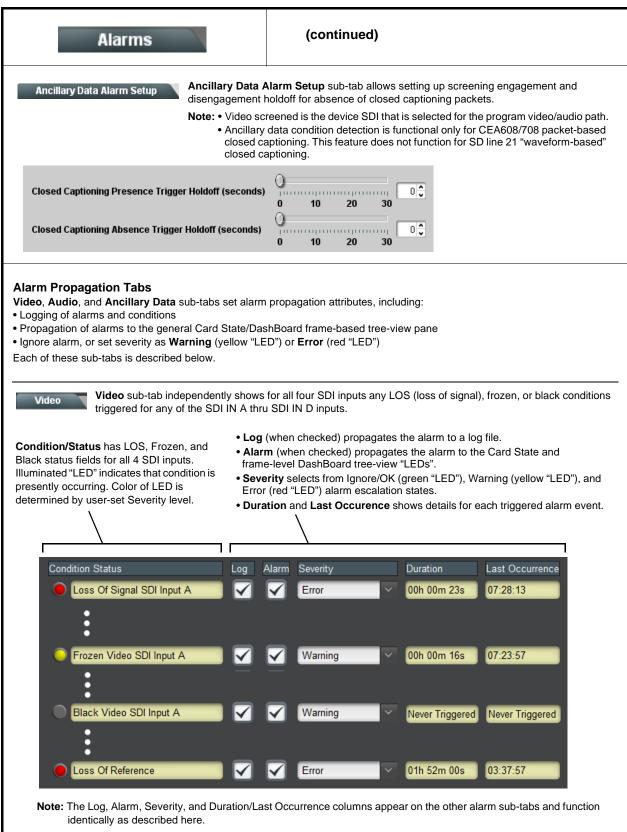


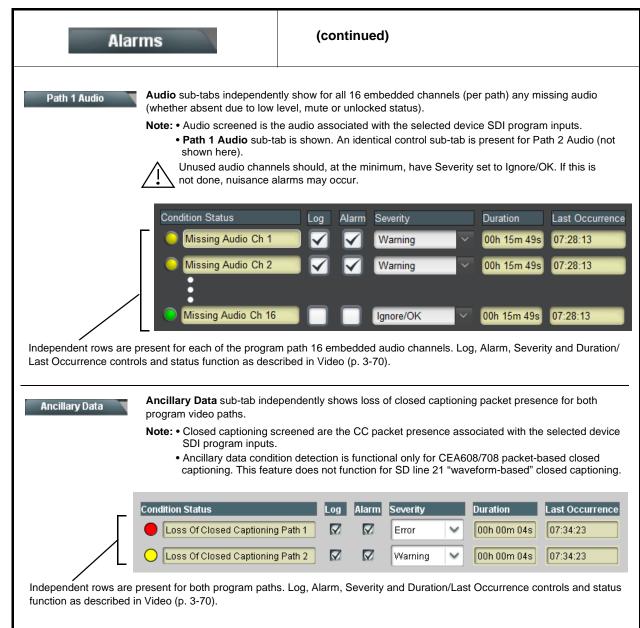


Table 3-2 BBG-1002-UDX-FS Function Menu List — continued





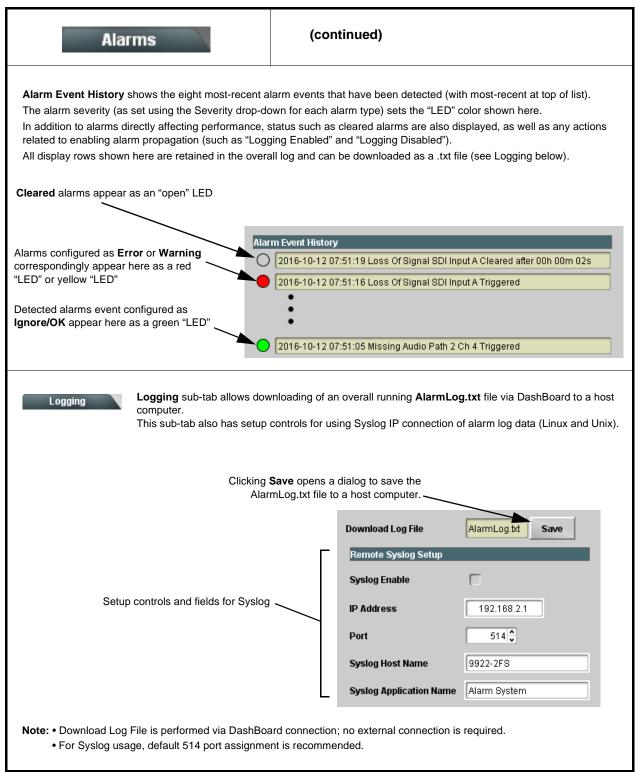

User Log		matically r status.	maintains a	log of	user actions and input
User Log shows input lock and other user conditions (recent event at top of list).	with most		Time 22:40:36 12/02/15 22:40:34 12/02/15 21:17:36 12/02/15	Type Info Info Info	Event SDI Input sdi_in_c Locked to 720p 59.94 SDI Input sdi_in_d Locked to 1080i 59.94 SDI Input sdi_in_b Locked to 1080i 59.94
Clear User Log clears all entries.			21:17:18 12/02/15	Info	Cog file cleared
Download Log File opens a browser allowing the log saved on the host machine.	g file to be	Clear User Log Download Log File	comm	re	

Front Panel User Menus

Some of the mode and parametric controls available using the web UI (as described in BBG-1002-UDX-FS Function Menu List and Descriptions) are available using the front panel display and arrow navigating buttons.

The front panel menus offers a true standalone means to configure the BBG-1002-UDX-FS with no connection to a network required, and is useful where changes need to be done immediately (or in emergency situations) without the benefit of network access. However, the web GUI provides greatly simplified user interfaces as compared to using this menu and the arrow controls. For this reason, it is **strongly recommended** that the web GUI or DashBoard remote control be used for all applications other than the most basic cases.

Uploading Firmware Using Web Interface and GUI

Firmware (such as upgrades, option keys, and presets .bin files) can be uploaded to BBG-1002-UDX-FS directly via the web html5 interface without going through DashBoard (see Figure 3-8). In addition to allowing uploads without needing a DashBoard connection, this method transfers files typically much faster than using DashBoard.

	Clicking Settings opens a pane where the File Upload utility can be accessed
→ C ① Not secure 192.168.1.105	
OBALT BBG-1002-UDX-FS	Connected
Status Product Info put Video No Input struit \$25i 59 94	Input Video Output Video Scaler Framesync Input Audio Status Input Audio Routing/Controls Output Audio Routing/Controls Timecode Video Proc Closed Captioning AFD Ancillary Data Processing Path 1 Ancillary Data Processing Path 2 COM Routing GPO Setup Presets Event Setup Admin User Log Alarms
Settings	With Settings open, click on File Upload . The Browse button can then be used to open a browser, select the desired file, and then upload the file to the device.
ct The File Upload Utility will allow you board. Currently you may upload a license, user graphic, or presets file. the file and process it accordingly.	mware update,
board. Currently you may upload a license, user graphic, or presets file.	mware update,
board. Currently you may upload a license, user graphic, or presets file. the file and process it accordingly.	mware update, he system will analyze

Figure 3-8 Uploads Using Web Interface/GUI

3

Troubleshooting

This section provides general troubleshooting information and specific symptom/corrective action for the BBG-1002-UDX-FS and its remote control interface. The BBG-1002-UDX-FS requires no periodic maintenance in its normal operation; if any error indication (as described in this section) occurs, use this section to correct the condition.

Error and Failure Indicator Overview

The BBG-1002-UDX-FS itself and its remote control systems all (to varying degrees) provide error and failure indications. Depending on how the BBG-1002-UDX-FS is being used (i.e, standalone or network controlled through DashBoardTM or a Remote Control Panel), check all available indications in the event of an error or failure condition.

The various BBG-1002-UDX-FS and remote control error and failure indicators are individually described below.

- **Note:** The descriptions below provide general information for the various status and error indicators. For specific failures, also use the appropriate subsection listed below.
 - Basic Troubleshooting Checks (p. 3-77)
 - BBG-1002-UDX-FS Processing Error Troubleshooting (p. 3-78)
 - Troubleshooting Network/Remote Control Errors (p. 3-79)

BBG-1002-UDX-FS Front Panel Status/Error Indicators and Display

Figure 3-9 shows and describes the BBG-1002-UDX-FS front panel indicators and display. These indicators and the display show status and error conditions relating to the device itself and remote (network) communications (where applicable). Because these indicators are part of the device itself and require no external interface, the indicators are particularly useful in the event of communications problems with external devices such as network remote control devices.

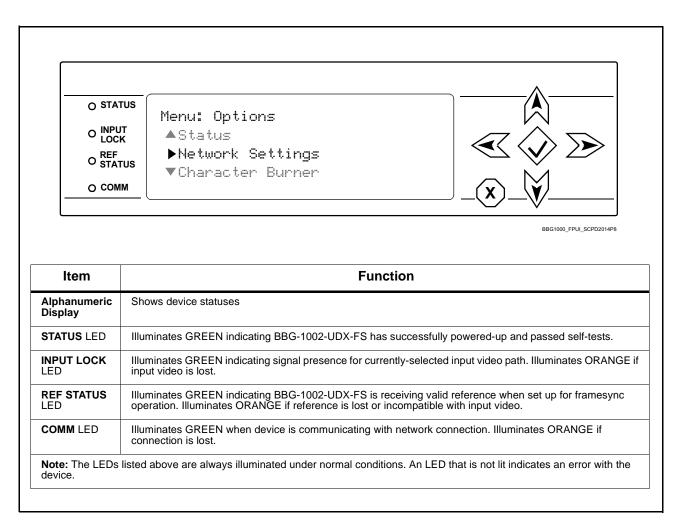


Figure 3-9 BBG-1002-UDX-FS Device Edge Status Indicators and Display

3

Basic Troubleshooting Checks

Failures of a general nature (affecting many cards and/or functions simultaneously), or gross inoperability errors are best addressed first by performing basic checks before proceeding further. Table 3-3 provides basic system checks that typically locate the source of most general problems. If required and applicable, perform further troubleshooting in accordance with the other troubleshooting tables in this section.

Item	Checks
Verify power presence and characteristics	 On the BBG-1002, in all cases when power is being properly supplied all indicators should be illuminated. Any device showing no illuminated indicators should be cause for concern.
	 Check the Power Consumed indication for the BBG-1002X. This can be observed using the Status front-panel or web UI pane.
	 If display shows no power being consumed, the BBG-1002 itself is defective.
	 If display shows excessive power being consumed (see Technical Specifications (p. 1-15) in Chapter 1, "Introduction"), the BBG-1002 may be defective.
Check Cable connection secureness and connecting points	Make certain all cable connections are fully secure (including coaxial cable attachment to cable ferrules on BNC connectors). Also, make certain all connecting points are as intended. Make certain the selected connecting points correlate to the intended device inputs and/or outputs. Cabling mistakes are especially easy to make when working with large I/O modules.
Check status indicators and displays	On BBG-1002-UDX-FS front panel and web interface indicators, red indications signify an error condition. If a status indicator signifies an error, proceed to the following tables in this section for further action.

Table 3-3 Basic Troubleshooting Checks

BBG-1002-UDX-FS Processing Error Troubleshooting

Table 3-4 provides BBG-1002-UDX-FS processing troubleshooting information. If the BBG-1002-UDX-FS exhibits any of the symptoms listed in Table 3-4, follow the troubleshooting instructions provided.

In the majority of cases, most errors are caused by simple errors where the BBG-1002-UDX-FS is not appropriately set for the type of signal being received by the device.

- **Note:** The error indications shown below are typical for the corresponding error conditions listed.
- **Note:** Where errors are displayed on both the BBG-1002-UDX-FS and network remote controls, the respective indicators and displays are individually described in this section.

Symptom	Error/Condition	Corrective Action
BBG-1002 shows Unlocked message in BBG-1002-UDX-FS Info pane.	No video input present	Make certain intended video source is connected to appropriate BBG-1002-UDX-FS video input. Make certain BNC cable connections are OK.
Ancillary data (closed captioning, timecode) not transferred	Control(s) not enabled	Make certain respective control is set to On or Enabled (as appropriate).
through BBG-1002-UDX-FS	VANC line number conflict between two or more ancillary data items	 Make certain each ancillary data item to be passed is assigned a unique line number (see Ancillary Data Line Number Locations and Ranges on page 3-9).
(Option +QC only) Audio silence event not detected or triggered on	Holdoff set too long to detect condition	The Trigger Holdoff controls on the Audio Detect Events tab allow ignoring silence events unless the event duration exceeds the holdoff setting. Make certain holdoff is set sufficiently low to detect events as desired.
Audio not processed or passed	Enable control not turned on	On Output Audio Routing/Controls tab, Audio Group Enable control for group 1 thru 4 must be turned on for sources to be embedded into respective embedded channel groups.
Excessive or nuisance input signal quality events in log or Card State status display	Holdoff periods are too brief (or threshold set too high)	If holdoff periods are too brief (or threshold set too sensitive), nuisance alarms may be generated during transitions to and from programs and interstitials, as well as during certain content.
Selected upgrade firmware will not upload	Automatic reboot after upgrade turned off	Card Presets > Automatically Reboot After Upgrade box unchecked. Either reboot the device manually, or leave this box checked to allow automatic reboot to engage an upgrade upon selecting the upgrade.

Table 3-4 Troubleshooting Processing Errors by Symptom

Symptom	Error/Condition	Corrective Action
SD closed captioning waveform or character rendering is corrupted	Moving box insertions running into line 21	For SD usage, burn-ins can impinge on and corrupt line 21 closed-captioning waveform if positioned too close to the upper right of the raster. Typically, moving box insertions are not intended for content (such as OTA) where CC is required. If CC is present and must be retained, make certain to check CC content if burn-in insertions are enabled and reposition burn-ins to avoid line 21 interference.
Device does not pass video or audio as expected. Control settings spontaneously changed from expected settings.	Event-based preset inadvertently invoked	Event-based preset loading (Presets tab > Event Triggers sub-tab) should be set to Disabled if this function is not to be used. Read and understand this control description before using these controls to make sure engagement for all expected conditions is considered. See Presets (p. 3-60) for more information.
Device will not retain user settings, or setting changes or presets spontaneously invoke.	Event Based Loading sub-tab inadvertently set to trigger on event	If event based loading is not to be used, make certain Event Based Presets is disabled (either using master Enable/Disable control or through events settings. See Presets (p. 3-60) for more information.

Table 3-4 Troubleshooting Processing Errors by Symptom — continued

Troubleshooting Network/Remote Control Errors

Refer to Cobalt[®] reference guide "Remote Control User Guide" (PN 9000RCS-RM) for network/remote control troubleshooting information.

In Case of Problems

Recovering Card From SD Memory Card

New production cards/devices come equipped with an SD card installed in a slot receptacle on the underside of the card. The data on this SD card can be used to restore a card should the card become unresponsive (can't communicate with DashBoard or other remote control). Recovering a card using the procedure here will restore the card to any installed option licenses and the most recent firmware installed.

- 1. (See Figure 3-10.) Make certain the card has the proper SD card installed in the under-card slot. If SD card is **not** installed, contact Product Support to obtain an SD card.
- Note: (Option +TTS only) Cards shipped with option +TTS use an SD card for the TTS library in addition to recovery files. If your +TTS-equipped device was received earlier than December 2015, your SD may not contain the recovery files. Contact Product Support to obtain the updated SD card containing both TTS library and SD recovery files.
 - If unit is a BBG-1000 Series device, remove the top cover before proceeding.

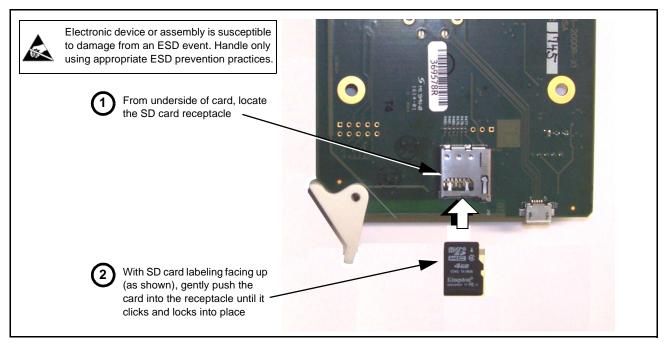


Figure 3-10 SD Card Installation

2. (See Figure 3-11.) With card powered-down, locate the **MMC BOOT** button on the card. Proceed as shown in picture.

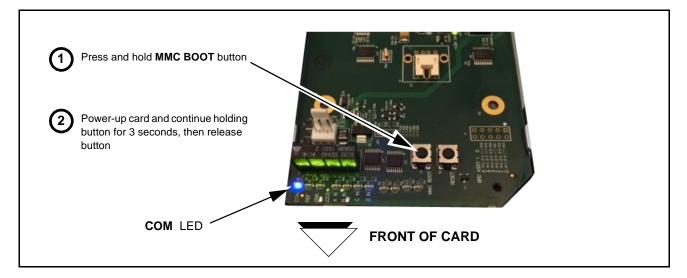


Figure 3-11 MMC Boot Button

- 3. With button now released, the card will begin reprogramming:
 - **COM** LED illuminates and remains illuminated.
 - When reprogram is complete, **COM** LED turns off, on, and then off again (entire process takes about 1-1/2 minute).

- 4. Remove power from the card (remove card from slot or power-down BBG-1000 Series unit).
- **5.** Re-apply power to the card. The card/device will display as *"UNLICENSED"* in DashBoard/remote control.
- 6. In Dashboard or web remote control, go to **Admin** tab and click **Restore from SD Card**. After about 1/2-minute, the card license(s) will be restored and card will be using its most recently installed firmware.
- **7.** Card/device can now be used as normal. On BBG-1000 Series unit, re-install top cover.

Contact and Return Authorization

Should any problem arise with this product that was not solved by the information in this section, please contact the Cobalt Digital Inc. Technical Support Department.

If required, a Return Material Authorization number (RMA) will be issued to you, as well as specific shipping instructions. If required, a temporary replacement item will be made available at a nominal charge. Any shipping costs incurred are the customer's responsibility. All products shipped to you from Cobalt Digital Inc. will be shipped collect.

The Cobalt Digital Inc. Technical Support Department will continue to provide advice on any product manufactured by Cobalt Digital Inc., beyond the warranty period without charge, for the life of the product.

See Contact Cobalt Digital Inc. (p. 1-20) in Chapter 1, "Introduction" for contact information.

This page intentionally blank

Cobalt Digital Inc.



2506 Galen Drive Champaign, IL 61821 Voice 217.344.1243 • Fax 217.344.1245 www.cobaltdigital.com